

STREAMVIEW 

Satellite TV Adapter for Nokia Streaming Box 8000

User Manual

Content

1. Safety & Product Information	3
2. Satellite TV Adapter	3
2.1. Streaming box remote control options	4
2.2. RCU 110	5
2.3. RCU 130	5
3. Initial set-up	5
3.1. Packaging content	5
3.2. Set-up	6
3.3. First installation	8
3.4. Channel Bar	9
3.5. Channel List	9
4. TV Guide	10
5. Installation	11
5.1. Scan	11
5.2. LCN Switch	12
6. Edit Channels	12
6.1. Set Favorite Channel	13
6.2. Lock Channels	13
6.3. Skip Channels	14
6.4. Move Channels	14
7. Option	15
7.1. Audio Track	15
7.2. Subtitle Track	16
7.3. Aspect Mode	16
7.4. Audio Mode	17
7.5. Teletext	17
8. Settings	17
8.1. Language Settings	18
8.2. Time Settings	18
8.3. Security Settings	19
8.4. AV Settings	20
8.5. Other Settings	20
9. Technical Specifications	21
Licenses	21

1. Safety & product information

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty. Please read the instructions before operating the device and keep them for later use. The product needs to be installed in accordance with national regulations.



In case the unit needs to get repaired, please go to the website: nokia.streamview.com/Support/ to contact the After Sales Service.



To prevent the spread of fire, always keep candles or other open flames away. Keep the device away from direct sunlight.



This marking indicates that this product must be properly disposed of throughout the EU in accordance with Directive 2002/96/EC (WEEE) and may not be disposed of with other household waste. Please recycle it responsibly to help with the sustainable reuse of material resources. Please return it to a collection system or contact the retailer where you purchased the product. According to the Battery Act, end users are legally obliged to return old batteries. Please do not throw used batteries to household waste but return them to a collection system for used batteries.

Simplified EU Declaration of Conformity

Hereby, StreamView declares that the radio equipment type product device Terrestrial TV Adapter is complying with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: Nokia.streamview.com/support

2. Satellite TV Adapter


The Satellite TV Adapter for Nokia Streaming Box 8000 upgrades your TV to DVB-S2 reception. Simply connect it to the Nokia Streaming Box 8000 and access free-to-air channels.



2.1. Streaming Box remote control options

2.1.1. RCU 110


To open the main menu in Live TV mode, use the Bookmark button on your Streaming Box remote control. Use one of the four colored buttons on your Streaming Box remote control to follow on-screen instructions.

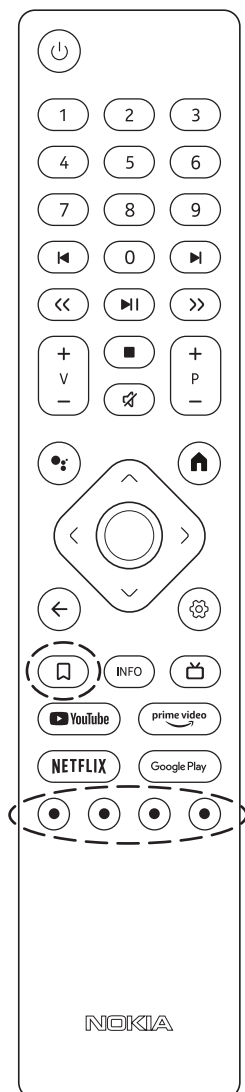

	Standby/Power ON
0-9	To enter numbers in the text box on the screen
	Jumps to previous/next media
	Plays the selected media Pauses the media being played
	Moves frames backward/forward in media
	Stops the media being played
	Mutes the volume
	Volume +/-
	Switches channels in broadcaster TV apps or Smart IPTV apps up/down
	Activates the „Hey Google“ function and the integrated microphone in the remote control
	Opens the Home Screen
	Navigates left/right, up/down OK button: - confirms selections, enters sub-menus - pressing for 5 seconds turns the backlight of the remote OFF/ON
	Goes one step back, returns to previous menu screen
	Opens the Settings menu
	Displays menu functions for Terrestrial TV Adapter in Live TV
INFO	Displays information about on-screen content
	Launches available live TV Internet channels
	Launches YouTube application
	Launches Prime Video application
	Launches Netflix application
	Launches Google Play to find apps
	Functions in various apps: follow on-screen instructions

2.1.2. RCU 130

 To open the main menu in Live TV mode, use the Bookmark button on your Streaming Box remote control.

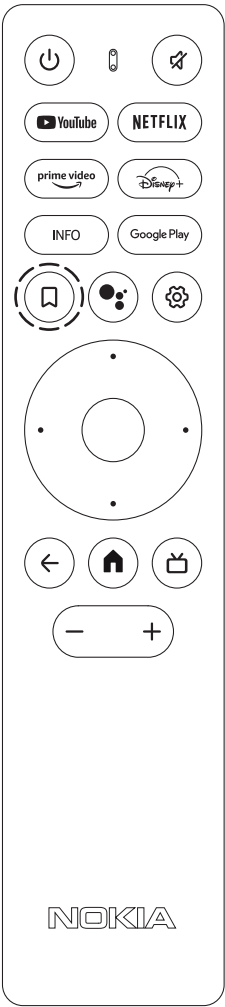




	Standby/Power ON
	Mutes the volume
	Launches YouTube application
	Launches Netflix application
	Launches Prime Video application
	Launches Disney+ application
	Launches Google Play to find apps
	Displays information about on-screen content
	Displays menu functions for Terrestrial TV Adapter in Live TV
	Activates the „Hey Google“ function and the integrated microphone in the remote control
	Opens the Settings menu
	Navigates left/right, up/down OK button: - confirms selections, enters sub-menus - pressing for 5 seconds turns the backlight of the remote OFF/ON
	Goes one step back, returns to previous menu screen
	Opens the Home Screen
	Launches available live TV Internet channels
	Volume +/-

3. Initial set-up

3.1. Packaging content



   3.2. Set-up

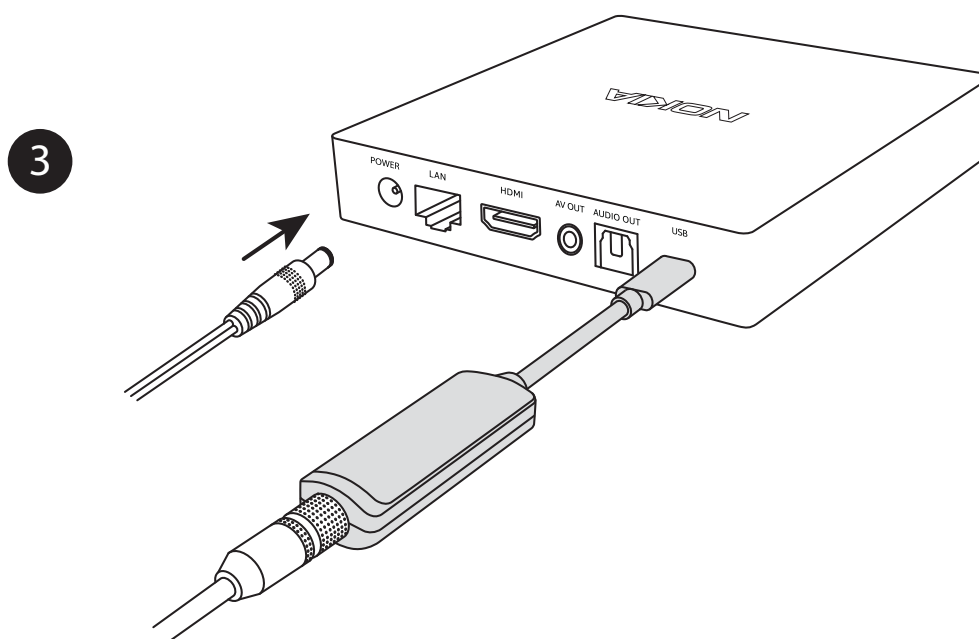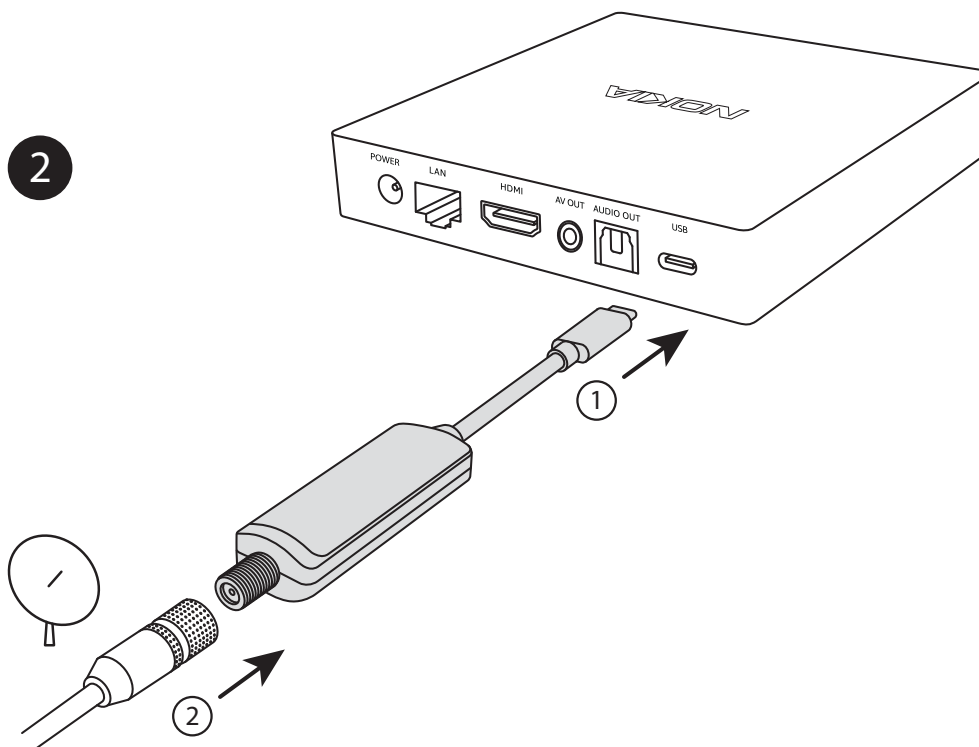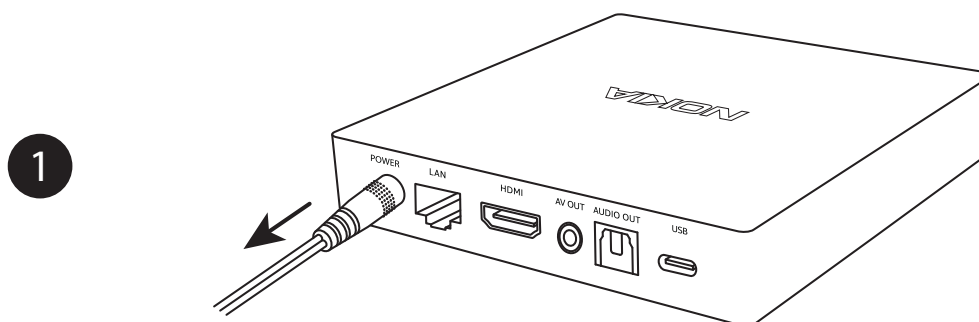


1


Press



 2

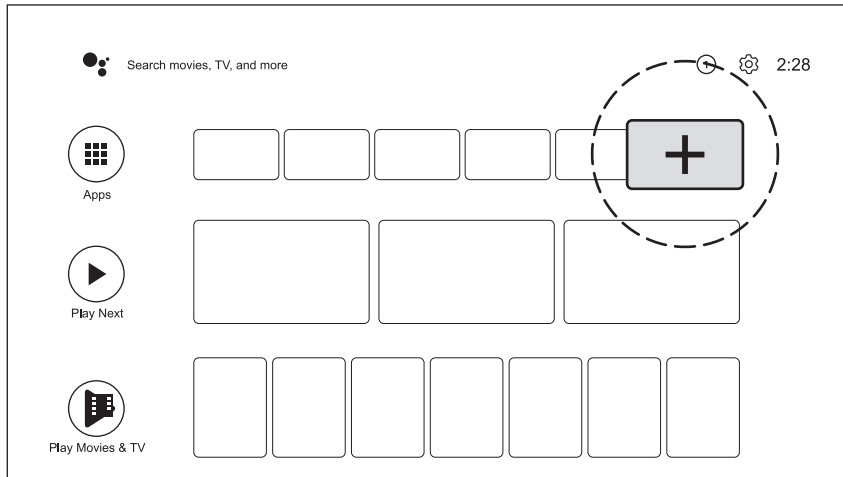

3

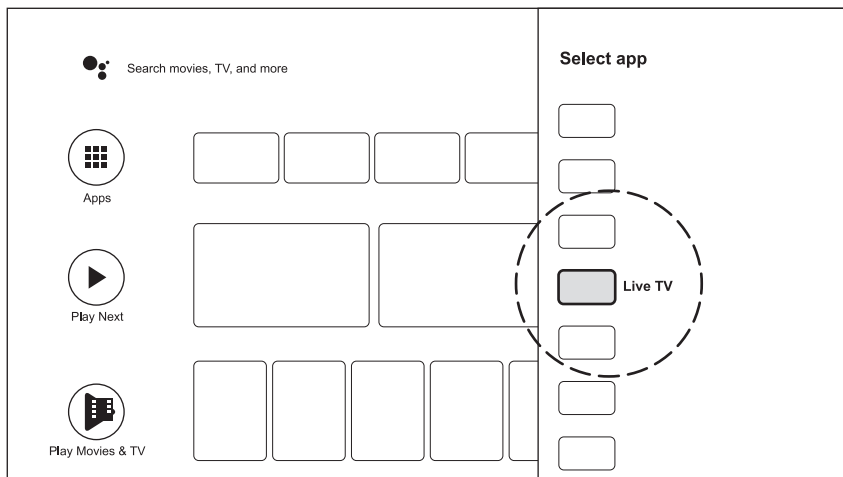 

4

Press



3.3. First installation

Note! Images of menu screens that are shown in this user manual, are for reference only and may vary in your country.

Press the Live TV button on your remote control or select the Live TV application on the Home Screen and press OK to launch Live TV.

When starting Live TV mode for the first time, configure the settings (Country, First Audio Language, First Subtitle Language, Subtitle, LCN) of your Terrestrial TV Adapter on the TV First Installation screen. By using the directional buttons on your remote control, you navigate through the initial installation.

TV First Installation

Country (Region)	<	UK	>
First Audio Language	<	English	>
First Subtitle Language	<	English	>
Subtitle	<	off	>
LCN	<	on	>

Next

On the next screen you can set the DVB Type, Antenna power, Scan Type and Service Type to perform a scan. To perform an automatic scan, use the automatic search configuration.

TV First Installation

DVB Type	<	DVB-T+T2	>
Antenna power	<	off	>
Scan Type	<	FTA	>
Service Type	<	All	>

Scan

 
3.4. Channel Bar

Press the INFO button on your remote control to display information about the current program, the reception and teletext options.




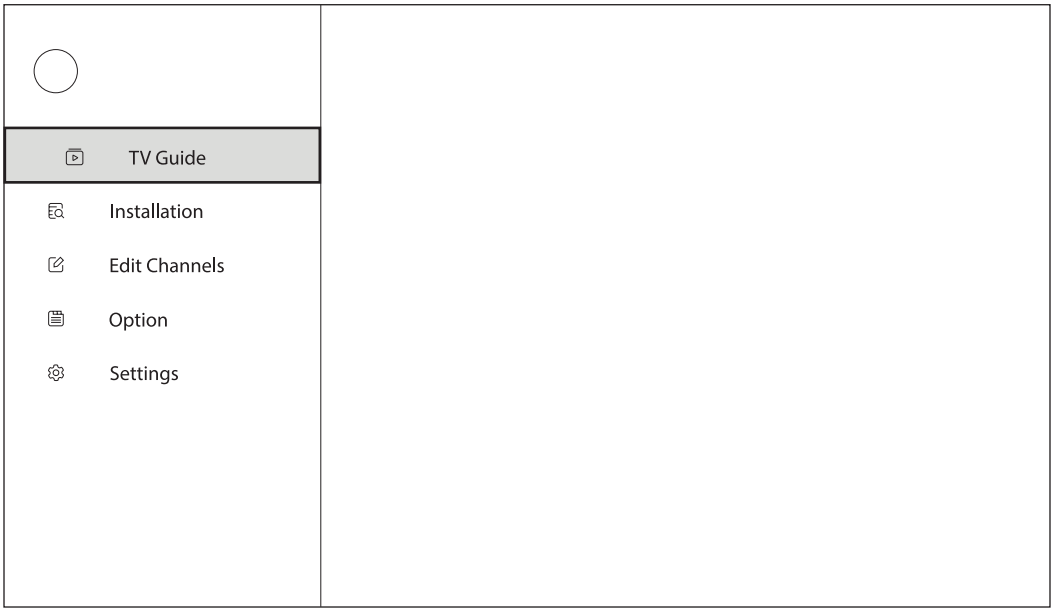 
3.5. Channel List


To display the channel list and information about the current program of a channel in Live TV mode, press the OK button on your remote control. Use the directional buttons to navigate through the channel list.

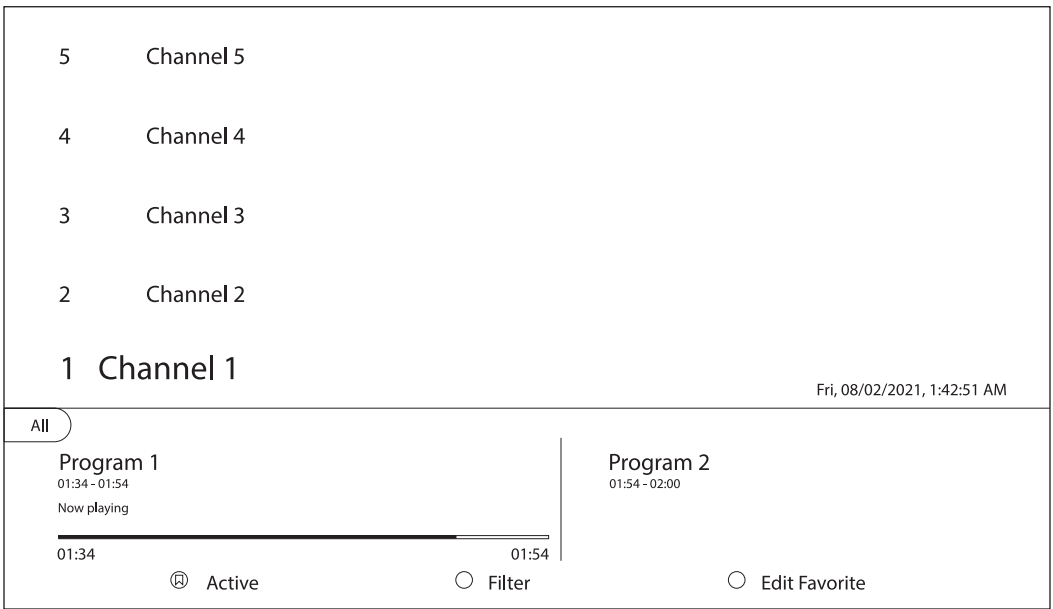


4. TV Guide


Press the  button (bookmark button) on your remote control and select TV Guide to display the 7-day program guide. The TV program can be displayed by groups or by channels.



Genres	08/02/2021 Friday		01:30		02:00		02:30		03:00	
Recommend	1	Channel 1	Program 1							
All	2	Channel 2	Program 1		P...	Program 2		Program 3		
TV	3	Channel 3	Program 1			Prog...	Program...		Program 4	
Radio	4	Channel 4	Program 1							
	5	Channel 5	Program 1							
	6	Channel 6	Program 1							
<div><div> Active</div><div><input type="radio"/> Day-</div><div><input type="radio"/> Day+</div><div><input type="radio"/> Today</div><div><input type="radio"/> Language</div></div>										


5. Installation

 Press the  button on your remote control and select Installation to display this menu.

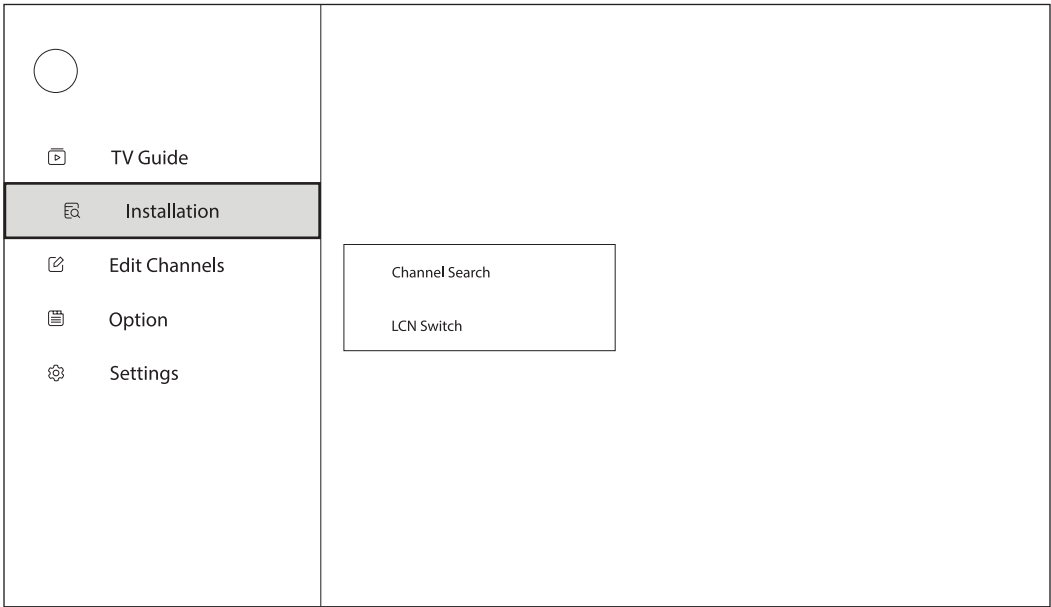


5.1. Scan

  To search for further programs, perform a manual scan by setting the Search Mode to Manual. Use the directional buttons to navigate through the scan menu.

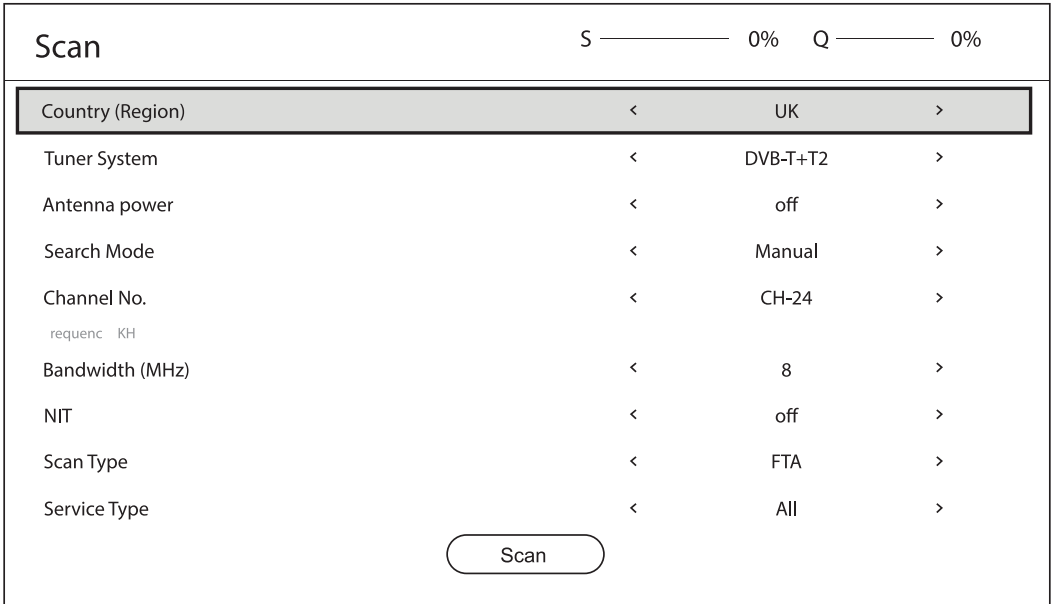


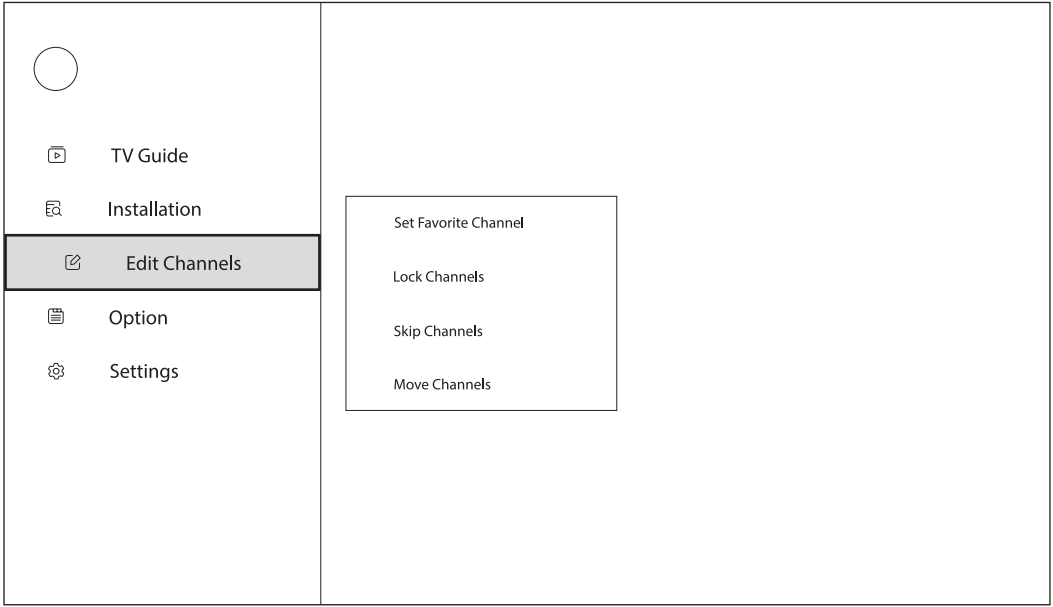 
5.2. LCN Switch

Logical channel numbering (LCN) is the function that assigns specific channel numbers to each program and service transmitted over broadcast multiplexes. Enable or disable the LCN switch in this menu.

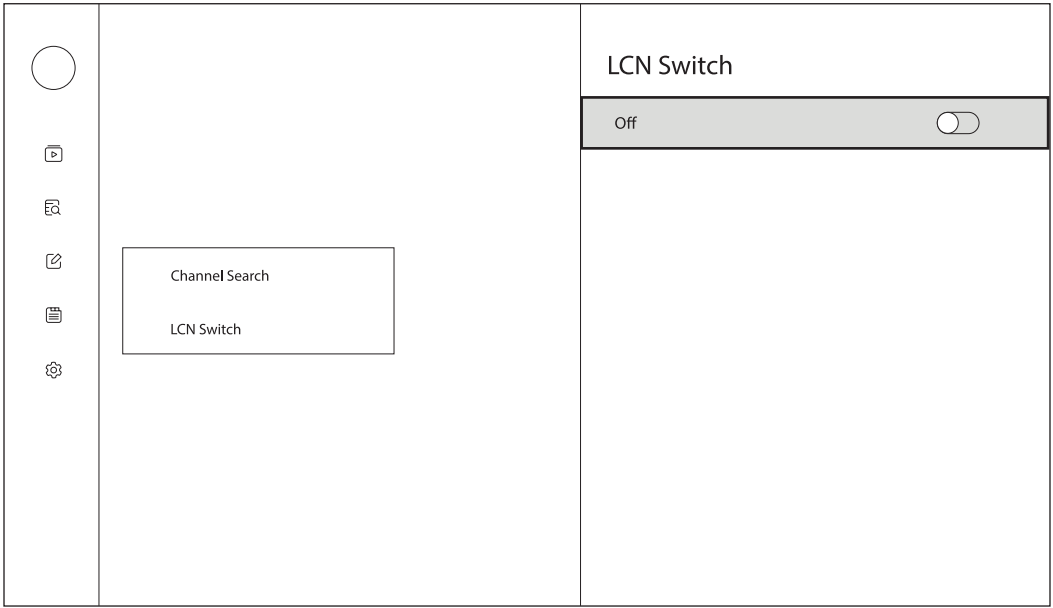

6. Edit Channels

Press the  button on your remote control and select Edit Channels to display this menu.



6.1. Set Favorite Channel

You can add your favorite channels to favorite groups. When the focus is on the left column, you can edit your favorite groups. Use the 4 colored buttons on your remote control to add, delete or edit your favorite groups. When the focus is on the right column, you can edit the channels in the selected favorite group. Use the 4 colored buttons on your remote control to add, delete or edit your favorite channels.

Set TV Favorites Groups

<div>Favorite 1</div>	1	Channel 1
Favorite 2	2	Channel 2
Favorite 3	3	Channel 3
Favorite 4	4	Channel 4
Favorite 5	5	Channel 5
Favorite 6	6	Channel 6
Favorite 7		
Favorite 8		
Favorite 9		

Active

☐ Add Fav Group

☐ Delete Fav Group

☐ Edit Fav Group

6.2. Lock Channels

Press the OK button to lock a channel in the channel list. Use the directional buttons to navigate through the channel list. Locked channel(s) will be marked with the lock symbol. To unlock a previously locked channel, highlight the channel and press the OK button.

Locked channel(s) can only be viewed when entering a 4-digit password. Default pin: 0000. Press the right directional button and enter the pin to watch the locked program. The pin can be entered via the numeric buttons on the remote control or via the virtual keyboard. To display the virtual keyboard, press the OK button on your remote control.

Lock Channels


1	Channel 1
2	Channel 2
3	Channel 3
4	Channel 4
5	Channel 5
6	Channel 6


Lock/Unlock

6.3. Skip Channels

Press the OK button to skip a channel in the channel list. Use the directional buttons to navigate through the channel list. Channel(s) set for skipping will be marked with a symbol. To un-skip previously skipped channel(s), highlight the channel and press the OK button.

Skipped channel(s) will then not appear in the channel list.

Skip Channels	
1	Channel 1
2	Channel 2 
3	Channel 3
4	Channel 4
5	Channel 5
6	Channel 6


 Skip/Unskip

6.4. Move Channels

To move a channel, press the OK button for a few seconds to enter the edit mode. Use the directional buttons to move the highlighted channel to a new position in the channel list. Press the OK button to confirm the location.


Note: For some countries, the LCN function is activated by default during initial installation. If you want to reorder channels in your channel list, you need to deactivate the LCN function in the Installation / LCN Switch.

Move Channels	
1	Channel 1
2	Channel 2
3	Channel 3
4	Channel 4
5	Channel 5
6	Channel 6

 Long press to enter edit mode/Short press to confirm location


7. Option

 Press the  button on your remote control and select Option to display this menu.

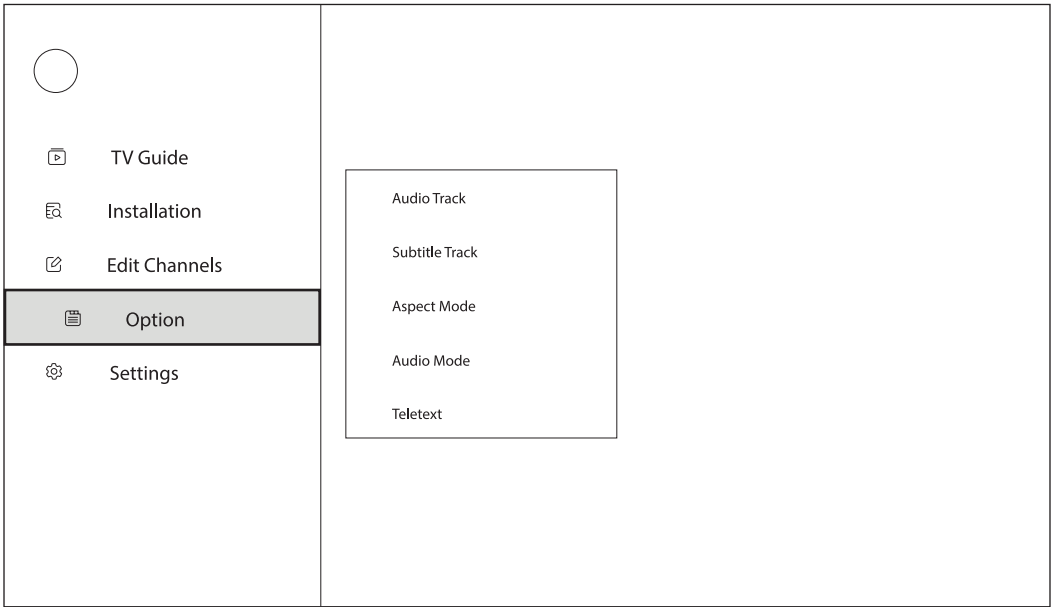

7.1. Audio Track

 Change the language of the current program.

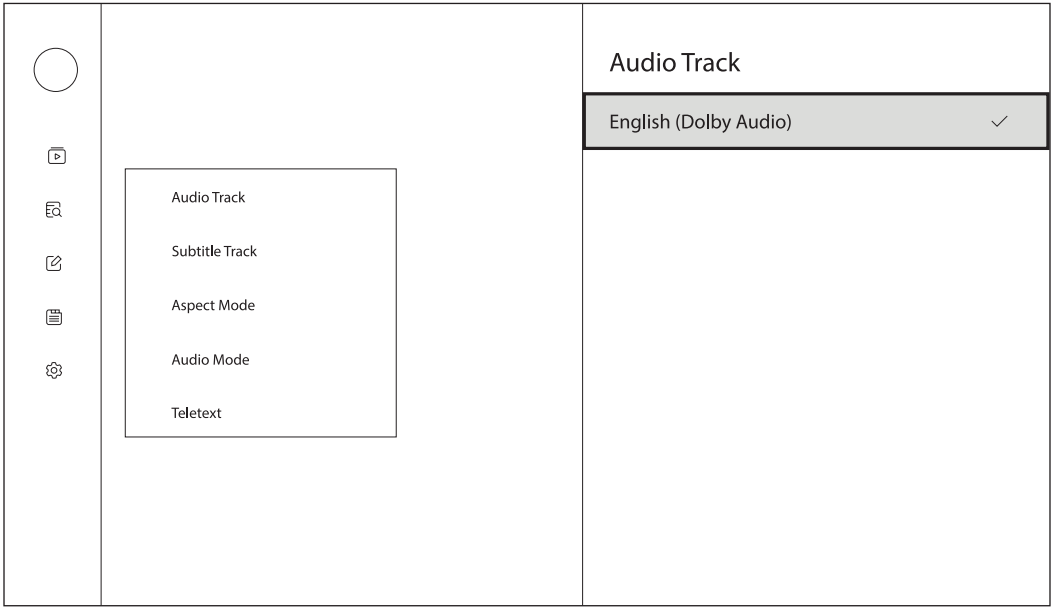

7.2. Subtitle Track

Turn on/off the subtitle and set the subtitle language.

<div><div></div><div></div><div></div><div></div><div></div><div></div></div>	<div>Audio Track</div> <div>Subtitle Track</div> <div>Aspect Mode</div> <div>Audio Mode</div> <div>Teletext</div>	Subtitle Track
		<div>Off ✓</div> <div>English</div>


7.3. Aspect Mode

Select your preferred aspect mode by choosing between Auto, Full Screen, 4:3 Letter Box, 4:3 Pan Scan, 16:9 Letter Box, 16:9 Pan Scan.

<div><div></div><div></div><div></div><div></div><div></div><div></div></div>	<div>Audio Track</div> <div>Subtitle Track</div> <div>Aspect Mode</div> <div>Audio Mode</div> <div>Teletext</div>	Aspect Mode
		<div>Auto ✓</div> <div>Full Screen</div> <div>4:3 Letter Box</div> <div>4:3 Pan Scan</div> <div>16:9 Letter Box</div> <div>16:9 Pan Scan</div>


7.4. Audio Mode

 Select your preferred audio mode by choosing between Stereo, Left or Right.

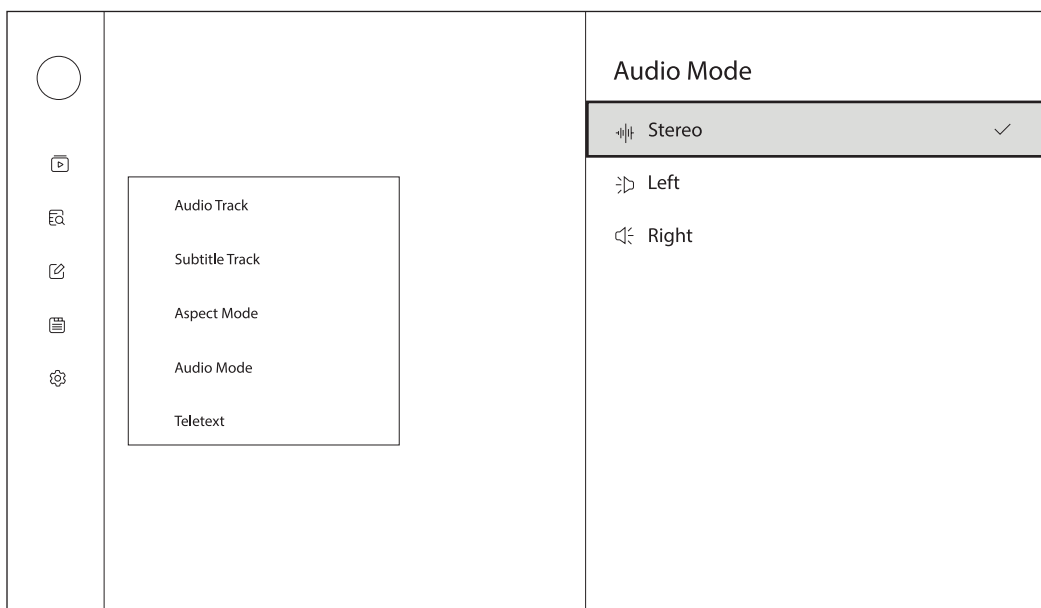


7.5. Teletext

To open the teletext of the current channel, press the yellow button on your remote control. Teletext option will be displayed only when RCU 110 is connected.

To display the teletext of the current channel with the remote control RCU 130, press the  button on your remote control and select Option > Teletext to display the teletext.


8. Settings

 Press the  button on your remote control and select Settings to display this menu.

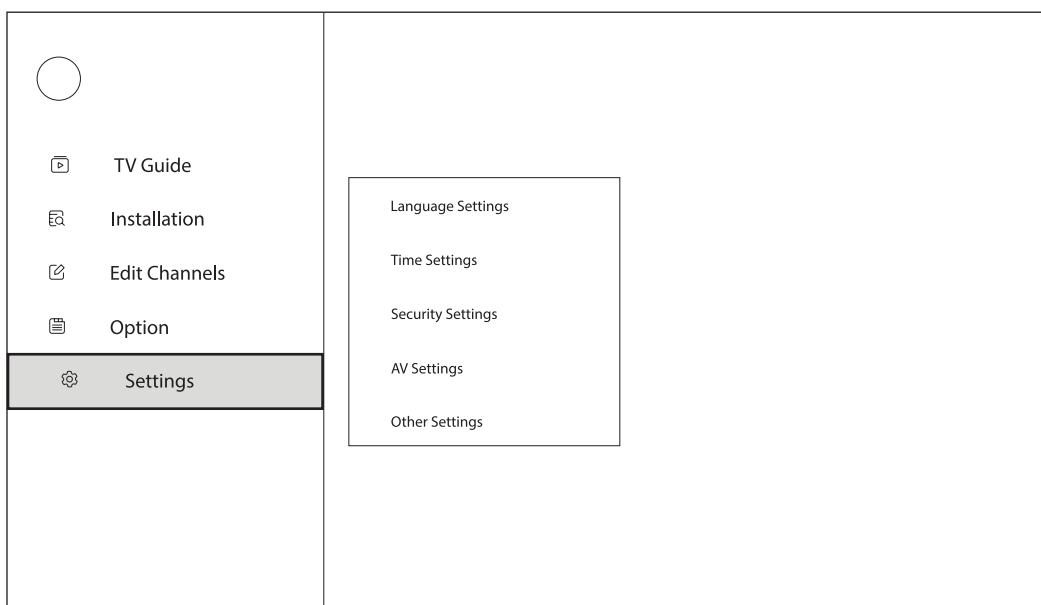


8.1. Language Settings

 Turn on/off the subtitle and set the subtitle language.

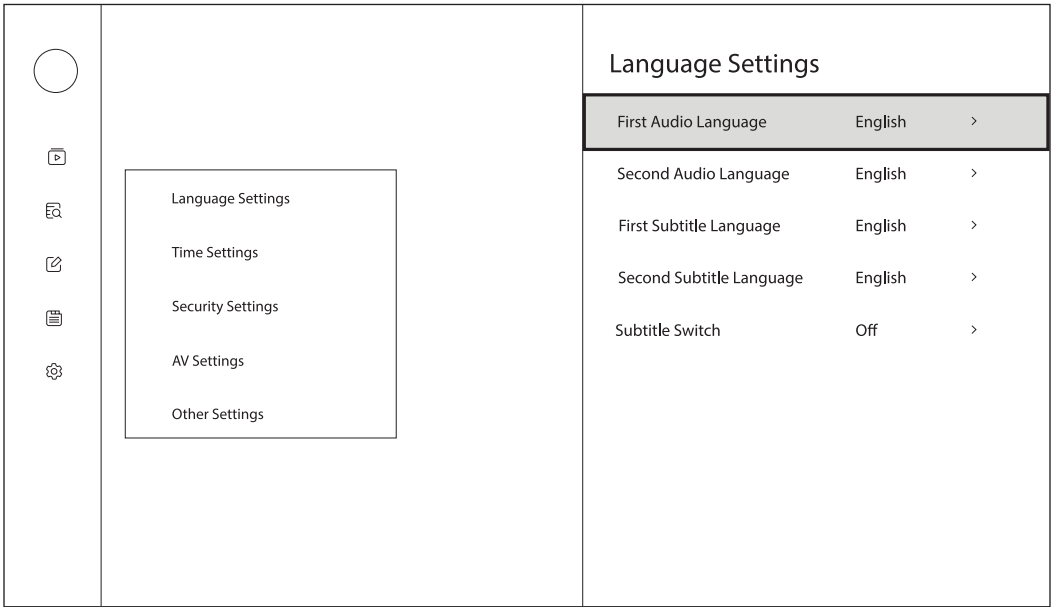


8.2. Time Settings

 Set the time by using the time settings from your TV or network.

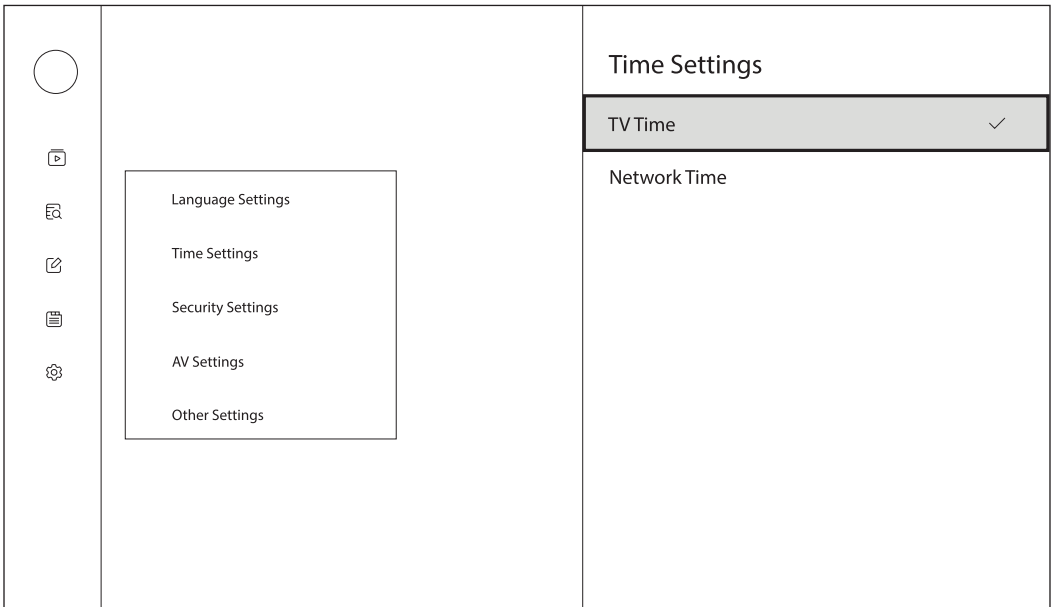

8.3. Security Settings

 To open this menu, you need to enter the 4-digit pin (Default pin: 0000).

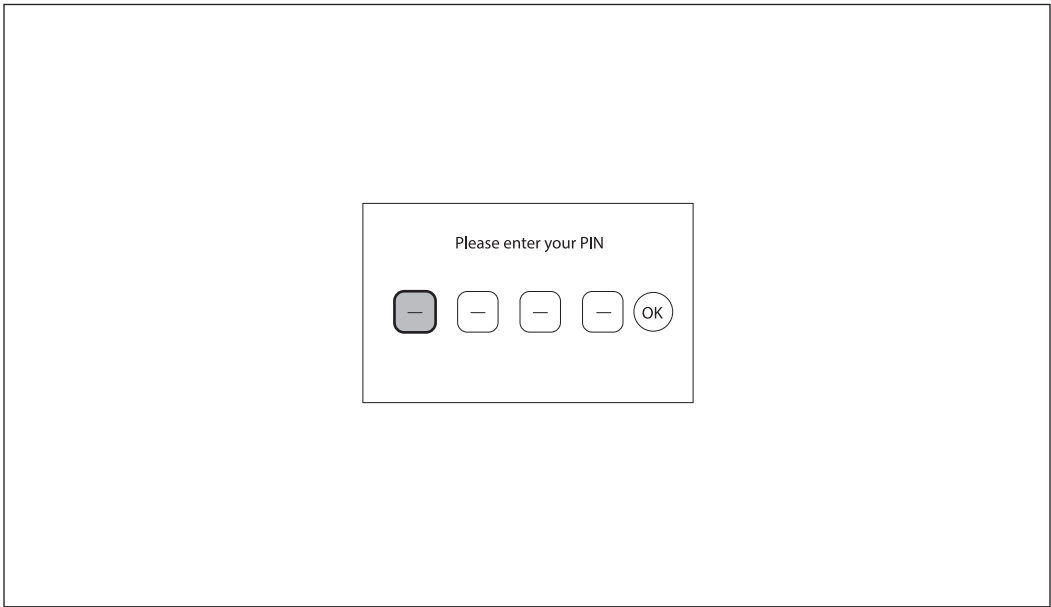


Parental Control: This menu allows you to protect the installation menu and/or channels with a PIN code. Enable or disable parental control by using the directional buttons on your remote control. When the parental control is enabled, you can set the age limit according to your preferences.

Menu Lock: This menu allows you to protect the Installation, Edit Channels, Option and Settings menu with a PIN. When the Menu Lock is enabled, no adjustments can be made without entering the 4-digit pin.


Channel Lock: To lock channels in the Edit Channels menu, this function must be enabled. If this function is disabled, you can not lock channels in the Edit Channel menu.

 Change PIN: Change the pin to enter the security settings and to view locked and skipped channels. (Default Pin: 0000)

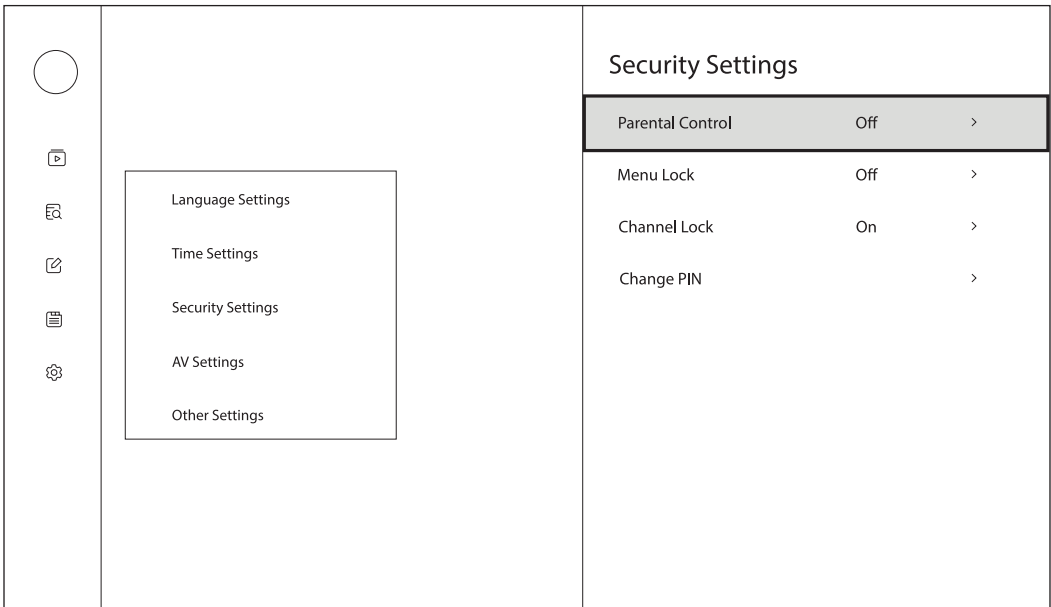

8.4. AV Settings

 
Turn on/off the audio description and set the volume for the audio description.

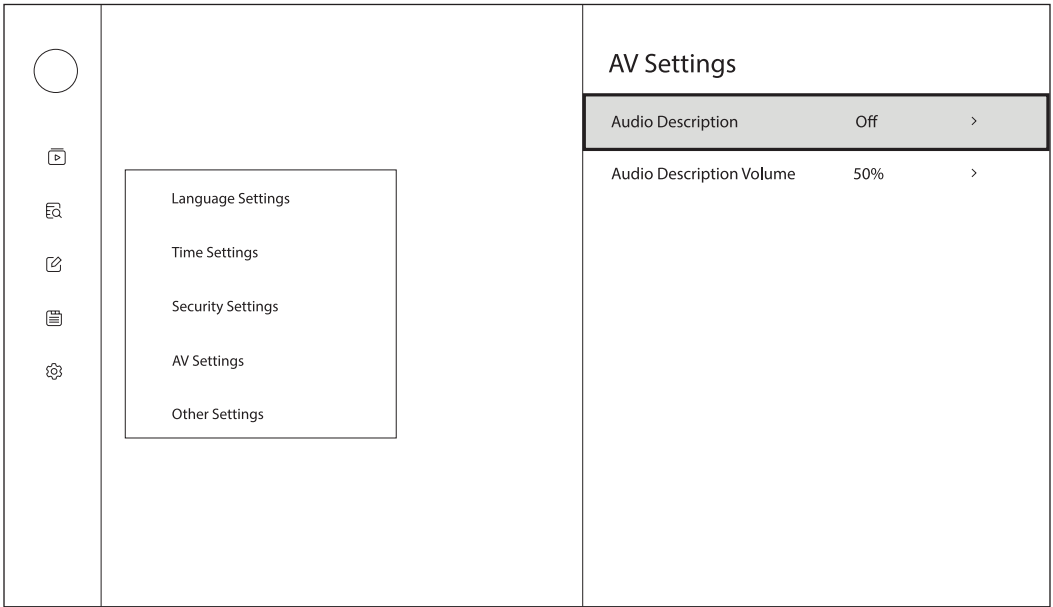

8.5. Other Settings

Version: Displays the version number of your Terrestrial TV Adapter.

 Factory Reset: Resets your Terrestrial TV Adapter to factory settings.

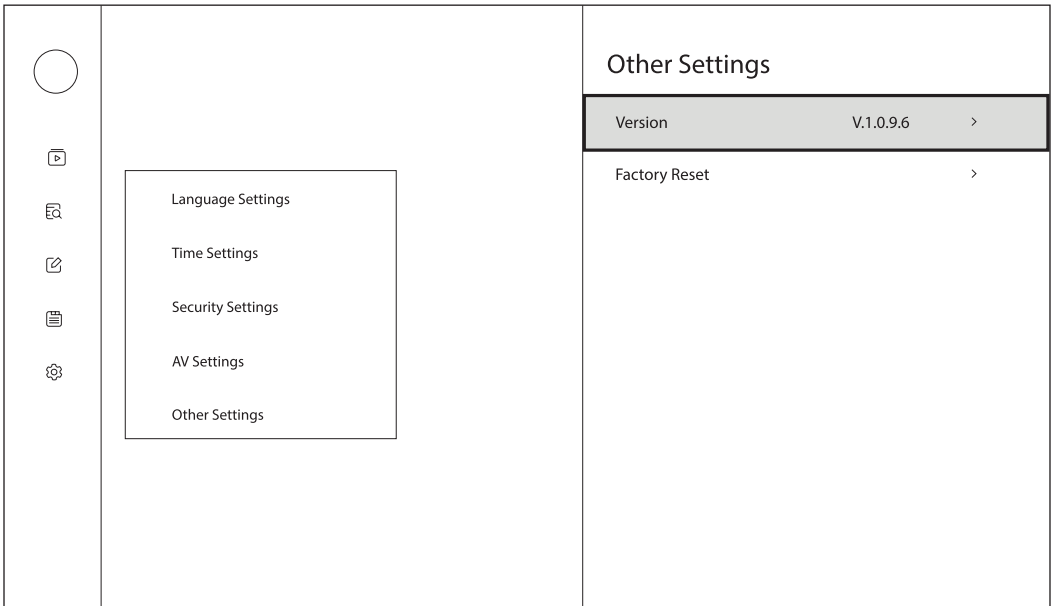

9. Technical specifications

System

DVB-S/S2
Free-to-Air

Ports

Antenna input
USB-C

General data

Operating temperature: 0 ~ +50°C
Storage temperature: -40 ~ +65°C
Dimensions (W x D x H in mm): 180 x 23,6 x 16
Weight (in kg): 0,03

Licenses

Supplied by © 2022 StreamView GmbH, Franz-Josefs-Kai 13, 1010 Vienna, Austria. All rights reserved.
Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change.