

THOMSON

easytv

IMPORTANT

Please read this manual carefully before installing and operating the TV.

Keep this manual handy for further reference.

Content

1. Safety information	3	11.5. Hearing Impaired	32
1.1. Markings on the product	4	11.6. PVR Recording function	32
1.2. Simplified EU declaration of conformity	4	11.7. Aspect Ratio	33
1.3. Data protection	4	11.8. Blue Screen	33
2. Introduction and feet installation	5	11.9. First Time Installation	33
2.1. Unpacking and installation	5	11.10. Factory Reset	33
2.2. Wall mounting warnings	6	11.11. Software Update (USB)	34
3. TV buttons and connections	7	11.12. Environment - Home mode/Shop Mode	34
3.1. TV Button	7	11.13. HDMI CEC (Need to support the HDMI CEC/ARC function)	34
3.2. Connections	8	12. Media operation	35
3.3. Remote control	9	12.1. Photo Menu	35
4. TV Installation	10	12.2. Music Menu	36
4.1. Set your TV	10	12.3. Movie Menu	37
4.2. Initial Setup	10	12.4. Text Menu	38
4.3. Tuning Setup DTV	11	13. Troubleshooting	39
4.4. Auto Tuning (Analog TV + Digital TV)	12	14. Technical specifications	40
5. Main Menu Operation	13	15. Country restrictions	40
5.1. Channel Menu	13	16. Licences	40
5.2. ATV Manual Tuning	13		
5.3. DTV Manual Tuning	14		
5.4. Program Edit	15		
5.5. Schedule List	16		
5.6. Signal Information	17		
5.7. Auto Tuning – satellite (DVB-S)	18		
5.8. Satellite Dish Setup	19		
6. Picture Menu	19		
6.1. Picture Mode	20		
6.2. Noise Reduction	21		
7. Sound Menu	21		
7.1. Sound Mode	22		
8. Time Menu	23		
8.1. Sleep Timer	24		
8.2. Auto Standby	24		
8.3. OSD Timer	25		
9. Lock Menu	25		
9.1. System Lock	25		
9.2. Set Password	26		
9.3. Channel Lock	26		
9.4. Parental Guidance	27		
10. Hotel Mode	28		
11. Setup Menu	29		
11.1. OSD (Manu) Language	30		
11.2. TT (Teletext) Language	30		
11.3. Audio Languages	31		
11.4. Subtitle Language	31		



mythomson.com



<https://tv.mythomson.com/en/Support/FAQs/>



<https://tv.mythomson.com/Support/Product-Registration/>

1. Safety information

RISK OF ELECTRIC SHOCK!

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove the cover of the cabinet, refer servicing to qualified service personal.



In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains.

The mains plug is used to disconnect the TV set from the mains and therefore it must remain readily operable. If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV is in standby mode or switched off.

Note: Follow the onscreen instructions for operating the related features.

Important: Please read these instructions fully before installing or operating.

WARNING

This device is intended to be used by persons (including children) who are capable / experienced of operating such a device unsupervised unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.

- Use this TV set at an altitude of less than 2000 meters above the sea level, in dry locations and in regions with moderate or tropical climates.
- The TV set is intended for household and similar general use but may also be used in public places.
- For ventilation purposes, leave at least 10 cm of free space around the TV.
- The ventilation should not be impeded by covering or blocking the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- The power cord plug should be easily accessible. Do not place the TV, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, do not unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.
- Do not expose the TV to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the TV (e.g., on shelves above the unit).
- Do not expose the TV to direct sunlight or do not place open flames such as lit candles on the top of or near the TV.
- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals.
- Carefully attach the feet / stand to the TV. If the feet / stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over-tighten the screws.
- Do not dispose of the batteries in fire, or with hazardous or flammable materials.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type of plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments /accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- The socket-out shall be installed near the equipment and shall be easily accessible.
- This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided, or the manufacturer's instructions have been adhered to.
- The USB terminal should be loaded with 0.5 A under normal operation.
- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones or headphones can cause hearing loss.
- Do not use this apparatus near water.
- Clean only with dry cloth.



ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots, or any other openings in the case.

1.1. Markings on the product

The following symbols are used on the product as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



Class II Equipment: This appliance is designed in such a way that it does not require a safety connection to electrical earth.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. Please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

Warning

Do not ingest the battery, Chemical Burn Hazard. This product or the accessories supplied with the product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

A television may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- The equipment is only suitable for mounting at heights ≤ 2 m.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Apparatus connected to the protective earthing of the building installation through the MAINS connection or through other apparatus with a connection to protective earthing – and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a television distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator).

1.2. Simplified EU declaration of conformity

Hereby, StreamView declares that the radio equipment type product device Smart TV is complying with Directive 2014/53/EU.

1.3. Data protection

The application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. They may use such information to improve products or to provide services or technologies,

which do not personally identify you. Additionally, some third-party services, already provided in the device or installed by you after purchasing the product, may request a registration with your personal data. Some services may collect personal data even without providing additional warnings. StreamView cannot be held liable for a possible breach of data protection by third-party services.

2. Introduction and feet installation

 
Thank you for choosing our product. You'll soon be enjoying your new TV. Please read these instructions carefully. They contain important information which will help you get the best from your TV and ensure safe and correct installation and operation.

 
2.1. Unpacking and installation

Take out the feet and the TV from the packing and put the feet onto a table or any other even surface.

- Use a flat and firm table or similar even surface that can support the weight of the TV.
- Do not hold the screen panel part.
- Make sure not to scratch or break the TV.
- The feet are marked left and right.

24" - 43"

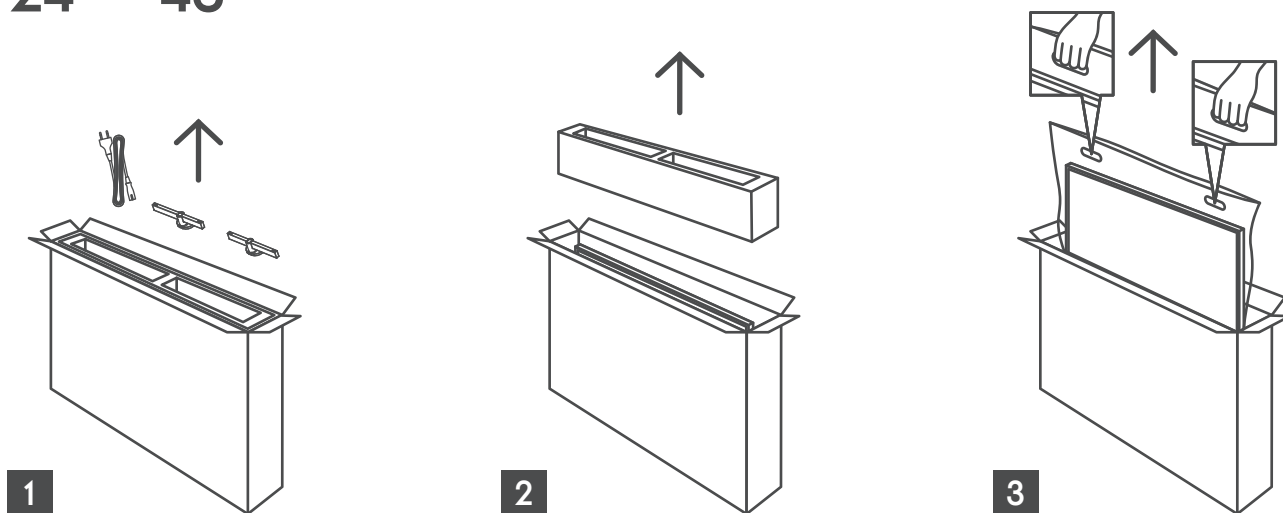

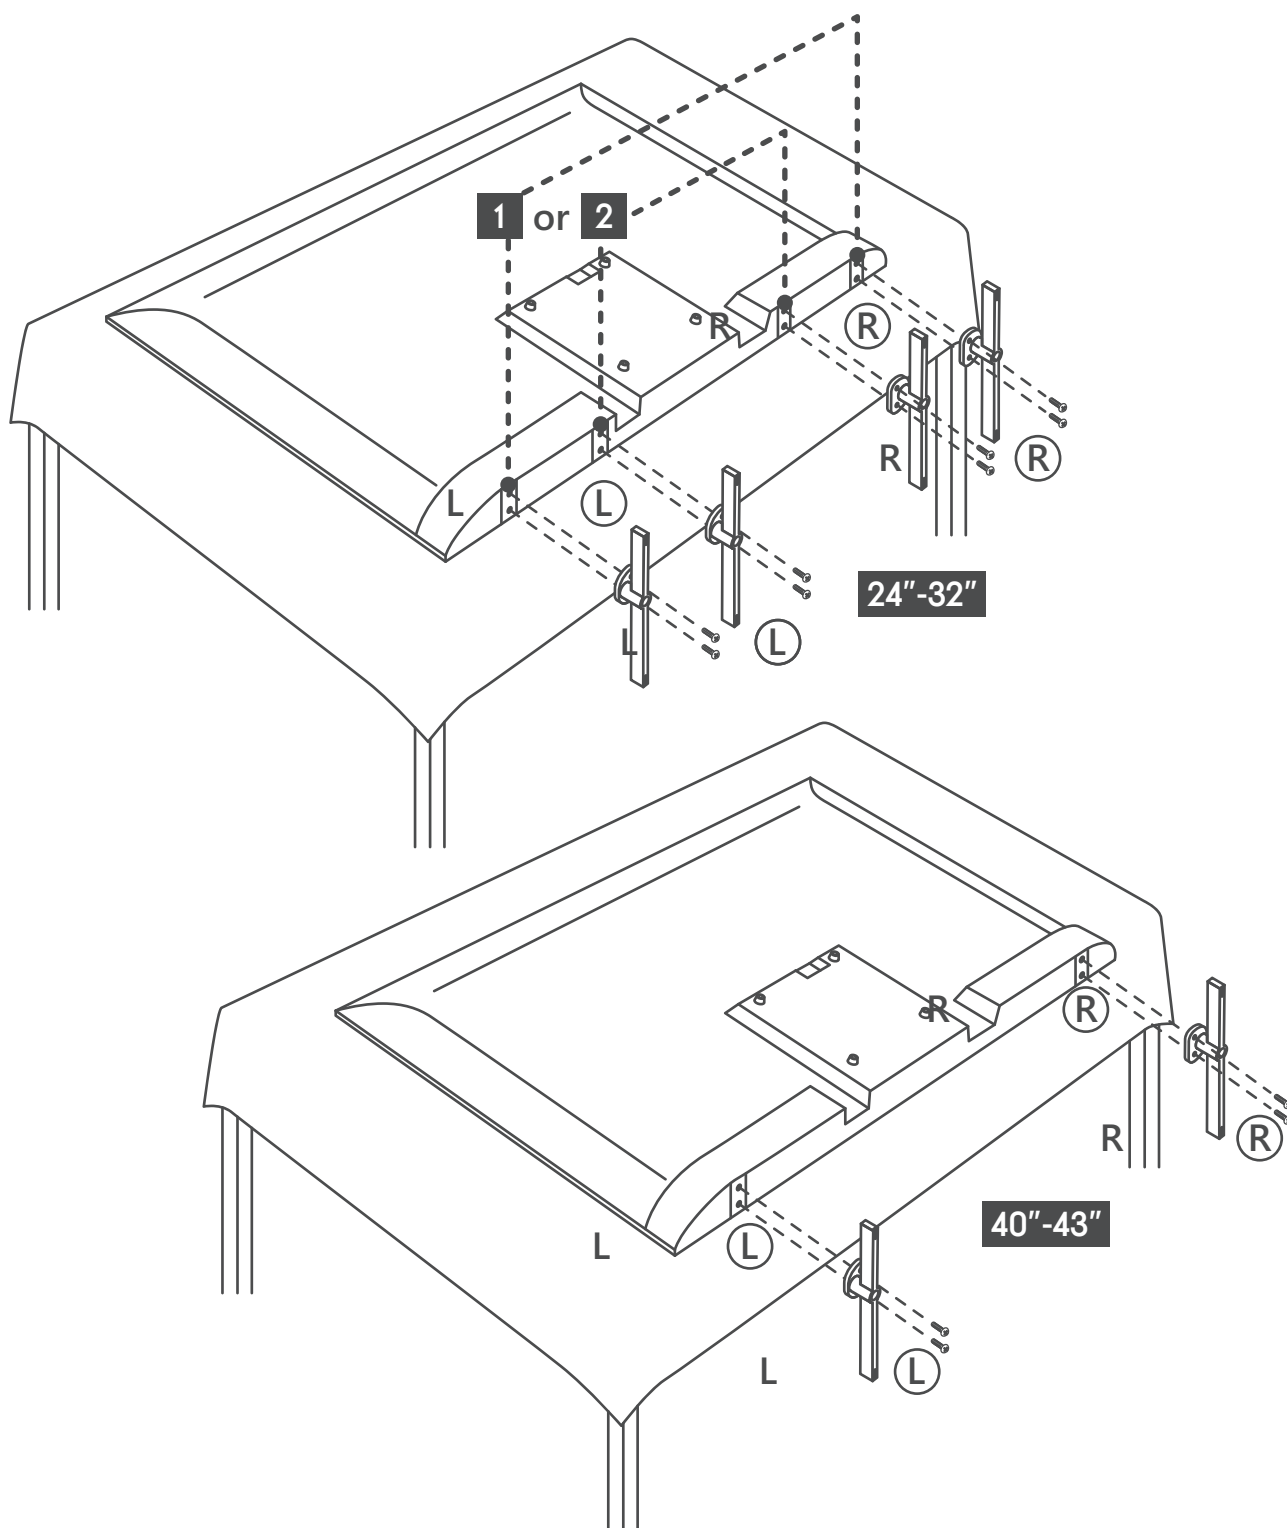

2.2. Wall mounting warnings

Read the instructions before mounting your TV on the wall.

The wall mount kit is optional. You can obtain it from your local dealer, if not supplied with your TV.

Do not install the TV on a ceiling or on an inclined wall.

Use the specified wall mounting screws and other accessories.


Tighten the wall mounting screws firmly to prevent the TV from falling. Do not over-tighten the screws.

Figures and illustrations in this user manual are provided for reference only and may differ from the actual product appearance. Product design and specifications may be changed without notice.

Your TV is also prepared for a VESA-compliant wall mount bracket. If it is not supplied with your TV, contact your local dealer to purchase the recommended wall mount bracket.

Holes and measurements for wall mount bracket installation:

	W (mm)	H (mm)	D (mm)	L (mm)
24"	100	100	4 (M4)	6
32"	100	100	6 (M6)	8
40"	200	200	6 (M6)	8
43"	200	200	6 (M6)	8

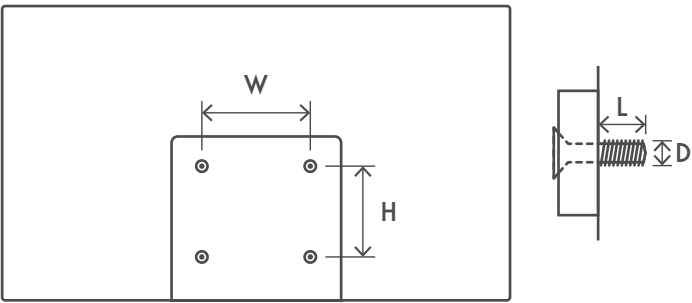 

3. TV buttons and connections

Caution:



If you want to connect a device to the TV, make sure that both the TV and the device are turned off before making any connection. After the connection is done, you can turn on the units and use them.



 
Do not touch or be close to the HDMI, USB terminals, and prevent electrostatic discharge to disturb these terminals while in USB operation mode, or it will cause the TV to stop working or abnormal status.

Note:

The actual position and arrangement of ports may be different from model to model.

3.1. TV Button

Press this button in standby mode to turn on / off the TV

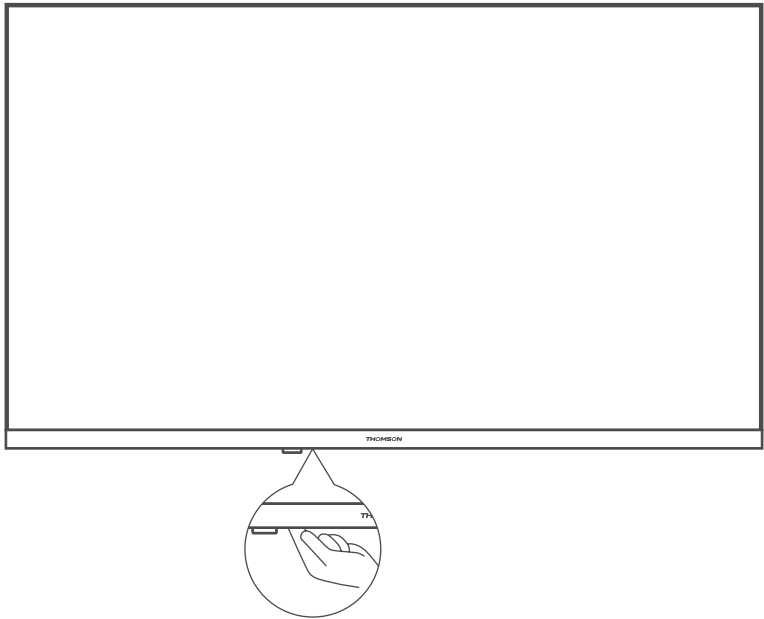

3.2. Connections

 

HEADPHONES




HDMI





HDMI (ARC)





AUDIO OUT
Digital coaxial




USB
5 V= max. 500 mA





SATELLITE
13/18 V= 400 mA max





ANTENNA/DVB-T/C





 

AV IN

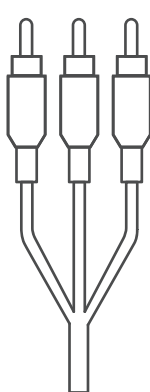



COMMON INTERFACE

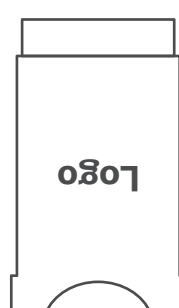 

CI+ Modul

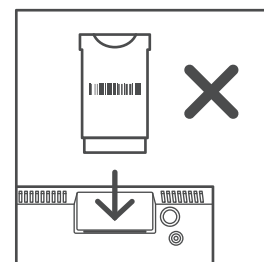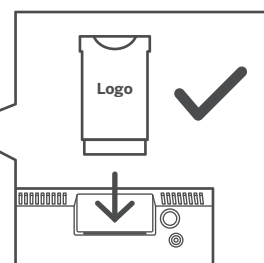   

*silicone plug

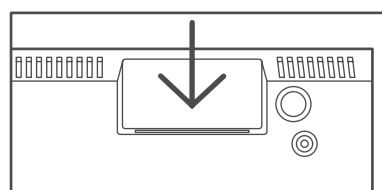 

Note: If the model has a CI card slot on top of its back cover, a silicone plug for the CI card slot can be found in the accessory bag (for models without a CI card slot, there is no such silicone plug), please insert the silicone plug into the slot when the CI card is not in use.

3.3. Remote control




	Standby: Quick Standby / Standby / On
	Source/Input: Closes and exits from Live TV Settings menus, exits from any running application or menu or OSD banner, switches to last set source; Selecting the input of the TV.
0-9	Numeric buttons: Switches the channel in Live TV mode, enters a number or a letter in the text box on the screen
TEXT	Text: Opens and closes teletext (where available in Live TV mode)
SUB	Subtitles: Turns subtitles on and off (where available)
	Coloured Buttons: Follows the on-screen instructions for coloured button functions
INFO	Displays Broadcast information
	SETTINGS/MENU: Displays Live TV Settings menu (in Live TV mode), displays available setting options such as sound and picture; Those who have an SW with PVR function bought, if settings button is pressed for 5 seconds an additional keypad will be opened with additional functions
GUIDE	Display EPG
	Directional buttons: Navigates menus, setting options, moves the focus or cursor etc., sets record time and displays the subpages in Live TV-Teletext mode when pressed Right or Left. Follow the on-screen instructions
	OK/Enter: Confirms selections, enters sub-menus, views channel list (in Live TV mode). Press 5 sec. to switch the backlight of the remote control on/off
	Back/Return: Returns to previous menu screen, goes one step back, closes open windows, closes teletext (in Live TV-Teletext mode). Exits the playback of multimedia files and returns to the MMP (Multi Media Player) overview menu / Remote pairing
	Sends back to previously watched channel
AUDIO	Opens Audio track
	Volume +/-: Controls the Sound Volume of the TV.
	Mute: Completely turns off the volume of the TV
	Programme +/-: Zapping the single TV/radio channels. Scrolls the channel list page by page when the channel list is displayed on the TV screen.
	Records
	Plays/Pauses Multimedia
	Fast rewind
	Fast forward
	Favourite application: Determinates the Favorite application. Shows selection of the Favorite applications.
	Remote Control pairing: Simultaneously pressing the Back button and the V- button, activates the pairing mode of the remote control.

4. TV Installation


4.1. Set your TV

 Put your TV on a firm place which can bear the weight of the TV. To avoid danger, please do not position the TV near water or heating places (such as light, candle, heating machine), do not block the ventilation at the back of the TV.

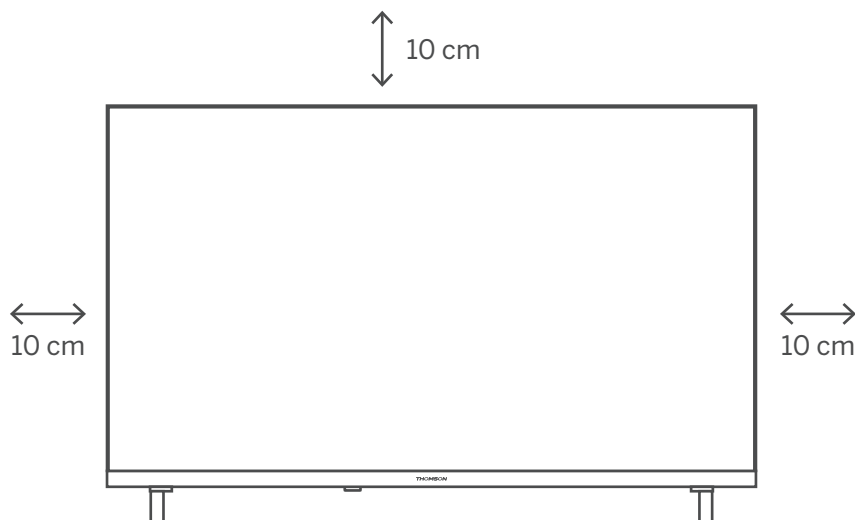

Connect antenna and power.

 1. Connect the antenna cable to the antenna socket on the back of the TV.
2. Plug in the power cord of your TV (AC 100-240 V ~ 50/60 Hz). The TV enters standby mode (red light).
3. Turn on your TV by pressing the power button of the TV or the power button on the remote control.

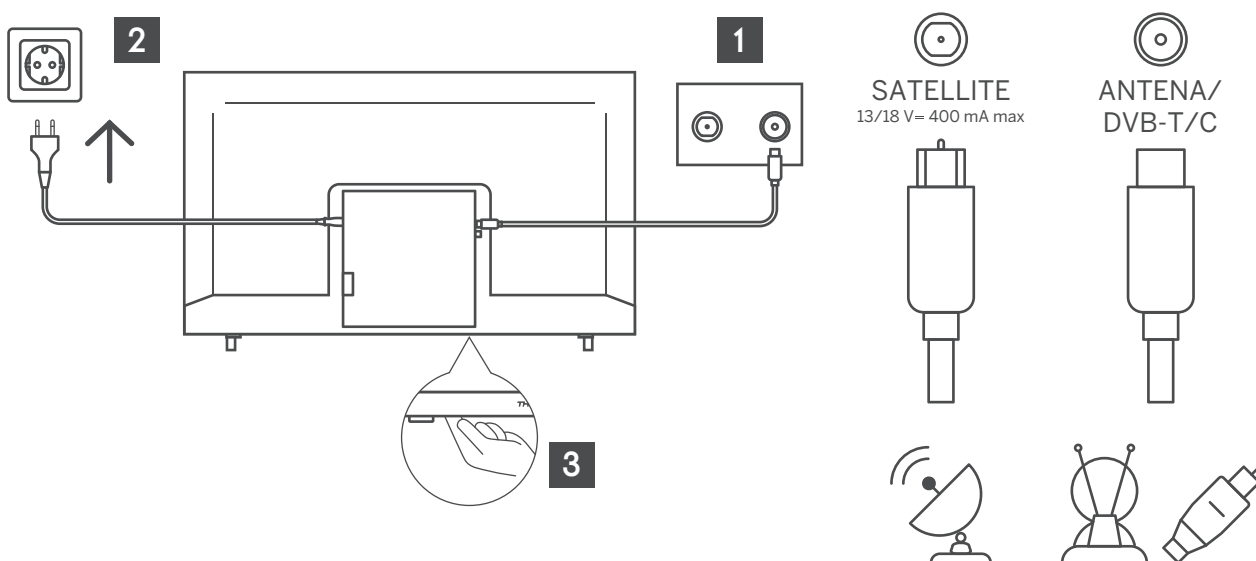

4.2. Initial Setup

For the first initial setup, in-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.

Connect an RF cable from the TV input called "RF-In" to your TV Aerial socket.

4.2.1 Select Language

Press the ◀ / ▶ button to select the language to be used for menus and message, then press OK to confirm.

4.2.2 Select Country

Press the ▼ / ▲ button to highlight country menu. Press ◀ / ▶ button to select the country of your choice, then press OK to confirm.

First Time Installation			
Country	←	Austria	→
Language	←	English	→
Environment	←	Home Mode	→
OK Select			

4.3. Tuning Setup DTV

Press the ▼ / ▲ button to select your reception art - DTV., then press OK to confirm.

Tuning Setup			
Country	←	Austria	→
Tune Type	←	DTV	→
Digital Type	←	DVB-T	→
Scan Type		Full	
Network ID		Auto	
Frequency		Auto	
Symbol Rate		Auto	
OK Start		⚙ Return	

4.4. Auto Tuning (Analog TV + Digital TV)

Tuning Setup	
Tune Type	← DTV + ATV →
Digital Type	← DVB-T →
Scan Type	Full
Network ID	Auto
Frequency	Auto
Symbol Rate	Auto
Operator	Others
↔ Move	OK Select ⚙ Return

By selecting ATV+DTV, two scans will be performed separately. To stop the first scan, you must first press the **SETTINGS/MENU** button and then confirm your choice with the **LEFT** button. Then, the second scan will start automatically. In case you want to interrupt the second scan, please press the **SETTINGS/MENU** button again and press the **LEFT** button to confirm.

Channel Tuning	
TV	: 0 Programme
DTV	: 0 Programme
Radio	: 0 Programme
Data	: 0 Programme
50 % VHF CH 1 (DTV)	
<div> <div style="display: inline-block; width: 100px; height: 10px; background-color: red;"></div> <div style="display: inline-block; width: 100px; height: 10px; background-color: gray;"></div> </div>	
Please press MENU key to exit	

Do you want to skip ATV tuning?	
◀ Yes	No ▶


Do you want to exit tuning?	
◀ Yes	No ▶

5. Main Menu Operation

5.1. Channel Menu


Press the **SETTINGS/MENU** button to display the main menu.

 Press the ◀/▶ button to select CHANNEL in the main menu.

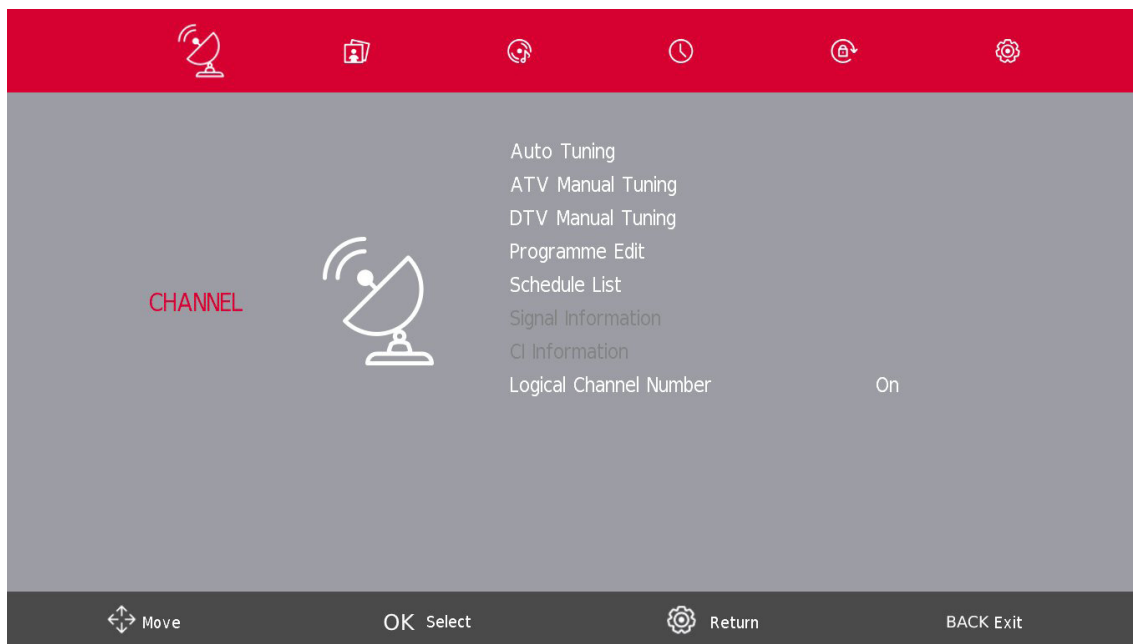

1. Press the ▼ / ▲ button to select the option that you want to adjust in the CHANNEL menu.
2. Press the Enter button to adjust.
3. After finishing your adjustment, Press the Enter button to save and return to the previous menu.

 5.2. ATV Manual Tuning

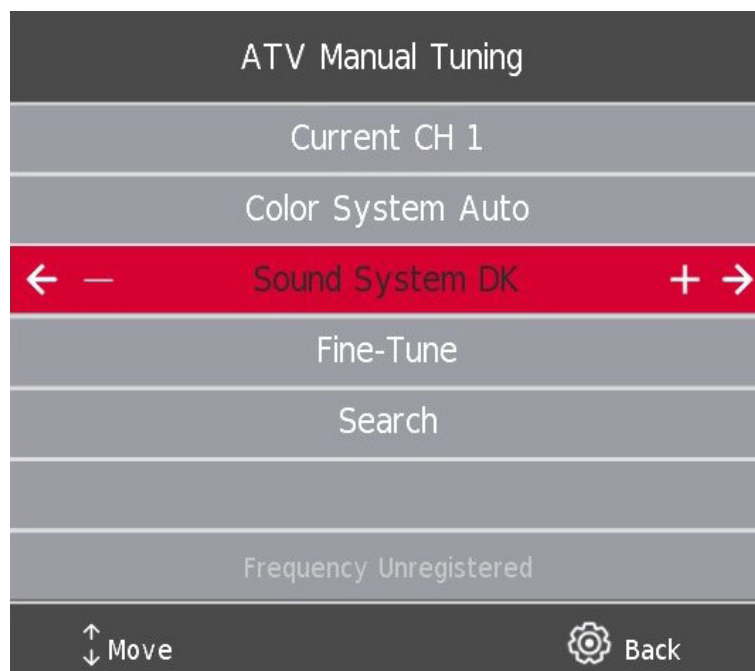

Current CH

Set the channel number.

Color System

Select the color system

(Available System: AUTO, PAL, SECAM)

Sound System

Select the Sound system

Fine-Tune

Adjust the frequency of the channel finely.

 
Search

Start channel searching.

5.3. DTV Manual Tuning

Press the ▼ / ▲ button to select DTV Manual Tuning, then press Enter button to enter sub-menu.

Press the ◀ / ▶ button to select channel, then press Enter button to search program.

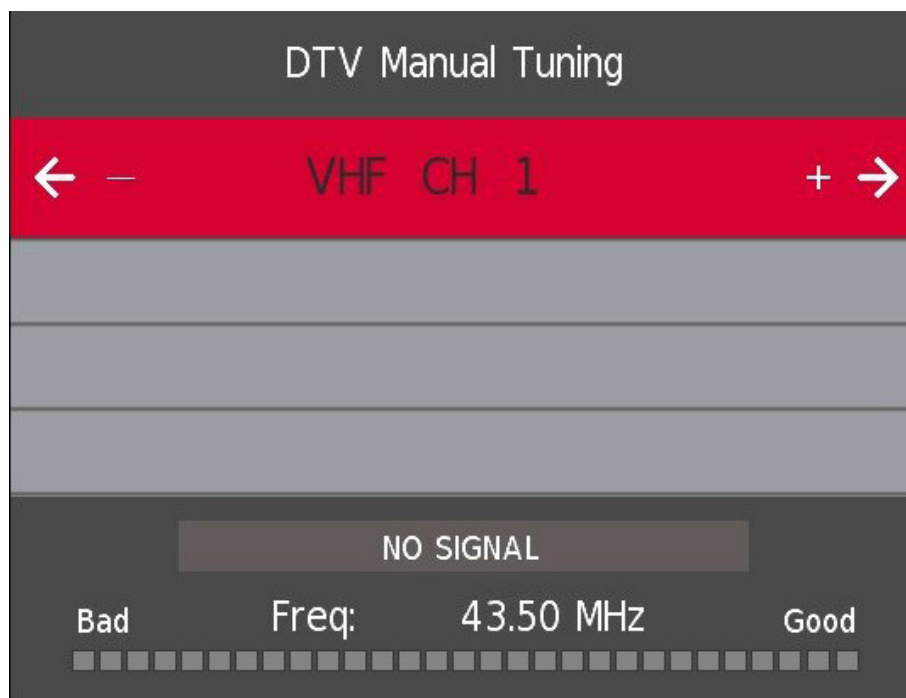

5.4. Program Edit

Press the ▼ / ▲ button to select Program Edit, then press the Enter button to enter sub-menu.



The three colored keys are the shortcut keys for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

Press the **Yellow** button to move the channel in the list.

 
Press the **Blue** button to skip the selected channel.

Press the Fav button to add the channel to or remove it from your favorite list. (Your TV set will skip the channel automatically when using CH+/- to view the channels.)


5.5. Schedule List

*only available with PVR


Press the ▼ / ▲ button to select Schedule List, then press the Enter button to enter sub-menu. It is available in DTV and satellite source.

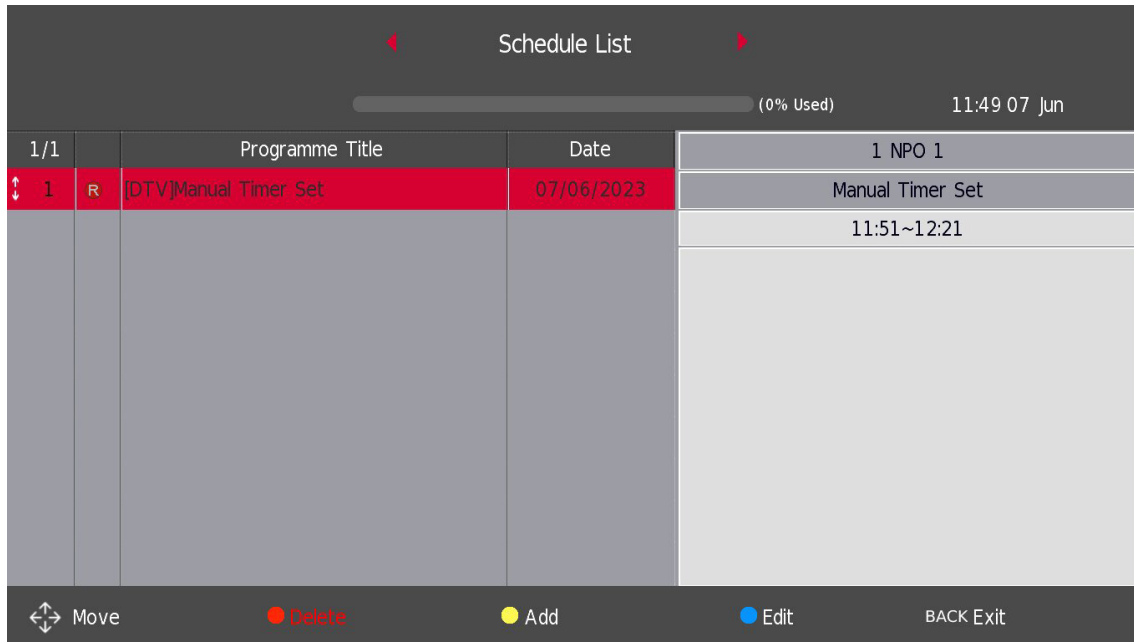

 Press the **YELLOW** button to enter the interface below.

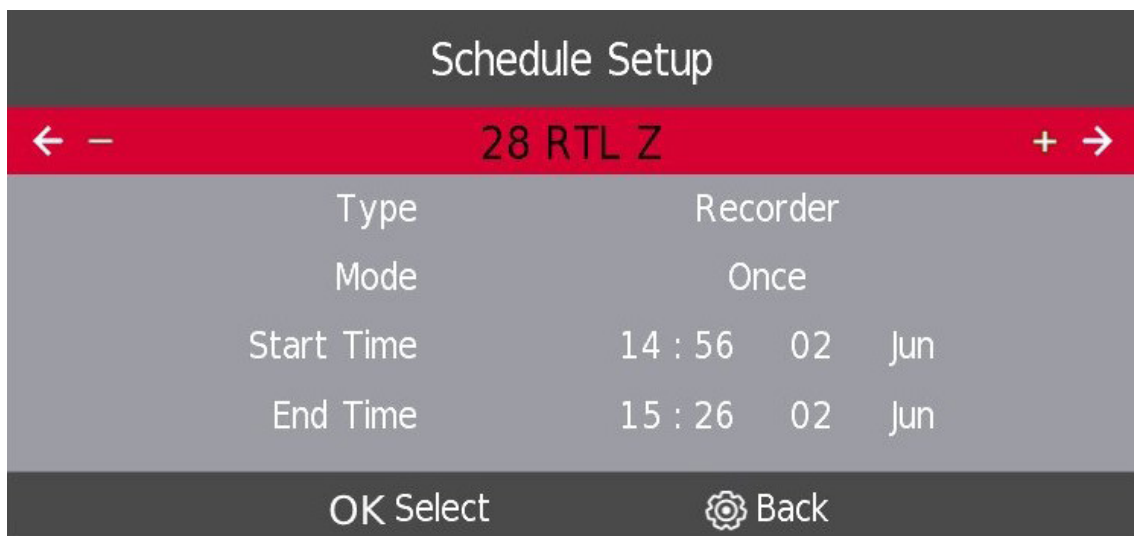

 If there is a conflict in the scheduled appointment, a warning message will be generated.

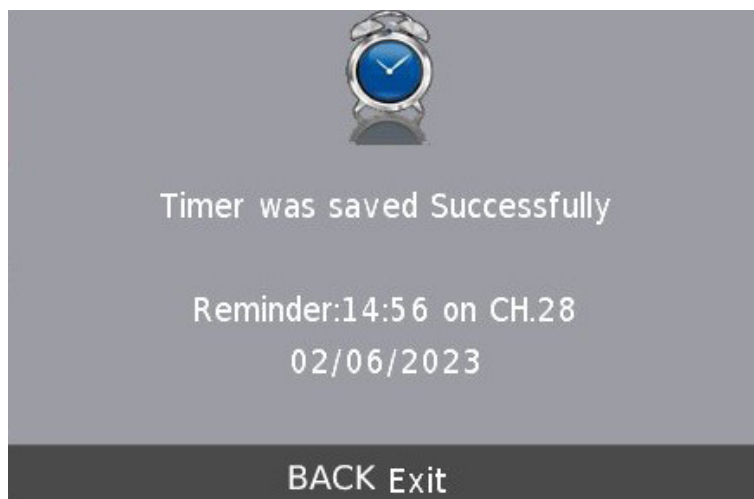

5.6. Signal Information

Press the ▼ / ▲ button to select **Signal Information**, press the **Enter** button to see the detail information about the signal. Only available when there is signal in DTV.


Signal Information	
Channel: 5 (177.50MHz)	
Network ...	
Modulation Unknow	
Quality 100	(Good)
Strength 0	(Weak)

CI Information (If CI function is supported)

Press the ▼/ ▲button to select CI Information, then press the **Enter** button to display details if you have inserted the CI card.


The CHANNEL List in Satellite Source. (If DVB-S2 function is supported)

 
Schedule list is selectable with PVR software installed

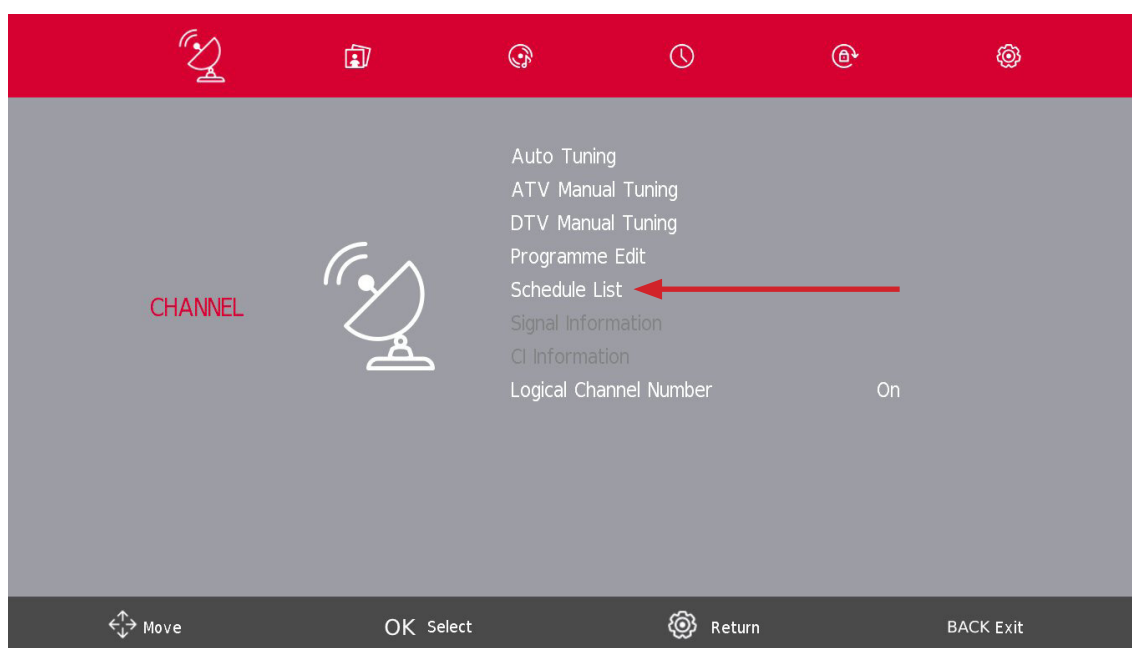

5.7. Auto Tuning – satellite (DVB-S)


Press the ▼ / ▲ button to select an option, then press the Enter button to enter. Please select and set all settings required for your home installation.

Tuning Setup			
Country	←	Austria	→
Satellite	←	01 Hispasat 30W-...	→
Scan Mode	←	Default	→
Channel Type	←	Free+Scramble	→
Service Type	←	All	→
DiSEqC1.0	←	None	→
DiSEqC1.1	←	None	→
OK Start		 Return	

Channel Tuning			
TV	:	0 Programme	
DTV	:	0 Programme	
Radio	:	0 Programme	
Data	:	0 Programme	
50 % VHF CH 1 (DTV)			
			
Please press MENU key to exit			

5.8. Satellite Dish Setup

 Press the ▼ / ▲ button to select **Satellite dish Setup** then press the Enter button to confirm.

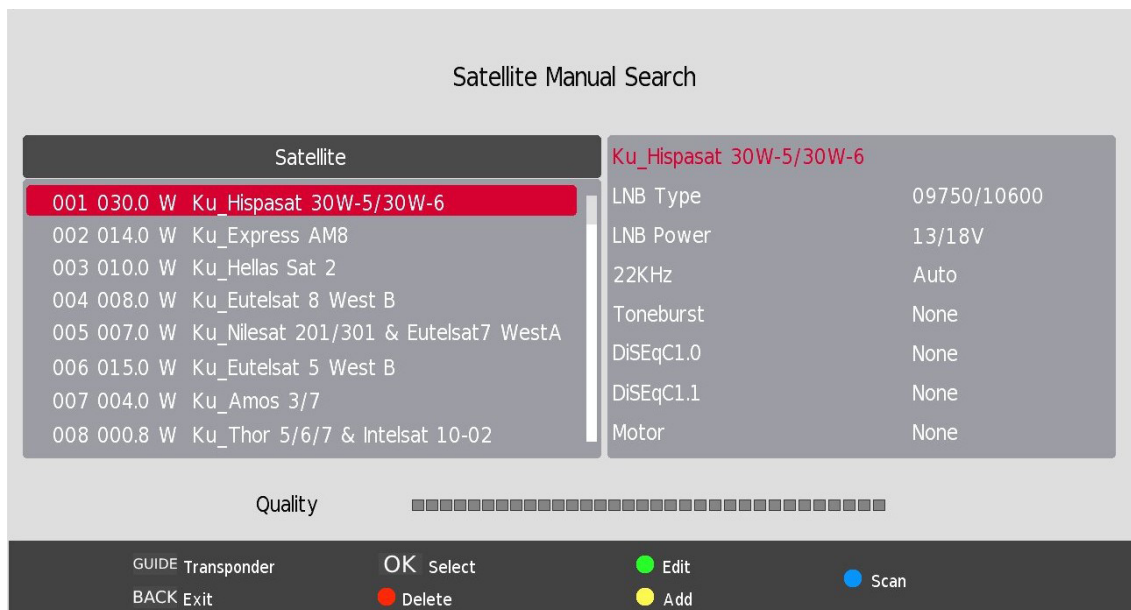

6. Picture Menu

Press the **SETTINGS/MENU** button to display the main menu.

 
Press the ◀ / ▶ button to select **PICTURE** in the main menu.



1. Press the ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.
2. Press the **OK** button to adjust.
3. After finishing your adjustment, Press the **SETTINGS/MENU** button to save and **BACK** to return to the previous menu.

6.1. Picture Mode

Press the ▼ / ▲ button to select Picture Mode, then press the **OK** button to enter sub-menu.
You can change the value of contrast, brightness, color, sharpness and tint when the picture is in Personal mode.

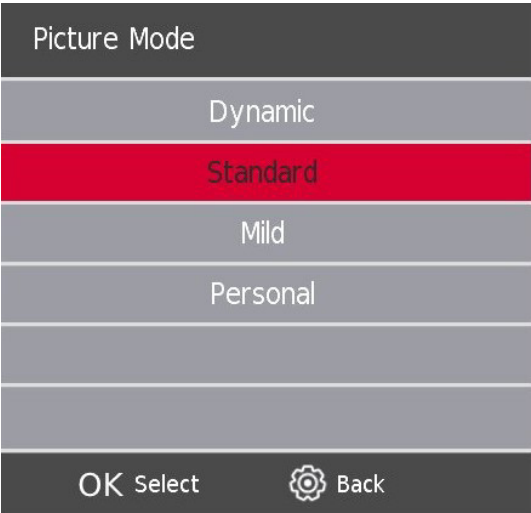


Contrast / Brightness / Color / Tint / Sharpness

Press the ▼ / ▲ button to select option, then press the Enter button to adjust.

- Contrast** Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.
- Brightness** Adjust the optical fiber output of the entire picture Increasing brightness of an image will light out all colors so the original light ones will become up to white. Reversely, decreasing brightness will darken all colors so the original shaded ones will become up to black.
- Color** Adjust the saturation of the color based on your own preference.
- Tint** Use in compensating colour changed with the transmission in the NTSC code.
- Sharpness** Adjust the peaking in the detail of the picture.

 
Color Temp

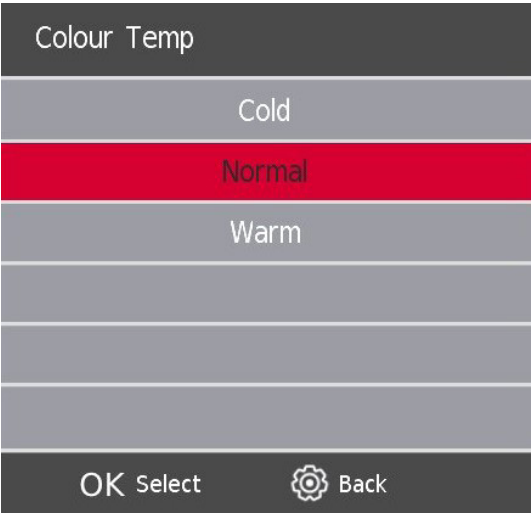

Change the overall color cast of the picture.
Press the ▼ / ▲ button to select Color Temperature, then press the **OK** button to enter sub-menu.
Press the ▼ / ▲ button to select. (Available Picture mode: Cool, Normal, Warm).

- Cold** Increase the blue tone for the white.
- Normal** Increase the sex-linked colors for the white.
- Warm** Increase the red color for the white.

 6.2. Noise Reduction

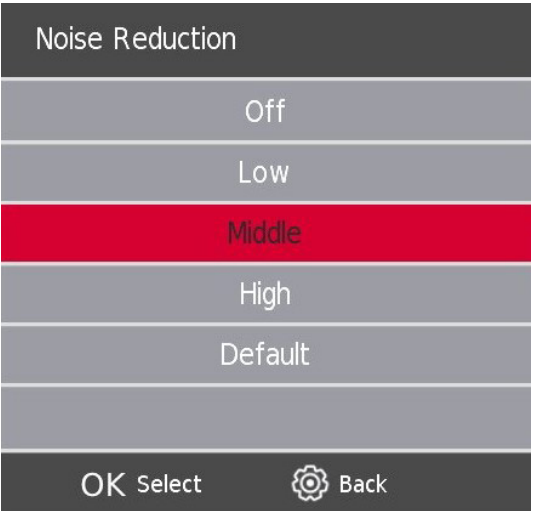


This setting helps to filter out and reduce image noise as well as improve picture quality. Press the ▼ / ▲ button to select Noise Reduction, then press the **OK** button to enter sub-menu.

Off	Select to turn off video noise detection.
Low	Detect and reduce low video noise.
Middle	Detect and reduce moderate video noise.
High	Detect and reduce enhanced video noise.
Default	Set as Default.

7. Sound Menu

Press the **SETTINGS/MENU** button to display the main menu.

 
Press the button to select SOUND in the main menu.

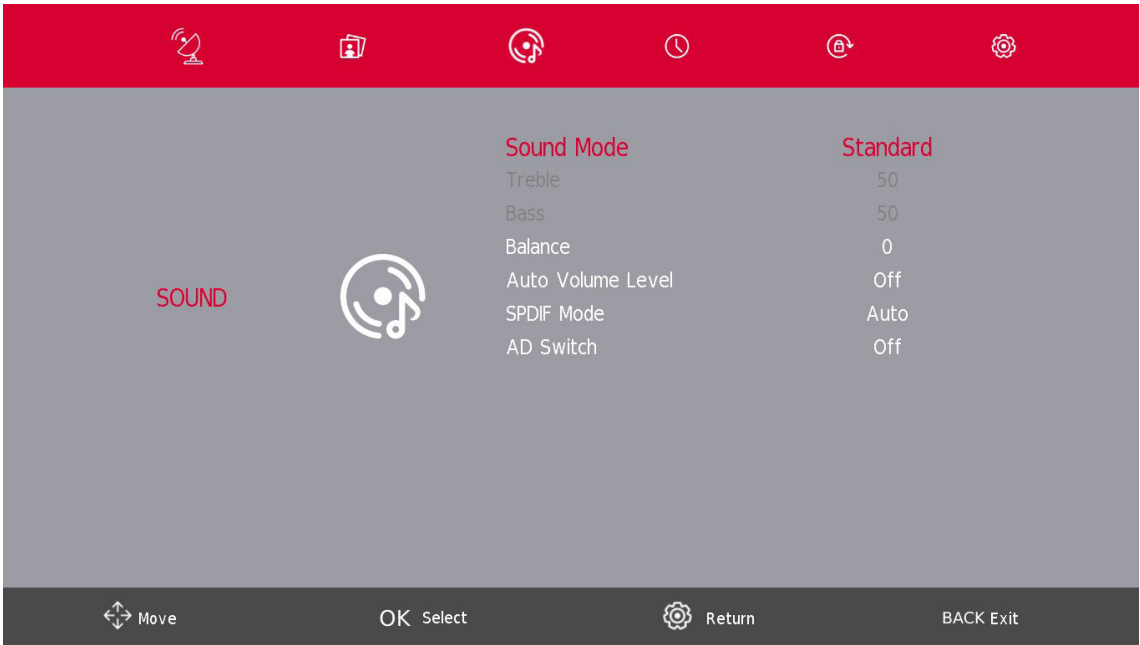

1. Press the ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
2. Press the **Enter** button to adjust.
3. After finishing your adjustment, Press the **SETTINGS/MENU** button to save and **BACK** to return to the previous menu.

7.1. Sound Mode

 Press the ▼ / ▲ button to select Sound Mode, then press the **Enter** button to enter sub-menu. Press the ▼/▲ button to select.

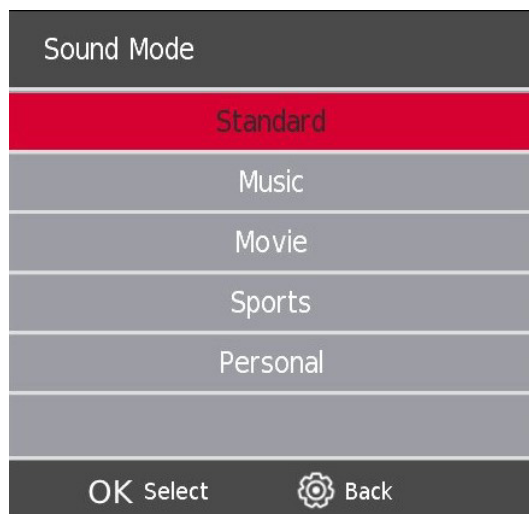

You can change the value of Treble and Bass when the sound is in Personal mode.

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound. Suitable for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals for sports.
Personal	Select to customize picture settings.

NOTE:

The treble and bass are only available in personal mode, you can adjust them as you like.

Balance

Press the ▼ / ▲ button to select the option, Press the ◀ / ▶ button to adjust.

Auto Volume level

Press the ▼ / ▲ button to select Auto Volume level, then press the ◀ / ▶ button to select On or Off.

SPDIF Mode

Press the ▼ / ▲ button to select SPDIF Mode, then press the ◀ / ▶ button to select Off / PCM / Auto.

AD Switch

Press the ▼ / ▲ button to select AD Switch, then press the ◀ / ▶ button to select On or Off.

NOTE:

Balance:	This function can adjust the speaker's output.
Auto Volume:	This function is used for reducing the difference between channel and program's volume automatically.

8. Time Menu

Press the **SETTINGS/MENU** button to display the main menu. Press the ◀/▶ button to select **TIME** in the main menu.



 
- 1. Press the ▼ / ▲ button to select the option that you want to adjust in the **TIME** menu.
- 2. Press the **Enter** button to adjust.
- 3. After finishing your adjustment, Press the **SETTINGS** button to save and return to the previous menu.

Time Zone

Press the ▼ / ▲ button to select Time Zone, then press the **OK/ENTER** button to enter sub-menu.
Press the ▼ / ▲ / ◀/▶ button to select time zone.



8.1. Sleep Timer

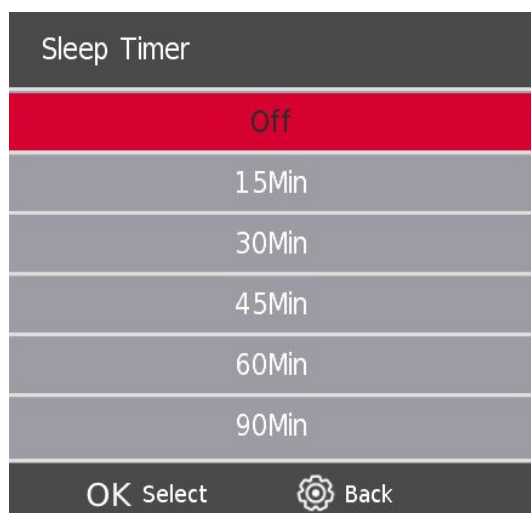


Press the ▼ / ▲ button to select **Sleep Timer**, then press the **OK/ENTER** button to enter sub-menu.

Press the ▼ / ▲ button to select.

(Available options are: Off, 15min, 30min, 45min, 60min, 90min, 120min, 240min).

 8.2. Auto Standby

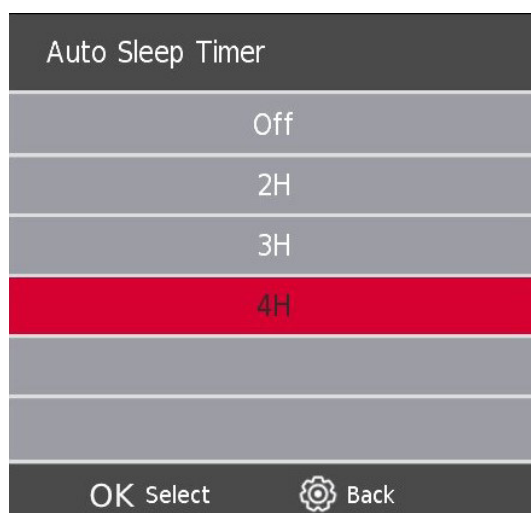

Press the ▼ / ▲ button to select Auto Standby, then press the **OK/ENTER** button to enter sub-menu.

Press the ▼ / ▲ button to select.

Tips: The remote control does not make any operation in the standby time, the TV will switch off automatically. In case you attempt any operation, the TV will reset the time.

8.3. OSD Timer



 
Press the ▼ / ▲ button to select OSD Timer, then press the **OK/ENTER** button to enter sub-menu.
Press the ▼ / ▲ button to select.

9. Lock Menu

9.1. System Lock

Press the **SETTINGS/MENU** button to display the main menu.


Press the ◀ / ▶ button to select **Lock** in the main menu.

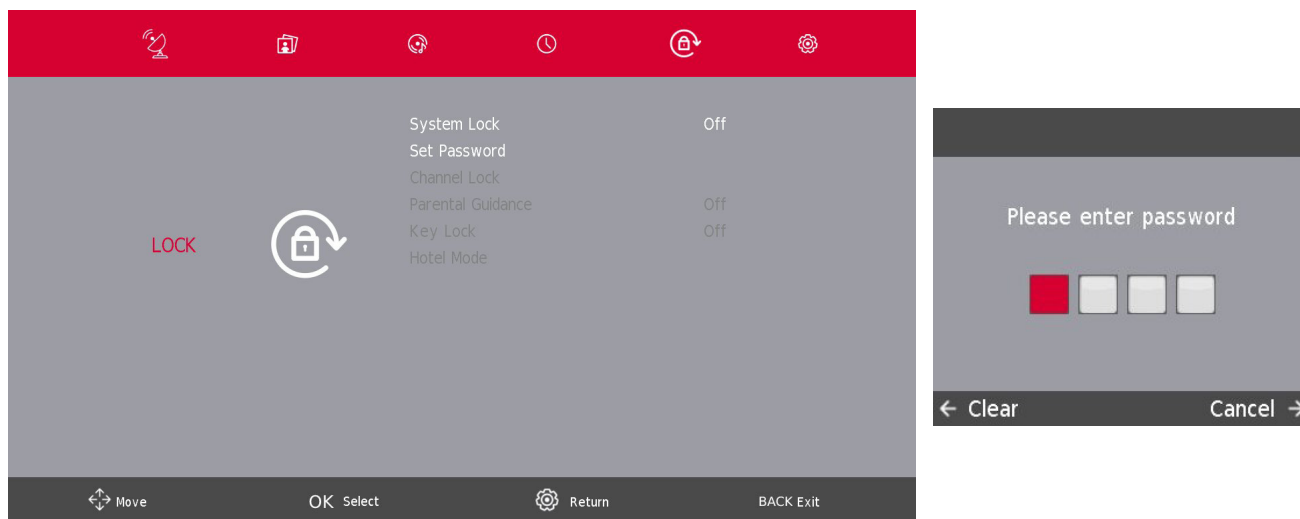

In order options to be selectable, the System Lock should be **ON**, To enable this please enter **TV's Default password 1111**. The System Lock is now active.

1. Press the ▼ / ▲ button to select the option that you want to adjust in the SYSTEM LOCK menu.
2. Press the **Enter** and ◀ / ▶ button to adjust.
3. After finishing your adjustment, Press the **SETTINGS/MENU** button to go back to the previous menu.

 9.2. Set Password

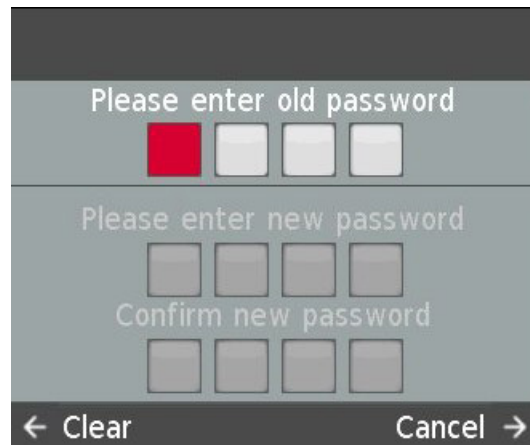

The screen displays a password setup interface. At the top, it says "Please enter old password" with four input boxes; the first box is red, and the others are grey. Below this, it says "Please enter new password" with four grey input boxes. Underneath that, it says "Confirm new password" with four grey input boxes. At the bottom, there are two buttons: "Clear" with a left arrow and "Cancel" with a right arrow.

Press the ▼ / ▲ button to select Set Password, then press the **Enter/OK** button to enter sub-menu to set new password.

In order to set a new password, please enter the **TV's Default password 1111**.

Please continue with a set-up of your new password.

Please use Master pin 9876 to restore the settings of the TV and when you forgot your own password

9.3. Channel Lock




The screen displays a list of channels with a lock icon and a button to lock or unlock them. The channels are:

Channel	Lock Icon	Button
12 Nickelodeon	Lock icon	DTV
26 ESPN3	Lock icon	DTV
27 FOX	Lock icon	DTV
28 RTL Z	Lock icon	DTV
29 ID	Lock icon	DTV
30 CNN	Lock icon	DTV
31 Ketnet	Lock icon	DTV
119 BBC Radio 1	Lock icon	Radio
120 BBC Radio 2	Lock icon	Radio
121 BBC Radio 3	Lock icon	Radio

At the bottom, there is a green circle with the word "LOCK" next to it. Below that, there are three buttons: "OK Select", "1/2", and "Back" with a gear icon.

Press the ▼ / ▲ button to select Channel Lock then press the **Enter/OK** button to enter sub-menu to select. Press the **Green** button to lock or unlock the channel.

 
9.4. Parental Guidance

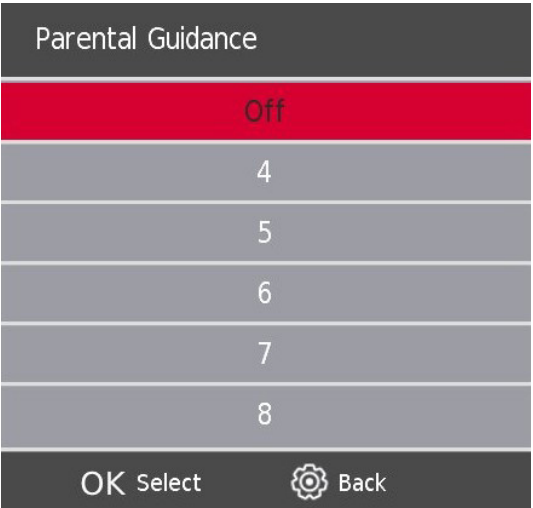

Press the ▼ / ▲ button to select Parental Guidance, then press the **Enter/OK** button to enter sub-menu to select the age which is suitable for your children.

Key Lock

 Press the ▼ / ▲ button to select Key Lock, then press the ◀ / ▶ button to select **Off** or **On**. When Key Lock's status is **ON**, you can't use the Key panel button.

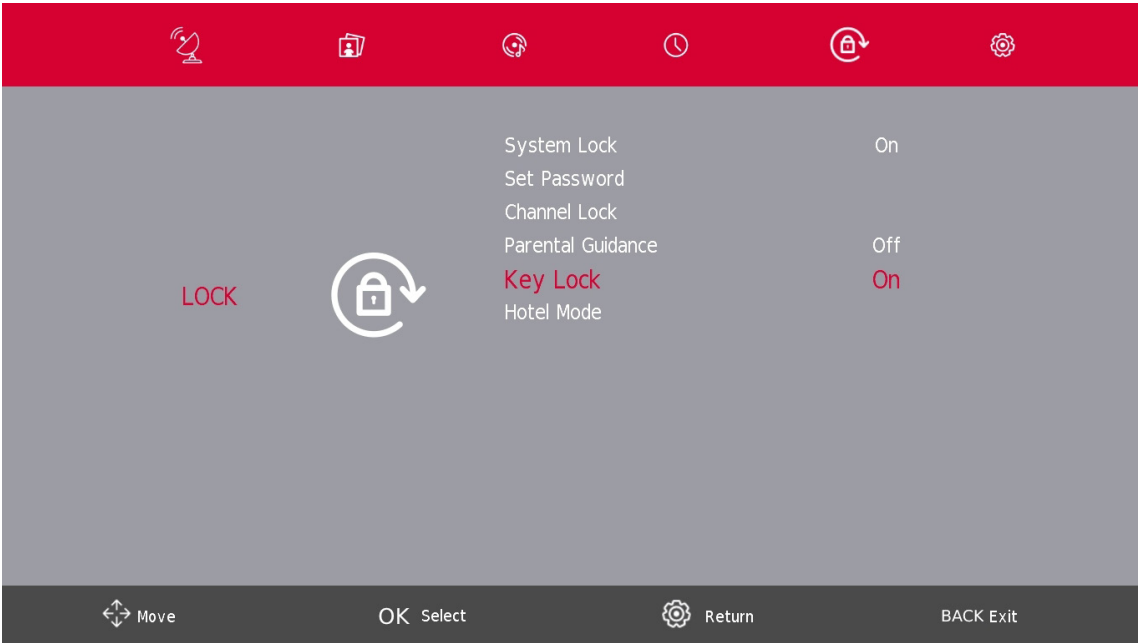

10. Hotel Mode



1. Press the ▼ / ▲ button on the remote control to select hotel mode in the **Lock** menu.
2. Press the **Enter** button on the remote control to enter the sub-menu.
3. After finishing your adjustment, Press the **SETTINGS/MENU** button to save and go back to the previous menu.

Hotel Mode

Press the ▼ / ▲ button to select Hotel Mode, then press the ◀ / ▶ button to select on or off.

Source Lock

Press the ▼ / ▲ button to select Source lock, then press the **Enter/OK** button to enter sub-menu to select.

Default Source

Press the ▼ / ▲ button to select Default Source, then press the **Enter/OK** button to enter sub-menu to select.

Default Prog

 
Press the ▼ / ▲ button to select Default Prog, then press the ◀ / ▶ button to adjust. This function is available when the default source is TV.

Max Volume

Press the ▼ / ▲ button to select Max Volume, then press the ◀ / ▶ button to adjust.

Clear Lock

Press the ▼ / ▲ button to select Clear Lock, then press the **Enter/OK** button to clear the setting you have done before.

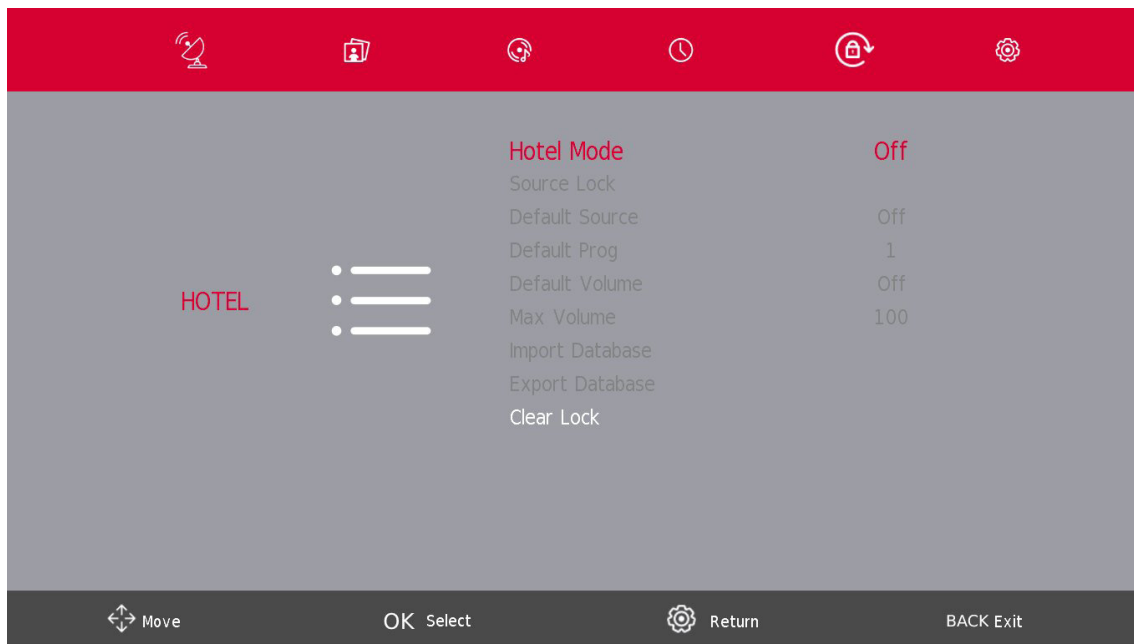

11. Setup Menu

Press the **SETTINGS/MENU** button to display the main menu.

Press the ◀ / ▶ button to select **SETUP** in the main menu.

 


1. Press the ▼ / ▲ button to select the option that you want to adjust in the **SETUP** menu.
2. Press the **Enter/OK** button to adjust.
3. After finishing your adjustment, Press the **Enter/OK** button to save and return to the previous menu.

11.1. OSD (Manu) Language

Select an OSD menu language. By default, English is selected as menu language.

Press the ▼ / ▲ / ◀ / ▶ button to select **Menu Language**.

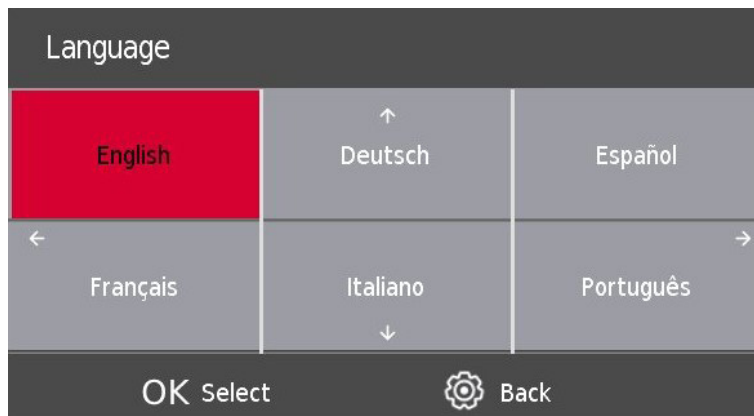

11.2. TT (Teletext) Language

Press the ▼ / ▲ button to select TT Language, then press the **Enter** button to enter sub-menu.

Press the ▼ / ▲ button to select TT language.



11.3. Audio Languages

Press the ▼ / ▲ button to select Audio Languages, then press the **Enter/OK** button to enter sub-menu.

Press the ◀ / ▶ button to select the primary Audio Languages.

Press the ▼ / ▲ / ◀ / ▶ button to select the Audio Languages



11.4. Subtitle Language

Press the ▼ / ▲ button to select the Subtitle Language, then press the **Enter/OK** button to enter sub-menu.

Press the ◀ / ▶ button to select the primary Subtitle Language.

Press the ▼ / ▲ / ◀ / ▶ button to select the Subtitle Language.



11.5. Hearing Impaired

Press the ▼ / ▲ button to select Hearing Impaired, then press the **Enter/OK** button to select or turn On/Off? **On** or **Off**.

11.6. PVR Recording function

By default the SW of the Thomson TVs is without PVR (recording) function. You can download and install the PVR function of your choice on the following link <https://tv.mythomson.com/en/Products/Accessories-Downloads/>. Additional fees may apply.

Instant recording

 
Do you want to record the content you are currently watching? Simply click on the **REC** button on your remote control and the recording will start immediately. Note: The recording will only stop if you manually stop it or turn OFF your TV. To manually stop the recording, click again on the **REC** button and click on Stop.

Timer recording

You have two options on how to schedule a recording ahead of time. You can either set the start and end time manually or you select a specific movie or show you want to record.

Set start and end time:

After you have successfully installed the recording software, the feature "Schedule List" will be available in the Channel menu.

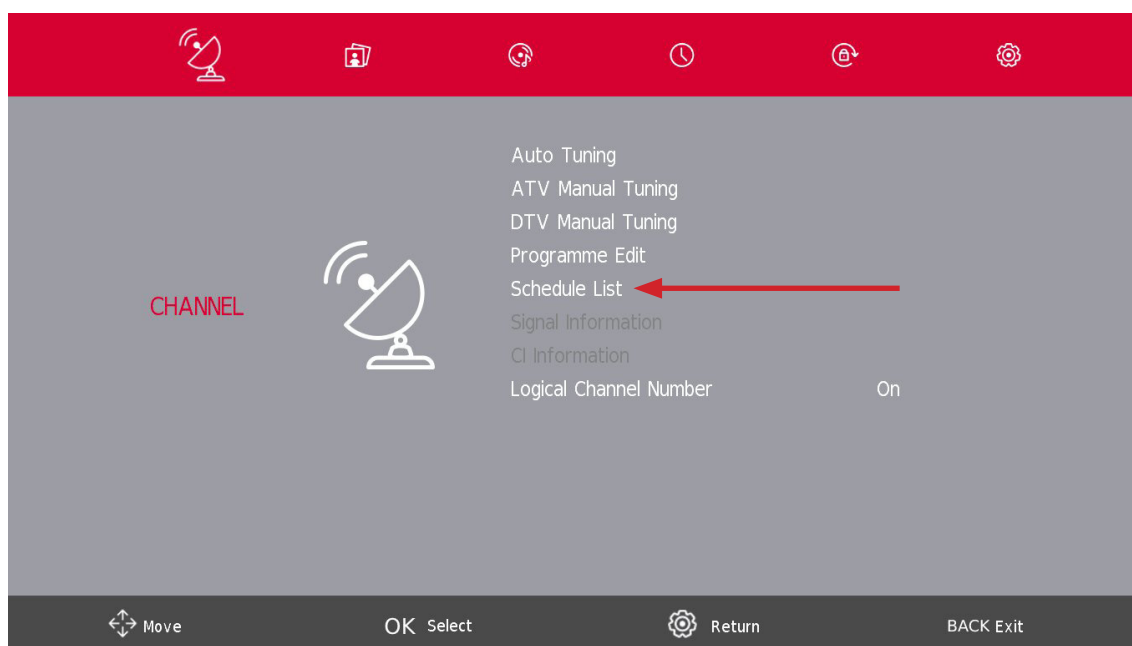

By clicking on Schedule List you can manually select the channel, the start and the end time of your recording. Additionally, you can select how often this recording should happen (once, daily or weekly).

Select a specific movie/show

1. Click on the **GUIDE** button of your remote control. This opens the electronic program guide, an extensive list of available channels and movies.
2. Select the movie or show you want to record. Click on the red button of your remote control to schedule a recording. Click on the green button of your remote control to get a reminder.
3. By repeatedly clicking on the red button, you can select the mode of the recording.

7 Day TV GUIDE			
14:40 - 15:03		02 Jun 2023	Age 06
Een vrouw uit de toekomst beweert Piper te zijn die haar jongere zelf komt beschermen tegen een robot. Ray is erg sceptisch totdat de robot verschijnt.			
02 Jun 2023 14:49:56			02 Jun 2023
12 Nickelodeon	R 14:40-15:03	Henry Danger	Now
26 ESPN3	15:03-15:16	De Casagrandes	Next
27 FOX	15:16-15:40	Huize Herrie	
28 RTL Z	15:40-16:06	Huize Herrie	
29 ID	16:06-16:32	Huize Herrie	
30 CNN	16:32-16:59	Pokémon Ultieme Reizen	
31 Ketnet	16:59-17:15	The Patrick Star Show	
	17:15-17:40	SpongeBob	
<div>RecordRemindPrev DayNext Day</div> <div>Move ViewINFO DetailsBACK Exit</div>			

- R = record once
- D = record daily
- W = record weekly
- A = record automatically

11.7. Aspect Ratio

Press the ▼ / ▲ button to select Aspect Ratio, then press the **Enter/OK** button to enter sub-menu.

Press the ▼ / ▲ button to select aspect ratio. (Available options are: Auto, 4:3, 16:9, Zoom1, Zoom2).

Aspect Ratio	
Auto	
4:3	
16:9	
Zoom1	
Zoom2	
OK Select	 Back

11.8. Blue Screen

Press the ▼ / ▲ button to select Blue Screen, then press the **Enter/OK** button to select **On** or **Off**.

11.9. First Time Installation

Press the ▼ / ▲ button to select First time installation, then press the **Enter/OK** button to proceed.

11.10. Factory Reset

 
Press the ▼ / ▲ button to select **Reset**, then press the **Enter/OK** button to enter sub-menu.

11.11. Software Update (USB)


Press the ▼ / ▲ button to select Software Update (USB), plug your USB device in the USB slot, then press the **Enter/OK** button to update the right software.

11.12. Environment - Home mode/Shop Mode

Press the ▼ / ▲ button to select the desired environment, e.g. Home Mode or Shop Mode.

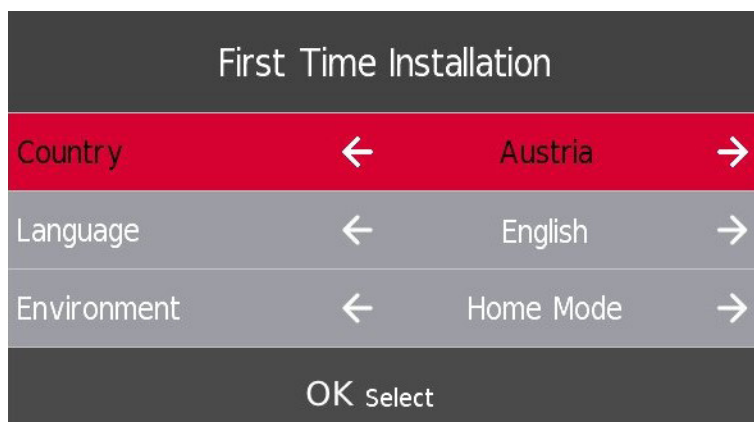

 11.13. HDMI CEC (Need to support the HDMI CEC/ARC function)

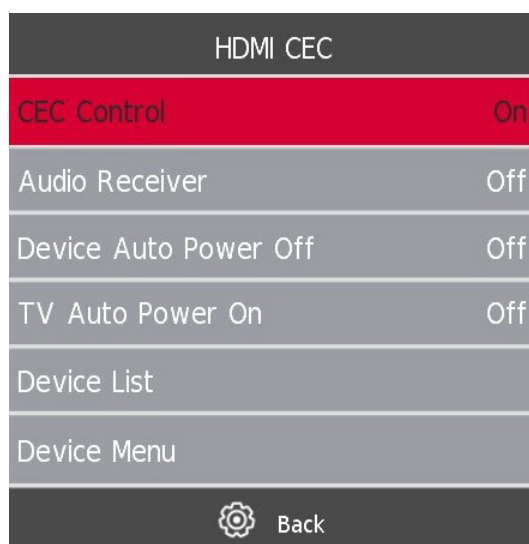

Press the ▼ / ▲ button to select HDMI CEC, then press the **Enter/OK** button to enter the sub-menu.

HDMI CEC

Press the ◀ / ▶ button to turn the HDMI CEC on or off.

HDMI ARC

Press the ◀ / ▶ button to turn the HDMI ARC on or off.

Auto Standby

Press the ◀ / ▶ button to turn the Auto Standby on or off.

 
Device List

Press the **Enter** button to open the main menu of device.

12. Media operation

Note: Before operating **Media menu**, plug in the USB device, then press the **Source** button to set the Input Source to **Media**.

Press the **▼ / ▲** button to select **Media** in the Source menu, then press the **Enter/OK** button to proceed.

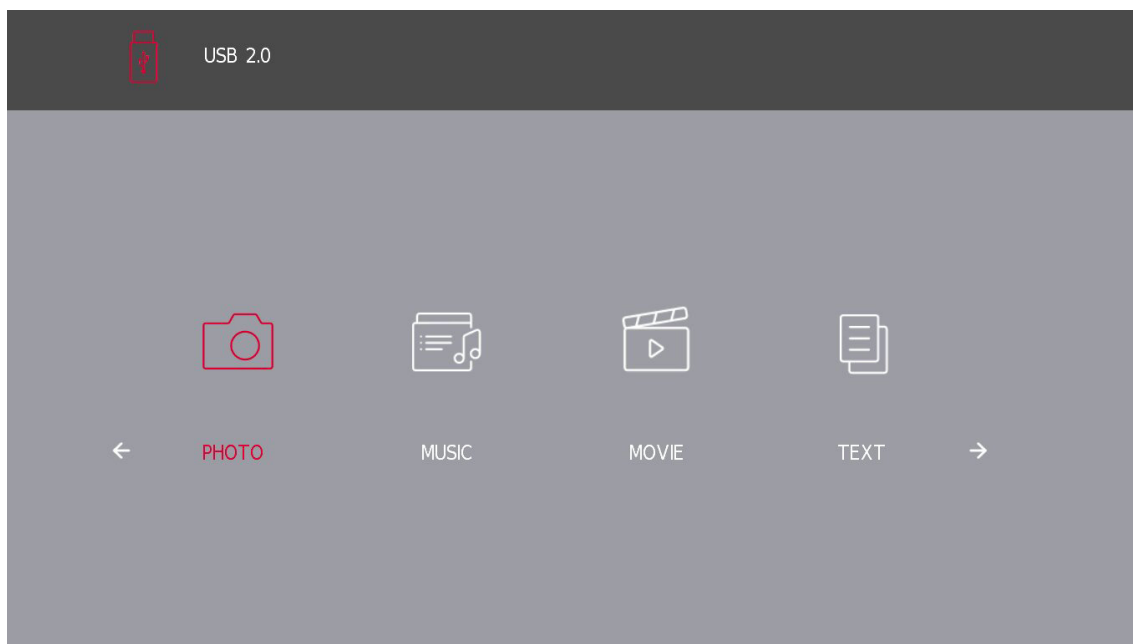

Press the **◀ / ▶** button to select the option you want to adjust in the main **Media menu**, then press the **Enter/OK** button for selection.

 
12.1. Photo Menu

 
Press the **◀ / ▶** button to select **PHOTO** in the main menu, then press the **Enter/OK** button to proceed.

Press the **BACK** button to return to the previous menu and to quit.

Press the **◀ / ▶** button to select the file you want to watch in the file selecting menu, then press the **Enter/OK** button to display the picture.

When highlighting the option you select, the file information will appear on the right and the picture will be previewed in the center.

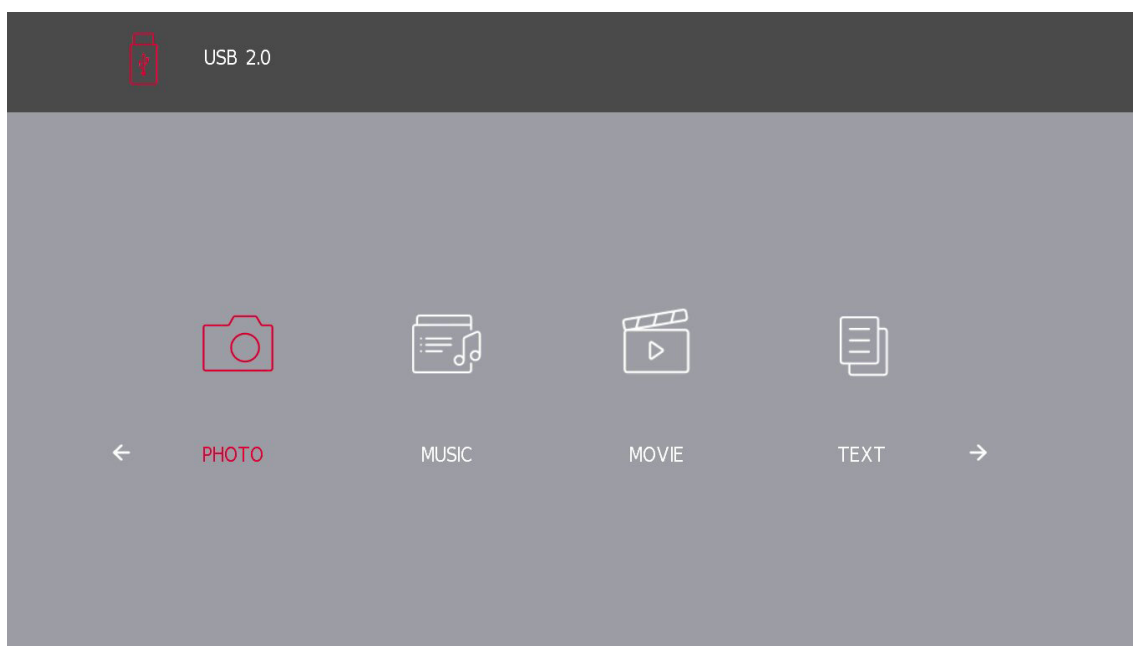

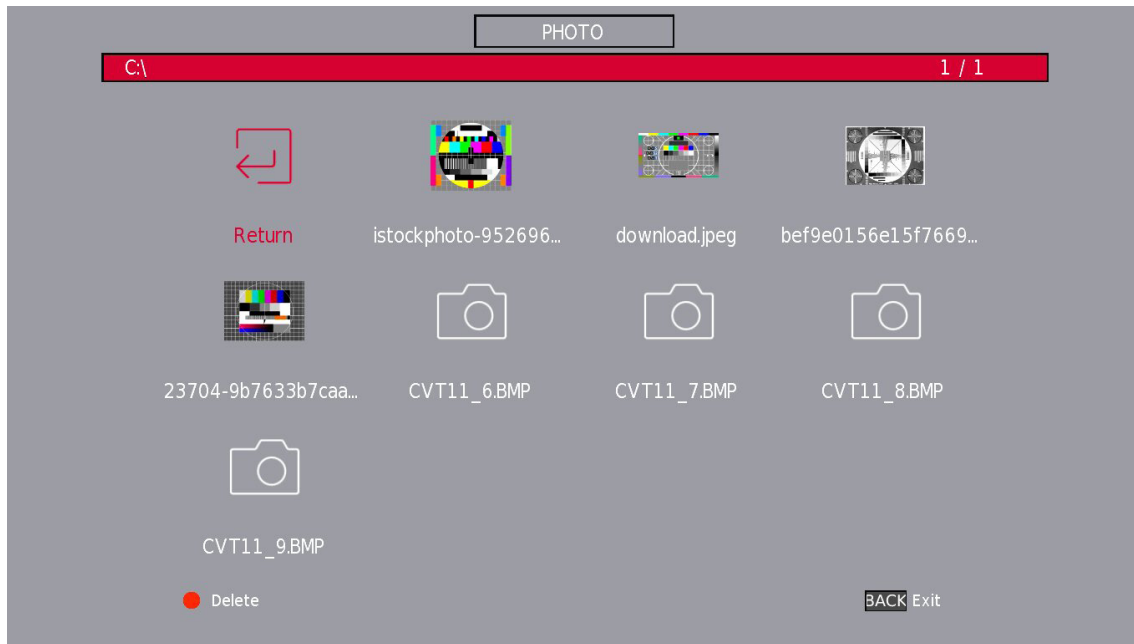



12.2. Music Menu

Press the ◀/▶ button to select **MUSIC** in the main menu, then press the **Enter/OK** button to proceed. Press the **BACK** button to return to the previous menu.

Press the ◀/▶ button to select drive disk you want to watch, then press the **Enter/OK** button to proceed.

  
Press the ◀/▶ button to select return option to the previous menu.

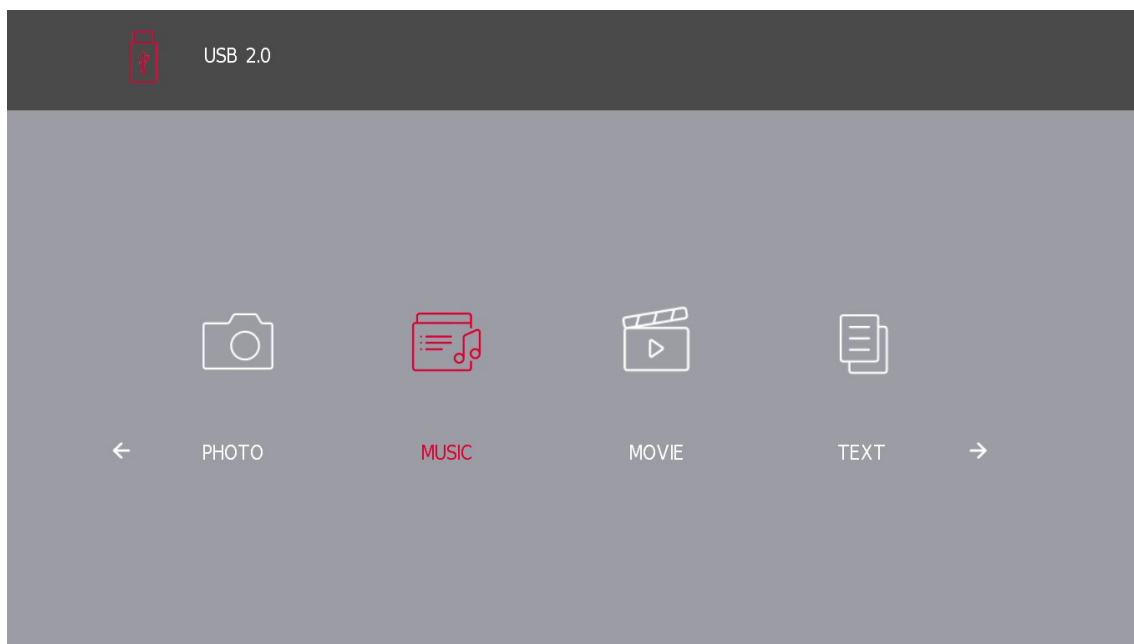

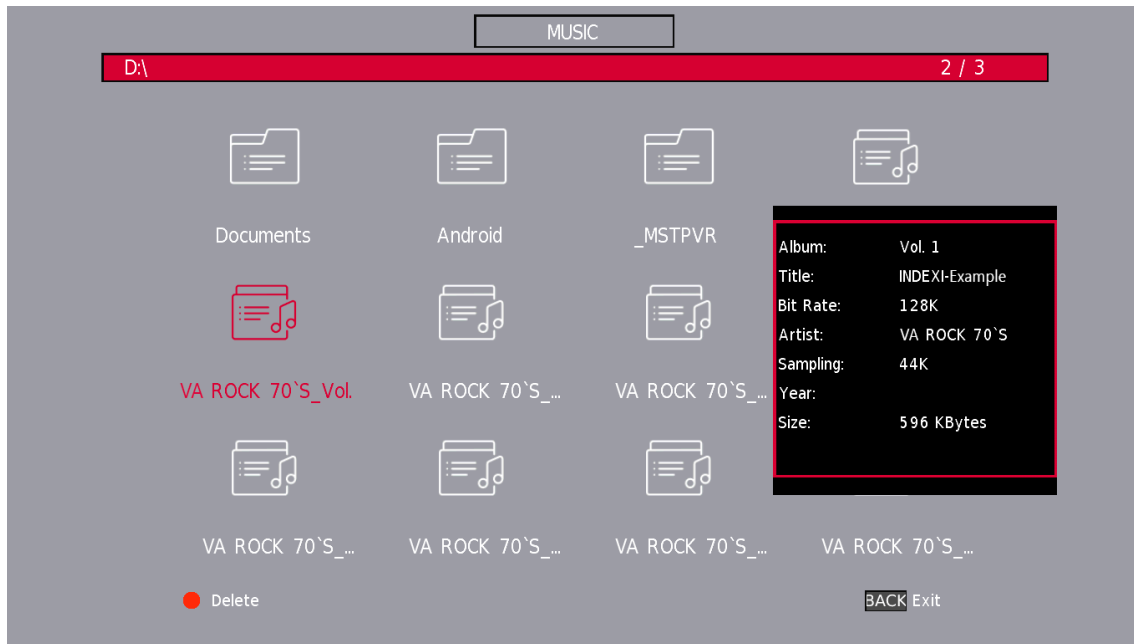

12.3. Movie Menu

 
Press the ◀/▶ button to select **MOVIE** in the main menu, then press the **Enter/OK** button to proceed. Press the **BACK** button to return to the previous menu and to quit.

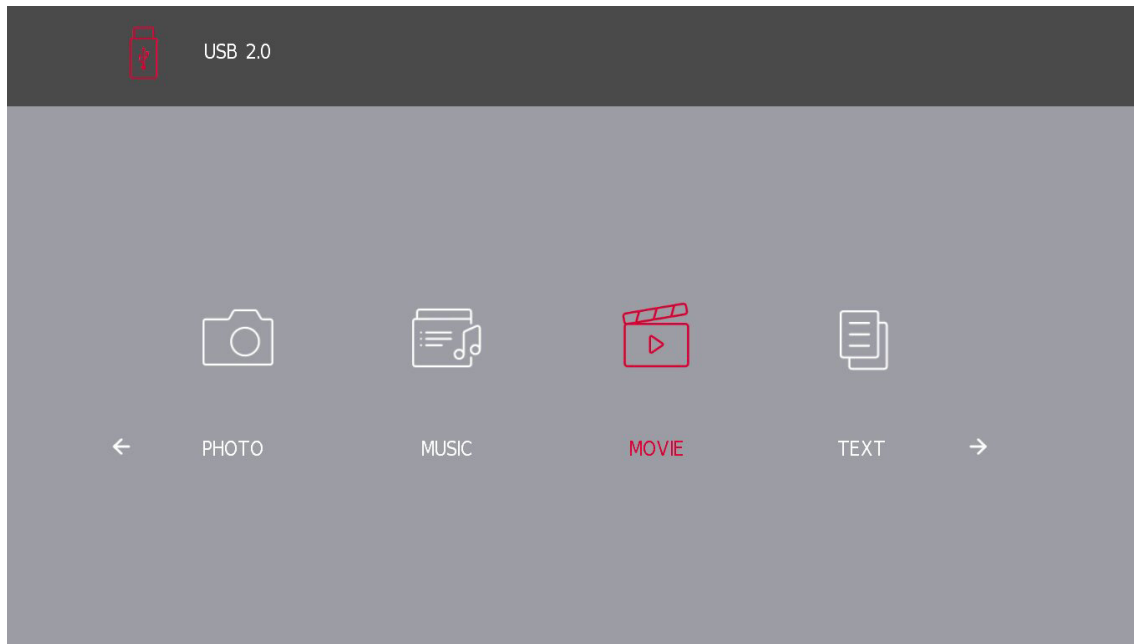

Press the ◀ / ▶ button to select the drive disk you want to watch, then press the **Enter/OK** button to proceed.
 Press the **Enter/OK** button to play the selected movie.
 Press the **Enter/OK** button to select the video file, then press the **Enter/OK** button to operate.
 Press the **BACK** button to go back to the previous menu and **Enter/OK** button to quit the entire menu.

12.4. Text Menu

 Press the ◀ / ▶ button to select the **TEXT** in the main menu, then press the **Enter/OK** button to enter.
 Press the **BACK** button to return to the previous menu.
 Press the ◀ / ▶ button to select the drive disk you want to watch, then press the **Enter/OK** button to enter.
 Press the ◀ / ▶ button to select the return option to go back to the previous menu.
 *Supported text formats: .txt files.

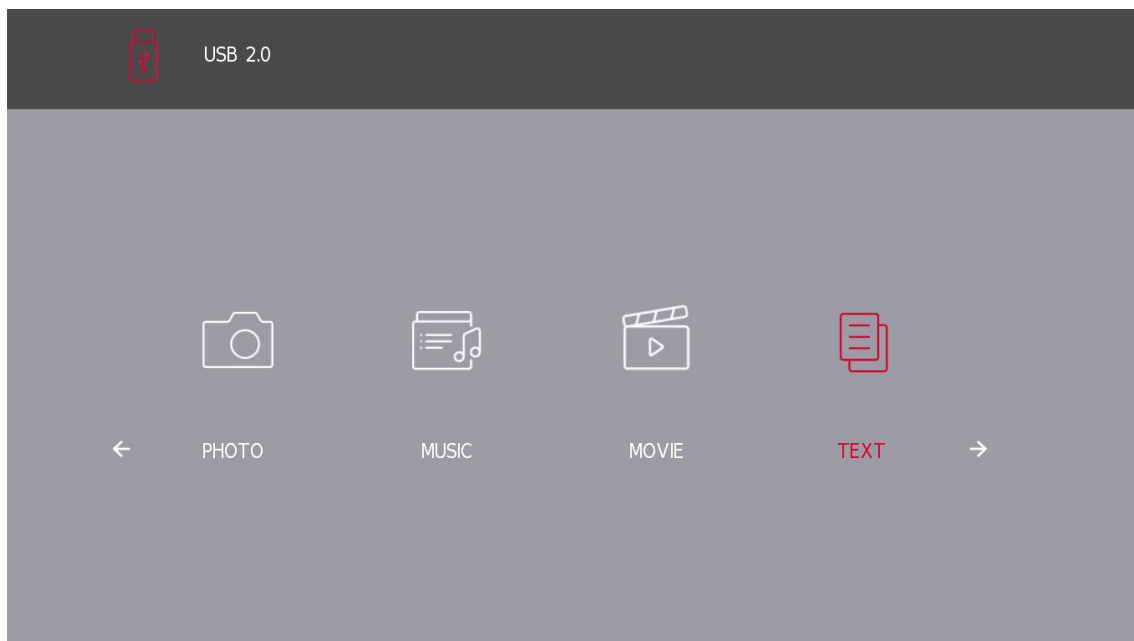

13. Troubleshooting

No power	<ul style="list-style-type: none"> • Check if the AC cord of the TV is plugged in or not. If there is still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not received properly	<ul style="list-style-type: none"> • Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation or adjust the direction of the external antenna. • If you use an indoor antenna, under certain circumstances signal reception may be more difficult. Adjust the direction of the antenna for optimum reception. If this does not improve reception; you may have to switch to an external antenna.
No picture	<ul style="list-style-type: none"> • Check if the antenna at the back of the TV is connected properly. • View other channels to see if the problem still occurs.
Video appears with no audio	<ul style="list-style-type: none"> • Try increasing the volume. • Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> • Try adjusting the contrast and brightness.
Static noise affects video and audio quality	<ul style="list-style-type: none"> • Check if the antenna at the back of the TV is connected properly.
Broken lines on screen	<ul style="list-style-type: none"> • Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.
Remote does not work	<ul style="list-style-type: none"> • Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct or try using new batteries with the remote control. • The TV will go into Standby mode if it receives no response in a few minutes.
No video (PC mode)	<ul style="list-style-type: none"> • Please check if the cable is connected to the VGA port correctly, or if the cable is bent in some places.
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> • Enter the main menu and adjust the vertical placement to eliminate the vertical line.
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> • Adjust the horizontal placement of the screen to clear any horizontal lines.
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> • Adjust the brightness or contrast in the main menu.
No response from the PC	<ul style="list-style-type: none"> • Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appear when a device is connected to the RCA port	<ul style="list-style-type: none"> • Make sure you are using a cable of good quality.
Problems are unresolved	<ul style="list-style-type: none"> • Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact • the service center.

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

14. Technical specifications

	24HD2S13	32HD2S13 32HD2S13W	40FD2S13 40FD2S13W	43FD2S13
Operating Voltage	100-240 V, 50-60 Hz	100-240 V, 50-60 Hz	100-240 V, 50-60 Hz	100-240 V, 50-60 Hz
Audio (DTS HD)	no	no	no	no
Audio Output Power	2 x 3	2 x 8	2 x 8	2 x 8
Power Consumption (W)	36 W	56 W	90 W	90 W
Networked Standby Power Consumption (W)	< 0,5	< 0,5	< 0,5	< 0,5
Weight (Kg)	2.25	3.35	5.35	6
TV Dimensions DxLxH (with feet) (mm)	535x151x353	719x151x456	892x172x559	955x172x590
TV Dimensions DxLxH (without feet) (mm)	535x75x318	719x82x423	892x84x509	955x85x555
Display	24"/60 cm	32"/80 cm	40"/101 cm	43"/109 cm

15. Country restrictions

Intended for indoor use only in EU member states and EFTA states.

AT BE BG CH CY CZ DE DK EE ES FI FR GR HR HU IE IS
IT LI LT LU LV MT NL NO PL PT RO SI SK SE TR UK (NI)

16. Licences

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered marks of HDMI Licensing Administrator, Inc. in the United States, and other countries.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. All rights reserved. All product names are trademarks or registered trademarks of their respective owners. © 2023

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

This product has been manufactured and sold under the responsibility of StreamView GmbH. © THOMSON, and the THOMSON logo are trademarks used under license by StreamView GmbH, Franz-Josefs- Kai 13, 1010 Vienna, Austria – further information at www.thomson-brand.com.

