


# ***THOMSON***

---

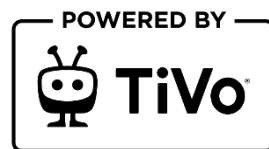

[tv.mythomson.com](http://tv.mythomson.com)



[tv.mythomson.com/  
en/Support/FAQs/](http://tv.mythomson.com/en/Support/FAQs/)

# SMART TV

32HT2S35, 40FT2S35, 43FT2S35, 50UT4S35, 55UT4S35

## IMPORTANT

Please read this manual carefully before installing and operating the TV.

Keep this manual handy for further reference.

### Contents

1	Safety Information .....	8
1.1	Markings on the product.....	9
1.2	Warning .....	9
1.3	Wall mounting warnings.....	10
1.4	Simplified EU declaration of conformity .....	10
1.5	Apps and performance.....	11
1.6	Data protection .....	11
1.7	Environmental Information .....	11
2	Introduction and stand installation .....	12
2.1	Unpacking and installation .....	12
3	TV buttons and connections .....	14
3.1	TV button.....	14
3.2	Connections .....	15
4	Remote Control .....	16
5	TV installation .....	17
5.1	Set your TV .....	17
5.2	Connect antenna and power .....	17
6	Initial setup .....	18
6.1	Language selection .....	18
6.2	Country selection .....	18
6.3	TV Environment .....	18
6.4	Picture Mode .....	18
6.5	Consent Settings .....	19
6.6	Terms and Conditions .....	19
6.7	Network Settings .....	19
6.8	Bluetooth pairing .....	20

6.9	Tuner option.....	20
6.9.1	Digital Aerial .....	20
6.9.2	Digital Cable .....	20
6.9.3	Satellite .....	21
6.9.4	Analogue.....	22
7	Media Playback .....	22
8	Home.....	24
8.1	Applications .....	24
8.1.1	My Apps Carousel .....	24
8.1.2	Manage Apps Screen .....	24
8.2	Navigation Carousel .....	25
8.3	Browse Screens.....	25
8.4	Content details .....	25
8.4.1	Watch Now.....	25
8.4.2	Watchlist.....	25
8.4.3	Rate .....	25
8.4.4	Report Content.....	26
8.4.5	Browse All Episodes.....	26
8.5	Text Search .....	26
8.6	Voice Search and Control .....	26
9	Settings.....	26
9.1	Devices.....	26
9.1.1	Pair Audio Link Device .....	26
9.1.2	Pair Remote Control or Other Device .....	27
9.1.3	Virtual Remote .....	27
9.1.4	Audio Video Sharing .....	27
9.1.5	ALLM (UHD) .....	27
9.1.6	Timer of No Signal .....	27
9.1.7	CEC .....	27
9.1.8	CEC Auto Power On .....	27
9.2	Picture .....	28
9.2.1	Mode .....	28

9.2.2	Contrast.....	28
9.2.3	Brightness.....	28
9.2.4	Sharpness .....	28
9.2.5	Color .....	28
9.2.6	Energy Saving.....	28
9.2.7	Picture Zoom.....	29
9.2.8	Advance Settings .....	29
9.2.8.1	Dynamic Contrast .....	29
9.2.8.2	Colour Temp .....	29
9.2.8.3	Blue Stretch.....	29
9.2.8.4	Micro Dimming.....	29
9.2.8.5	Noise Reduction.....	29
9.2.8.6	De-contour.....	29
9.2.8.7	MEMC (UHD) .....	29
9.2.8.8	Film Mode .....	30
9.2.8.9	Skin Tone.....	30
9.2.8.10	Colour Shift.....	30
9.2.8.11	Colour Tuner.....	30
9.2.8.12	Colour Space (UHD).....	30
9.2.8.13	Gamma .....	30
9.2.8.14	Reset.....	31
9.3	Sound .....	31
9.3.1	Dolby Atmos (UHD) .....	31
9.3.2	Dolby Audio(HD/FHD) / Mode (UHD) .....	31
9.3.3	DTS Virtual:X .....	31
9.3.4	Sound Output .....	31
9.3.5	eARC (UHD).....	32
9.3.6	AVL (Automatic Volume Limiting) .....	32
9.3.7	Advanced Settings .....	32
9.3.7.1	Equalizer.....	32
9.3.7.2	Dynamic Bass .....	32
9.3.7.3	DTS DRC .....	32

9.3.7.4	Sound Mode.....	33
9.3.7.5	Digital Out.....	33
9.3.7.6	Headphone.....	33
9.3.7.7	Balance.....	33
9.3.7.8	Reset.....	33
9.4	Network.....	33
9.4.1	Network Type.....	33
9.4.2	Scan Wireless Network.....	34
9.4.3	Disconnect.....	34
9.4.4	Press WPS on your Wi-Fi router.....	34
9.4.5	Internet Speed Test.....	34
9.4.6	Advanced Settings.....	34
9.4.7	Network Standby Mode.....	34
9.5	Installation.....	34
9.5.1	Automatic Channel Scan (Retune).....	34
9.5.2	Manual Channel Scan.....	35
9.5.3	Network Channel Scan.....	35
9.5.4	Analogue Fine Tune.....	35
9.5.5	Satellite Settings.....	35
9.5.6	Signal Information.....	35
9.5.7	Factory Reset.....	35
9.6	System.....	35
9.6.1	Accessibility.....	35
9.6.1.1	High Contrast.....	36
9.6.1.2	Key Stroke Delay.....	36
9.6.1.3	Subtitle.....	36
9.6.1.4	Hard Of Hearing (UHD).....	36
9.6.1.5	Audio Description (UHD).....	36
9.6.1.6	Dialogue Enhancement (UHD).....	36
9.6.1.7	Spoken Subtitles (UHD).....	36
9.6.1.8	Magnification.....	36
9.6.1.9	Minimap.....	37

9.6.1.10	Highlight programmes with (UHD)	37
9.6.2	Language	37
9.6.3	Conditional Access (UHD)	37
9.6.4	Parental	37
9.6.5	Date/Time	38
9.6.6	Sources	38
9.6.7	Netflix	38
9.6.8	TiVo	38
9.6.9	Voice Assistant	38
9.6.10	More	38
9.6.10.1	Menu Timeout	38
9.6.10.2	Home Screen Saver	38
9.6.10.3	Standby Mode LED	38
9.6.10.4	Device Identification(UHD)	39
9.6.10.5	Software Upgrade	39
9.6.10.6	Application Version	39
9.6.10.7	Auto Power Down	39
9.6.10.8	Standby On Mode	39
9.6.10.9	Sleep Timer	39
9.6.10.10	Store Mode	39
9.6.10.11	Power Up Mode	39
9.6.10.12	OSS	39
9.6.10.13	Change Friendly Name	40
9.6.10.14	Application Priority (UHD)	40
9.6.10.15	Dolby Notification (UHD)	40
9.6.10.16	Manuals	40
9.7	Legal	40
9.7.1	Privacy Policies	40
9.7.2	Terms & Conditions	40
9.7.3	Consent Settings	40
9.7.4	Advertising ID	40
9.7.5	Company Information	41

9.7.6	Transparency Disclosure.....	41
9.7.7	Cookies.....	41
9.7.7.1	Show All Cookies .....	41
9.7.7.2	Delete All Cookies .....	41
9.7.7.3	Do Not Track.....	41
10	General TV Operation .....	41
10.1	Using the Channel List.....	41
10.2	Configuring Parental Settings.....	42
10.3	Electronic Programme Guide .....	43
10.4	Teletext Services .....	44
10.5	Software Upgrade .....	44
11	Connectivity .....	45
11.1	Wired Connectivity.....	45
11.2	Wireless Connectivity .....	46
11.3	Wireless Display .....	47
11.4	Internet Browser.....	47
11.5	HbbTV System .....	48
12	Alexa Ready (HD/FHD).....	48
13	Google Assistant.....	50
14	Troubleshooting .....	52
15	Technical specifications .....	52
15.1	Restrictions.....	52
15.2	Licenses .....	53

# 1 Safety Information



In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains.

The mains plug is used to disconnect the TV set from the mains and therefore it must remain readily operable. If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV is in standby mode or switched off.

**Note:** Follow the onscreen instructions for operating the related features.

**Important:** Please read these instructions fully before installing or operating the TV.

## WARNING

**This device is intended to be used by persons (including children) who are capable / experienced of using such a device unsupervised, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.**

- Use this TV set at an altitude of less than 2000 meters above sea level, in dry locations and in regions with moderate or tropical climates.
- The TV set is intended for household and similar general use but may also be used in public places.
- For ventilation purposes, leave at least 10cm of free space around the TV.
- The ventilation should not be impeded by covering or blocking the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- The power cord plug should be easily accessible. Do not place the TV, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, do not unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.
- Do not expose the TV to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the TV (e.g., on shelves above the unit).
- Do not expose the TV to direct sunlight and do not place open flames such as lit candles on the top of or near the TV.
- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor or inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of reach of babies, children and domestic animals.
- Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over-tighten the screws and mount the stand rubbers properly.
- Do not dispose of the batteries in fire or with hazardous or flammable materials.






- Do not use household cleaning agents to clean the TV. Instead clean the screen with a soft, dry cloth. Before cleaning, unplug the device for safety.

## WARNING

- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones or headphones can cause hearing loss.

**ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.**

 Caution	Serious injury or death risk
 Risk of electric shock	Dangerous voltage risk
 Maintenance	Important maintenance component

## 1.1 Markings on the product

The following symbols are used on the product as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



Class II Equipment: This appliance is designed in such a way that it does not require a safety connection to electrical earthing.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. Please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

## 1.2 Warning

Do not ingest the battery, due to Chemical Burn Hazard. This product or the accessories supplied with the product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

A television may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.

- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on top of the television or furniture on which the television is placed on.
- The equipment is only suitable for mounting at heights  $\leq 2$  m.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Apparatus connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing – and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a television distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator).

### **1.3 Wall mounting warnings**

- Read the instructions before mounting your TV on the wall.
- The wall mount kit is optional. You can obtain it from your local dealer if it is not supplied with your TV.
- Do not install the TV on the ceiling or on an inclined wall.
- Use the specified wall mounting screws and other accessories.
- Tighten the wall mounting screws firmly to prevent the TV from falling. Do not overtighten the screws.

Figures and illustrations in this user manual are provided for reference only and may differ from the actual product appearance. Product design and specifications may be changed without notice.

### **1.4 Simplified EU declaration of conformity**

Hereby, StreamView GmbH declares that the radio equipment type product device Smart TV is complying with Directive 2014/53/EU.

## 1.5 Apps and performance

Download speed depends on your Internet connection. Some apps might not be available in your country or region. Netflix is available in selected countries:

<https://help.netflix.com/node/14164> Streaming membership is required. More information at [www.netflix.com](http://www.netflix.com).

## 1.6 Data protection

The application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. They may use such information to improve products or to provide services or technologies which do not personally identify you.

Additionally, some third-party services, already provided in the device or installed by you after purchasing the product, may request a registration with your personal data. Some services may collect personal data without providing additional warnings. StreamView GmbH cannot be held liable for a possible breach of data protection by third-party services.

## 1.7 Environmental Information

This television is designed to be environmentally friendly. To reduce energy consumption, you can follow these steps:

If you set the Energy Saving option to Minimum, Medium, Maximum or Auto, the TV will adjust the energy consumption accordingly. Set as Off to turn this setting off. If you would like to set the backlight to a fixed value set as Custom, highlight Backlight (will be located under the Energy Saving setting) and then adjust manually using the Left or Right directional button on the remote.

Note: Available energy saving options may differ depending on the selected Mode in the Settings>Picture menu.

The Energy Saving option can be found in the Settings>Picture menu. Go to Home screen and highlight Settings in the navigation carousel and press OK to access the Settings menu. Note that some picture settings will be unavailable to be changed.

You can also turn the screen off using the Screen Off option, if you want to hear the sound only and don't need to watch. If pressed Right button or Left button consecutively Screen Off option will be selected and "Screen will be off in 15 seconds." message will be displayed on the screen. Select Proceed and press OK to turn the screen off immediately. If you don't press any button, the screen will be off in 15 seconds. Press any button on the remote or on the TV to turn the screen on again.

Note: The Screen Off option is not available, if the Mode is set to Game.

When the TV is not in use, please switch it off or disconnect the TV from the mains plug. This will also reduce or stop energy consumption.

If the TV does not receive any input signal (e.g. from an aerial or HDMI source) for 3 minutes, it will go into standby. When you next switch-on, the following message will be displayed: "TV switched to stand-by mode automatically because there was no signal for a long time." You can disable this functionality by setting the Timer of No Signal option in the Settings>Devices menu accordingly.

The Auto Power Down option (in the Settings>System>More menu) could have been set to a value between 1 and 8 hours by default. If this setting is not set as Off and the TV has been left on and not been operated during the set time, it will switch into standby mode after the set time has expired. When you next switch-on the TV, the following message will be displayed: "TV switched to stand-by mode automatically because no operation was made for a long time." Before the TV switches into standby mode a dialogue window will be displayed. If you do not press any button the TV will switch into the standby mode after a waiting period of about 5 minutes. You can highlight Yes and press OK to switch the TV into standby mode immediately. If you highlight No and press OK, the TV will remain on. You can also choose to cancel the Auto Power Down function from this dialogue. Highlight Disable and press OK, the TV will remain on and the function will be set as Off. You can enable this function again by changing the setting of the Auto Power Down option from the Settings>System>More menu


## **2 Introduction and stand installation**

Thank you for choosing our product. You'll soon be enjoying your new TV. Please read these instructions carefully. They contain important information which will help you get the best from your TV and ensure safe and correct installation and operation.

### **2.1 Unpacking and installation**


Take out the feet and the TV from the packing and put the feet onto a table or any other even surface.

- Use a flat and firm table or similar even surface that can support the weight of the TV.
- Do not hold the TV on the screen panel.
- Make sure not to scratch or break the TV.

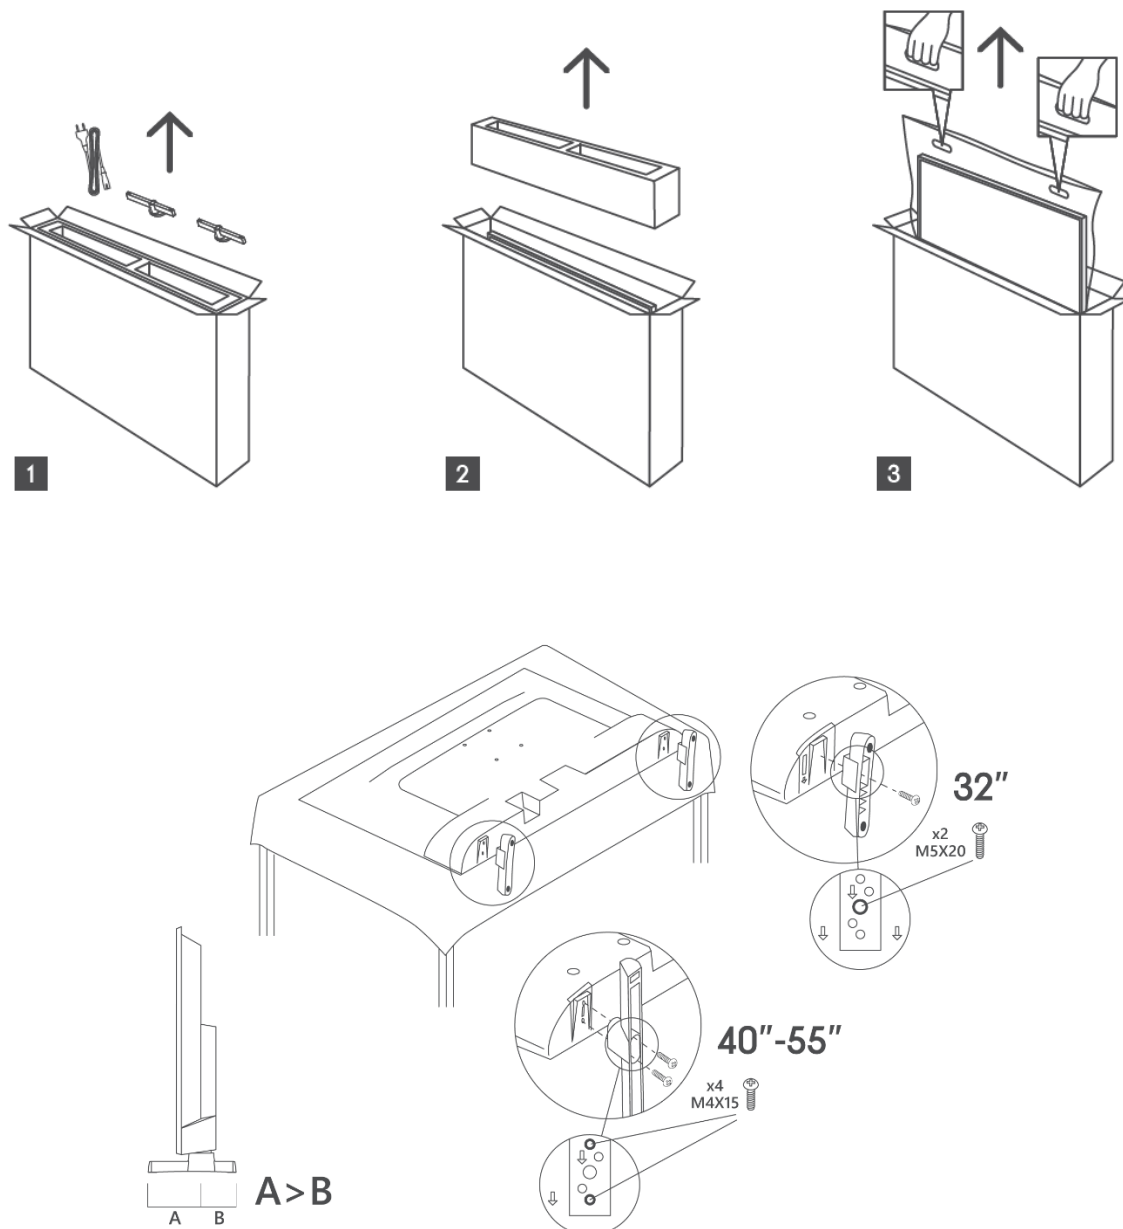

Your TV is prepared for a VESA-compliant wall mount bracket. This is not supplied with your TV. Contact your local dealer to purchase the recommended wall mount bracket.  
Holes and measurements for wall mount bracket installation:

	W (mm)	H (mm)	D (mm)	L <sub>A</sub> (mm)	L <sub>B</sub> (mm)
<b>32"</b>	75	75	4 (M4)	7-10	5-6
<b>40"</b>	100	100	4 (M4)	7-10	5-6
<b>43"</b>	100	100	4 (M4)	7-10	5-6
<b>50"</b>	200	200	6 (M6)	7-10	8-9
<b>55"</b>	200	200	6 (M6)	7-10	8-9

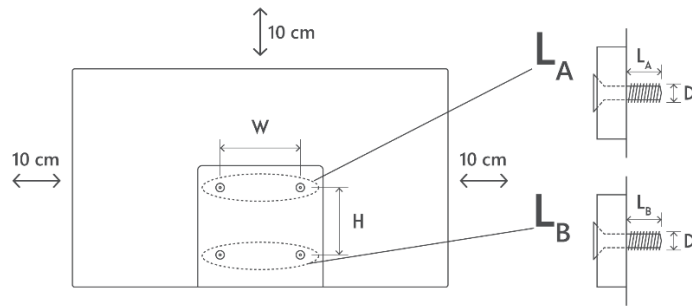

### 3 TV buttons and connections

#### Caution:



If you want to connect a device to the TV, make sure that both the TV and the device are turned off before making any connection. After the connection is done, you can turn on the units and use them.




Do not touch or be close to the HDMI, USB terminals, and prevent electrostatic discharge to disturb these terminals while in USB operation mode, or it will cause the TV to stop working or cause an abnormal status.

#### Note:


The actual position and arrangement of ports may be different from model to model.

#### 3.1 TV button

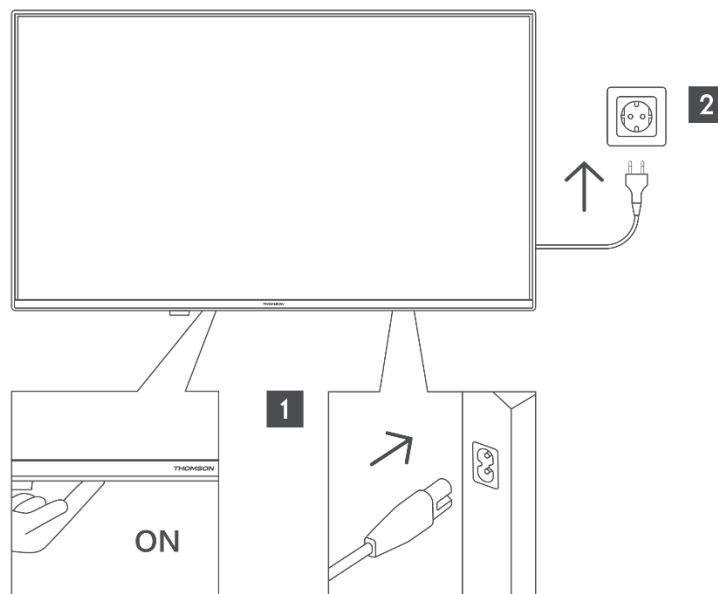

Press this button in standby mode to turn on / off the TV.

## 3.2 Connections

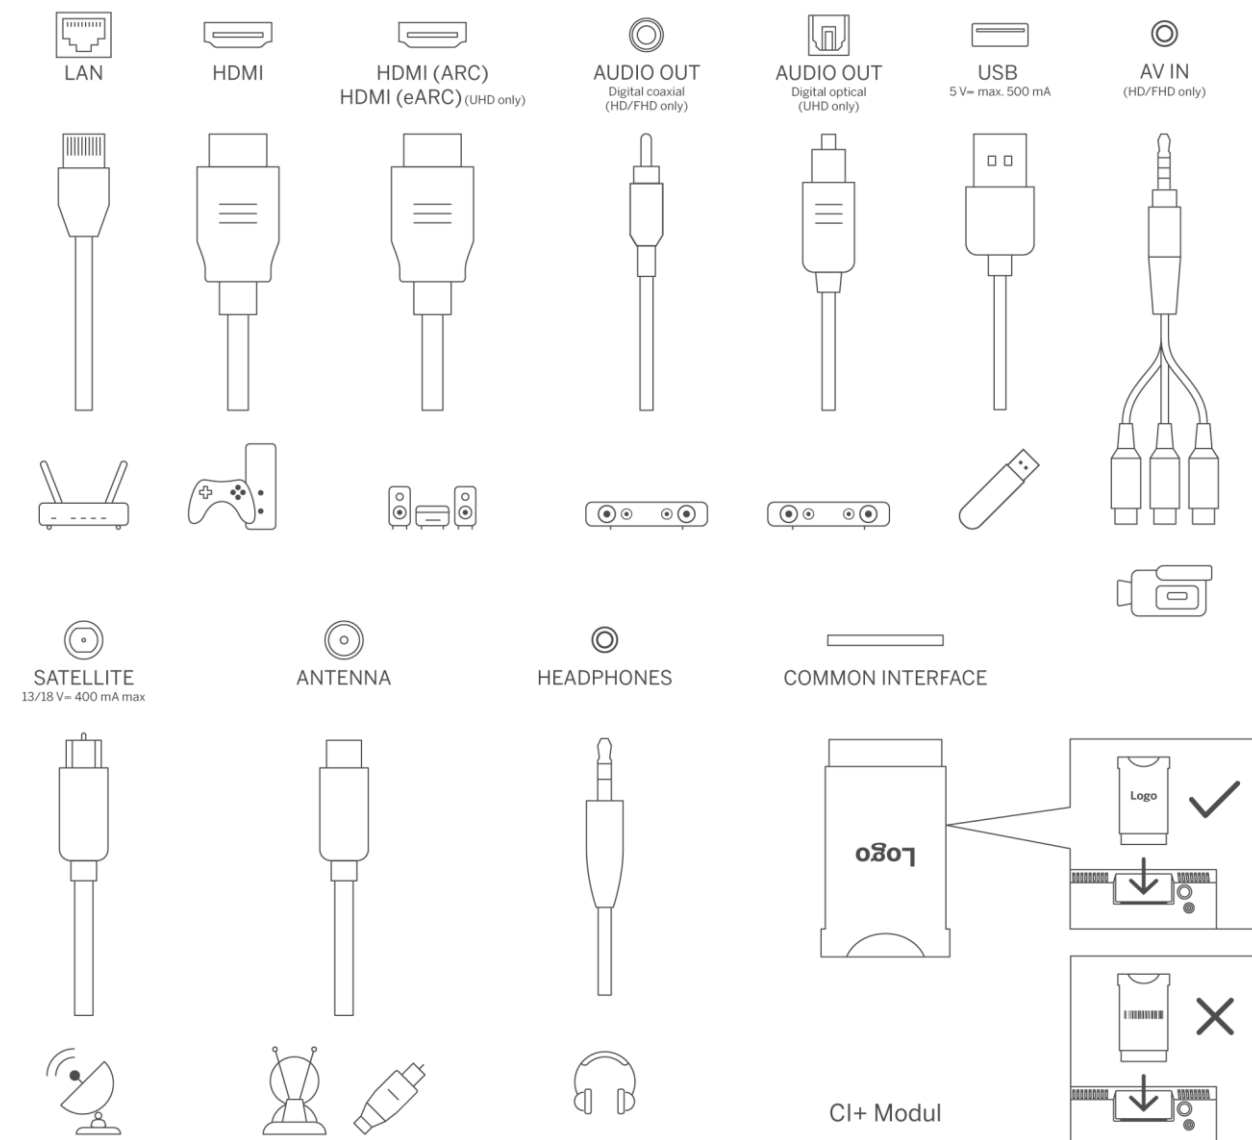

## 4 Remote Control




	Power button/Standby: Quick Standby / Standby / On
0-9	Numeric buttons: Switch the channel in Live TV mode, enter a number or a letter in the text box on the screen
	Source/Input: Select the input of the TV
i	Info: Displays information about on-screen content, shows hidden information (reveal - in Live TV- Teletext mode)
±	Volume +/-: Increase/decrease the volume level
	Mute: Completely turn off the volume of the TV
	Voice Control: Activates the microphone on the remote
	Program +/-: Increase/Decrease channel number in Live TV mode
	Home: Open the Home Screen
	Guide: Displays the electronic programme guide for digital TV channels. The current channel (if on the TV source) or the last channel watched (if on the Home screen) should be a digital channel
	Settings: Opens the settings menu
	Directional buttons: Helps navigate menus, setting options, moves the focus or cursor, etc. and displays the subpages in Live TV-Teletext mode when pressed Right or Left. Follow the on-screen instructions
	OK: Confirms user selections, enters sub-menus, holds the page (in Live TV- Teletext mode), views channel list (in Live TV mode)
	Back/Return: Returns to previous menu screen, goes one step back, closes open windows, opens index page (in Live TV-Teletext mode). Quickly cycles between previous and current channels or sources
EXIT	Closes and exits from displayed menus, returns to previous screen, exits from any running application or OSD banner, closes the Home screen and switches to last source used
	Launch the Netflix application
	Launch the YouTube application
	Launch the Prime Video application
	Launch the Disney + application
	Launch the TikTok application
	Free: Displays free content from various applications on the Home screen
	Colored Buttons: Follow the on-screen instructions for colored button functions
	Rewind: Moves frames backwards in media such as movies
	Stop: Stops the media being played
	Fast Forward: Moves frames forward in media such as movies
	Record: Records programmes in Live TV mode
	Play/Pause Pause: Pause the media being played Play: Start to play selected media
TEXT	Text: Displays teletext (where available). Press the button a second time to superimpose the teletext over a normal broadcast picture (mix). Press again to close



## 5 TV installation


### 5.1 Set your TV

Put your TV on a firm place which can handle the weight of the TV. To avoid danger, please do not position the TV near water or heat sources (such as light, candle, heater), do not block the ventilation at the back of the TV.

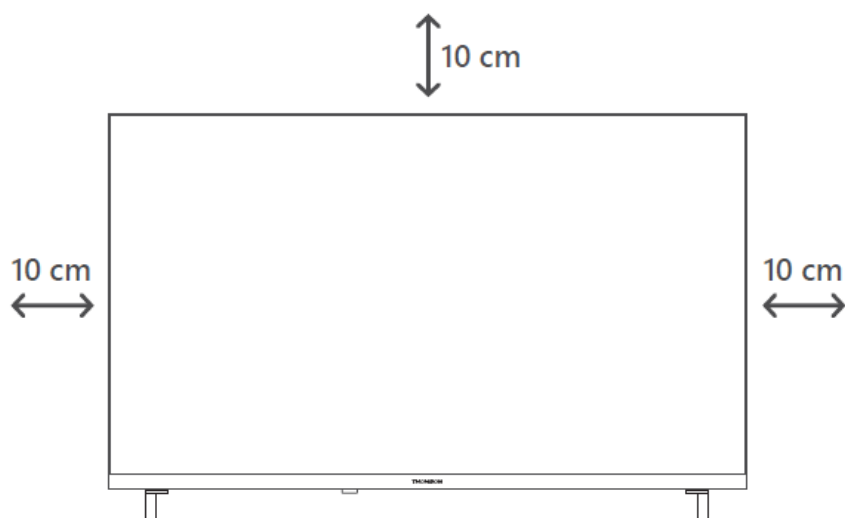

### 5.2 Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. Plug in the power cord of your TV (AC 100-240 V~ 50/60 Hz). The TV enters standby mode (red light).
3. Turn on your TV by pressing the power button of the TV or the power button on the remote control.
4. In case you have purchased a TV model with 12 Volt adapter included - use the right port to connect the adapter to the TV set.

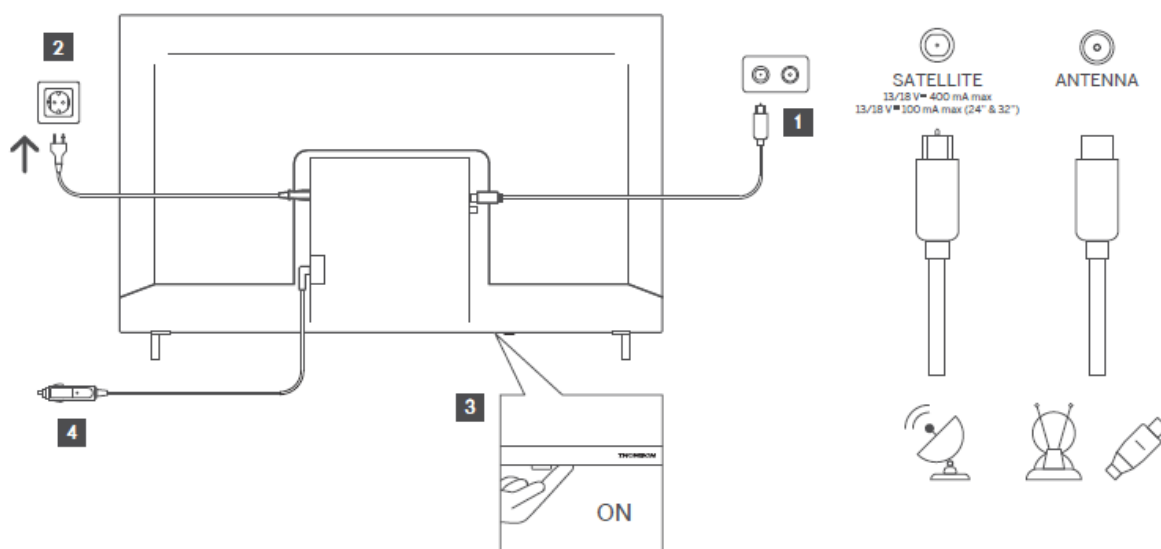

## 6 Initial setup

### 6.1 Language selection

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**. In the following steps of the installation guide, set your preferences using the directional buttons and **OK** button.

You will be asked whether you want to change accessibility settings. Highlight **Yes** and press **OK** to change. Refer to the **System Menu Content** section for detailed information on available options.

### 6.2 Country selection

Set your country preference on the next screen. Depending on the country selection you may be asked to set and confirm a PIN at this point. The selected PIN cannot be 0000. You have to enter it if you are asked to enter a PIN for any menu operation later.

**Note:** M7\* operator type will be defined according to the language and country selections that you made during the first time installation process.

\* M7 is a digital satellite service provider.

### 6.3 TV Environment

You may select your TV environment between Home Mode and Store Mode. The selection of Store Mode feature will configure your TV's settings for store environment and depending on the TV model, the supported features of it may be displayed on the screen as an info banner or the pre-installed video file may be played back. This feature is intended only for store use. It is recommended to select **Home Mode** for home use. The **Store Mode** option will be available in the **Settings>System>More** menu and your preference for this setting can be changed later. Make your selection and press **OK** to continue.

### 6.4 Picture Mode

In order for your TV to consume less energy and be more environmentally friendly select **Natural** and press **OK** to continue. Select **Dynamic**, if you desire more vibrant colours on your TV. You can change your selection later by selecting the desired option in the **Settings>Picture** menu.

## 6.5 Consent Settings

Depending on the model of your TV and the country selection, the **Summary of Consent Settings** menu may appear at this point. Using this menu you can manage your consent settings. Highlight a feature and press **OK** to enable or disable.

Read the related explanations displayed on the screen for each highlighted feature before making any changes. You can press the Right directional button to highlight the text and use the **Programme +/- or Up/Down directional buttons** to scroll up and down to read the entire text. You will be able to change your preferences at any time later from the **Settings>Legal>Consent Settings** menu.

If the **Internet Connection** option is disabled the **Network/Internet Settings** step will be skipped and not displayed. If you have any questions, complaints or comments regarding the privacy policies or their enforcement, please contact by email at [privacyrequest@xperi.com](mailto:privacyrequest@xperi.com). Highlight **Submit Consent Choices** and press **OK** to continue.

## 6.6 Terms and Conditions

On this screen you need to agree to the terms and conditions of TiVo Smart TV Service to make use of the related services. Scroll the page to read the entire text using the **Programme +/- or Up/Down directional buttons**. Highlight **Accept** and press **OK** on the remote to confirm and proceed. Highlight **Cancel** and press **OK** to proceed without confirmation.

## 6.7 Network Settings

The **Network/Internet Settings** screen will be displayed next. Please refer to the **Connectivity** section if you need information on configuring a wired or a wireless connection and other available options.

If you want your TV to consume less power in standby mode, you can disable the **Networked Standby Mode** option for the selected network type by setting it as **Off**. After the settings are completed, highlight **Next** and press **OK** button to continue.

If the **Network Type** is set to **Wireless Device**, available networks will be listed. Make adjustments to the network settings and press **Next**. Select a desired wireless network, enter a password, if necessary, and proceed further by pressing **Next** and press **OK** to continue. If you want to connect to a wireless network at a later time, highlight **Setup Later** and press **OK**.

## 6.8 Bluetooth pairing

Select "Pair Remote Control or Other Devices" and follow the on-screen instructions to pair your wireless remote control with your TV. Refer to the **Remote Control** section for more information.

If you wish to connect an audio device to your TV, put your audio device into pairing mode, select "Pair Audio Link Device" and press **Discover**. When the list of the available list of devices shows up, select one and press **Continue**, when the devices are connected.

If you want to pair your remote control at a later time, highlight **Next** and press **OK**.

## 6.9 Tuner option

On this screen you can set broadcast types to be searched and set your encrypted channel searched. Additionally, you can set a broadcast type as your favourite one. Priority will be given to the selected broadcast type during the search process and the channels of it will be listed on the top of the channel list. When finished, highlight **Next** and press **OK** to continue.

To turn a search option on for a broadcast type, highlight it and press the **OK** or use Left/Right directional buttons. To turn the search option off press the **OK** or Left/Right directional buttons after moving the focus on the desired broadcast type option.

### 6.9.1 Digital Aerial

If the **Digital Aerial** broadcast search option is turned on, the TV will search for digital terrestrial broadcasts after other initial settings are completed.

### 6.9.2 Digital Cable

If the **Digital Cable** broadcast search option is turned on, the TV will search for digital cable broadcasts after other initial settings are completed. A message will be displayed before starting to search asking if you want to perform cable network search. If you select **Yes** and press **OK** you can select **Network** or set values such as **Frequency**, **Network ID** and **Search Step** on the next screen. If you select **No** and press **OK** you can set **Start Frequency**, **Stop Frequency** and **Search Step** on the next screen. When finished, highlight **Next** and press **OK** to continue.

**Note:** Searching duration will change depending on the selected **Search Step**.

### 6.9.3 Satellite

If the **Satellite** broadcast search option is turned on, the TV will search for digital satellite broadcasts after other initial settings are completed. Before the satellite search is performed some adjustments should be made.

A menu will be displayed where you can select to start an **M7** operator installation, country's available operator installation or a standard installation.

To start an operator installation set the **Install Type** as **Operator** and select an operator. Then select **Satellite Operator** option and press **OK** to start the automatic search. If a DiSEqC switch is used in your satellite system, you can also select the DiSEqC version for the operator installation. These options can be preselected depending on the **Language** and **Country** selections that you made in the earlier steps of the first-time installation process. You may be asked to select **HD/SD** or country specific channel list according to your M7 operator type. Select one and press **OK** to proceed.

Wait till the scan is finished. Now the list has been installed.

In order to search for satellite channels other than operators channels you should start a standard installation. Select the **Install Type** as **Standard** and press the **OK** button to proceed. **Antenna Type** menu will be displayed next.

There are three options for antenna selection. You can select **Antenna Type** as **Direct**, **Single Satellite Cable** or **DiSEqC switch** by using the Left/Right directional buttons. After selecting your antenna type press **OK**. On the next screen press **OK** to see the options to proceed. **Continue**, **Transponder list** and **Configure LNB** options will be available. You can change the transponder and LNB settings using the related menu options.

**Direct:** If you have a single receiver and a direct satellite dish, select this antenna type. Press **OK** to continue. Select an available satellite on the next screen and press **OK**, highlight **Continue** and press **OK** again to scan for services.

**Single Satellite Cable:** If you have multiple receivers and a single satellite cable system, select this antenna type. Press **OK** to continue. Configure settings by following instructions on the next screen. Press **OK**, highlight **Continue** and press **OK** again to scan for services.

**DiSEqC switch:** If you have multiple satellite dishes and a DiSEqC switch, select this antenna type. Then set the DiSEqC version and press **OK** to continue. You can set up to four satellites (if available) for version v1.0 and sixteen satellites for version v1.1 on the next screen. Press **OK**, highlight **Continue** and press **OK** again to scan the selected satellite/s.

## 6.9.4 Analogue

If the **Analogue** broadcast search option is turned on, the TV will search for analogue broadcasts after other initial settings are completed.

After the initial settings are completed, TV will start to search for available broadcasts of the selected broadcast types.

While the search continues, current scan results will be displayed at the bottom of the screen. You can press the **TiVo**, **Back** or **Exit** button to cancel the search.

The channels that have already been found will be stored in the channel list.

After all the available channels and stations are stored, Home screen will be displayed. You can press the **Exit** button to watch TV channels. You can press the **OK** button to display the channel list when watching TV channels and edit the channel list according to your preferences using the **Edit** tab options.

While the search continues a message may appear, asking whether you want to sort channels according to the LCN(\*). Select **Yes** and press **OK** to confirm.

(\*) **LCN** is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable operator's channel number sequence (if available).

### Notes:

To search for M7 channels after the **First Time Installation**, you should perform the first time installation again. Or go to the **Home** screen and enter the **Settings>Installation>Automatic channel scan>Satellite** menu. Then follow the same steps mentioned above.

Do not turn off the TV while initializing first time installation. Note that some options may not be available depending on the country selection.

## 7 Media Playback

You can connect 2.5" and 3.5" inch (HDD with external power supply) external hard disk drives or USB memory stick to your TV by using the USB input(s) of the TV.

**IMPORTANT!** Back up the files on your storage devices before connecting them to the TV. The manufacturer will not be responsible for any file damage or data loss. Certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV. The TV supports FAT32 and NTFS disk formatting.

Wait a little while before each plugging and unplugging as the player may still be reading files. Failure to do so may cause physical damage to the USB player and the USB device itself. Do not pull out your drive while playing a file.

You can use USB hubs with your TV's USB input(s). External power supplied USB hubs are recommended in such a case.





It is recommended to use the TV's USB input(s) directly, if you are going to connect to a USB hard disk.

**Note:** When viewing media files, the **Media Browser** menu can only display a maximum of 1000 media files per folder.

You can play back music and movie files and display photo files stored on a USB storage device by connecting it to your TV. Connect a USB storage device to one of the USB inputs located on the side of the TV.

After connecting a USB storage device to your TV a message stating that the USB device is connected will be displayed on the screen. You can access the content of the connected USB device from the **Sources** menu on the Home screen. You can also press the **Source** button on the remote and then select your USB storage device from the list of sources.

You can set your media browser preferences by using the **Settings** menu. **Settings** menu can be accessed via the information bar which is displayed on the bottom of the screen while playing back a video or an audio file or displaying a picture file. Press the **Info** button if the information bar has disappeared, highlight the gear wheel symbol positioned on the right side of the information bar and press **OK**. **Picture Settings, Sound Settings, Media Browser Settings** and **Options** menus may be available depending on the media file type and the model of your TV and its features. The content of these menus may also differ according to the type of the currently open media file. Only the **Sound Settings** menu will be available while playing back audio files.

Loop/Shuffle Mode Operation	
Start playback and activate 	All files in the list will be continuously played in original order
Start playback and activate 	The same file will be played continuously (repeat)
Start playback and activate 	All files in the list will be played once in random order
Start playback and activate 	All files in the list will be continuously played in the same random order

To use the functions on the information bar, highlight the symbol of the function and press **OK**. To change the status of a function, highlight the symbol of the function and press **OK** as much as needed. If the symbol is marked with a red cross, that means it is deactivated.

## 8 Home

The Home screen is your starting point for browsing. It gathers all the TV shows and movies that matter to you trending titles on all your streaming apps, recently watched shows, live TV channels, and recommended shows based on your ratings and viewing habits.

Content in each carousel changes dynamically based on your usage. Even carousel categories update as TiVo OS gets to know you better. For example, based on what you've been watching, you might see a Comedy Movies or Health & Fitness carousel one day and an Oscar Winners carousel a few days later.

Press the **Source** button on the remote, highlight the **TV** input source option, and press **OK** to switch to Live TV mode and watch TV channels. If the last input source used was **TV**, you can also use the **Exit** button to switch to Live TV mode.

### 8.1 Applications

#### 8.1.1 My Apps Carousel

The **My Apps** carousel on the Home screen contains all the apps from which TiVo OS is making TV show and movie recommendations. You can select the apps that appear here on the **Manage Apps** screen.

When you prefer searching and browsing for shows within an app, select the app in this carousel and press **OK** on your remote control to open it.

#### 8.1.2 Manage Apps Screen

Use the **Manage Apps** screen to control which apps TiVo OS uses to recommend titles from on the Home, TV Shows, and Movies screens. The apps you select display in the **My Apps** carousel on the Home screen. Your app selections do not affect search results. TiVo OS shows results from all apps to help you find what you want to watch. When an app you're not using has the title, you can then decide to sign up for it.



## 8.2 Navigation Carousel

The navigation carousel on the Home screen gives you easy access to common features: **Guide**, **All Apps**, **Sources**, **Channel List**, **Recordings** (depends on the model), **Timers**, and **Settings**.

## 8.3 Browse Screens

Selecting Free, TV Shows, Movies, and Watchlist in the Main Menu to focus your browsing on those content types.

## 8.4 Content details

When you find content that interests you, highlight it and press **OK** on your remote control to view details about it. You can also learn about cast and crew and see recommendations for similar content.

### 8.4.1 Watch Now

Choose to watch the show from any of your selected applications that have the show available. These are the applications you enabled for recommendations on the **Manage Apps** screen. Others that have the content display in the More Ways to Watch.

### 8.4.2 Watchlist

Use the Watchlist to save shows you want to start or continue watching later and favourites to return to. What you add helps personalise recommendations for you.

The titles you add also appear in a **Watchlist** carousel on the Home screen. The plus changes to a bookmark.

To add a show, select + **Watchlist** on its Content Details screen. The plus changes to a bookmark.

To remove a show, go to its Content Details screen and select **Watchlist**. The bookmark changes to a plus.

### 8.4.3 Rate

Tell TiVo OS how you feel about a TV show or movie with a Thumbs Up or Thumbs Down. In return you'll get recommendations that reflect what you enjoy watching. Go to the Content Details screen of a show and select **Rate**. Choose Thumbs Up or Thumbs Down. Content that you rate Thumbs Down will no longer appear in recommendations.

### 8.4.4 Report Content

Go to the Content Details screen of a show and select flag. Report content screen will be displayed. After selecting the pre-defined reasons that suit you, highlight **Report** and press **OK**. You can also select the **Something else** option and enter your reason using the virtual keyboard in case the pre-defined reasons do not suit you.

### 8.4.5 Browse All Episodes

Select **Episodes** on the Content Details screen for an episodic TV show series to see its episodes ordered by Season.

## 8.5 Text Search

Select **Search** in the Main Menu to search for movies and TV shows across all your applications. Press **OK** and enter a title or actor using the virtual keyboard. Then highlight **Done** and press **OK** to start the search. Results display on the screen. Highlight the desired result using the directional buttons and press **OK** to open.

## 8.6 Voice Search and Control

Use your voice to search for TV shows and movies. It's faster and more accurate than typing on a remote control. You can also navigate screens and control volume by speaking naturally. Press the **Voice** button on your remote control (depends on the model of the remote control and the remote control should be paired with the TV before use; refer to the **Remote Control** section for more information), then ask for content by criteria like title, genre, actor, director, rating, age appropriateness, quote, or decade. You can continue to talk to refine search results after they display: "Show me Tom Cruise movies. Just the ones from the 90s."

**Note:** Voice search and voice control may not be available in some countries.

# 9 Settings

## 9.1 Devices

### 9.1.1 Pair Audio Link Device

Press **OK** to open the pairing screen. Using this screen you can discover and connect the Bluetooth wireless technology enabled sound devices to your TV. Refer to the **Connecting Bluetooth Devices** section for further information.

### 9.1.2 Pair Remote Control or Other Device

Press **OK** to open the pairing screen. Using this screen, you can discover and connect Bluetooth wireless technology enabled remotes, keyboards and mice to your TV. Refer to the **Connecting Bluetooth Devices** section for further information.

**Note:** Your TV may not be compatible with all keyboard and mouse models in the market. For more information contact your local dealer or retail outlet where you bought your TV.

### 9.1.3 Virtual Remote

Enable or disable the virtual remote feature.

### 9.1.4 Audio Video Sharing

This feature allows you to share files stored on your smartphone or tablet pc. If you have a compatible smartphone or tablet pc and the appropriate software is installed, you can share/play photos, music and videos on your TV. See instructions of your sharing software for more information.

### 9.1.5 ALLM (UHD)

ALLM (Auto Low Latency Mode) function allows the TV to activate or deactivate low latency settings depending on playback content. If this option is enabled the picture mode will be set to **Game** automatically when ALLM mode signal is received from the current HDMI source. Refer to the **Game Mode** section for more information.

### 9.1.6 Timer of No Signal

If your TV does not receive any input signal (e.g. from an aerial or HDMI source) for 3 minutes, it will go into standby mode. You can enable or disable this functionality by setting this option accordingly.

### 9.1.7 CEC

With this setting you can enable and disable CEC functionality completely. Press the Left or Right button to enable or disable the feature.

### 9.1.8 CEC Auto Power On

This function allows the connected HDMI-CEC compatible device to turn on the TV and switch to its input source automatically. Press the Left or Right button to enable or disable the feature.

## 9.2 Picture

### 9.2.1 Mode

You can change the picture mode to suit your preference or requirements. Picture mode can be set to one of these options: **Cinema**, **Game**, **Sports**, **Dynamic** and **Natural**.

**Note:** Available options may differ depending on the input source.

**Dolby Vision Modes (UHD):** If Dolby Vision content is detected **Dolby Vision Dark** and **Dolby Vision Bright** picture mode options will be available instead of **Cinema** and **Natural** modes.

### 9.2.2 Contrast

Adjust the brightness of the brightest areas of the picture. Increasing the contrast makes bright areas appear brighter, while decreasing it makes them dimmer.

### 9.2.3 Brightness

Adjust the overall darkness or lightness of the picture. Increasing brightness makes dark areas lighter, while decreasing it makes them darker.

### 9.2.4 Sharpness

Adjusts the clarity and detail of the picture by enhancing the edges of objects. **Higher settings** make edges appear more defined but may introduce noise or artificial outlines. **Lower settings** create a softer image but may reduce detail.

### 9.2.5 Color

Adjust the intensity of colors in the picture. **Higher settings** make colors more vibrant but may cause oversaturation. **Lower settings** reduce color intensity, making the image appear faded or black and white.

### 9.2.6 Energy Saving

Set the **Energy Saving** to **Minimum**, **Medium**, **Maximum** or **Auto** the TV will adjust the energy consumption accordingly. If you like to set the backlight to a fixed value set as **Custom**, highlight **Backlight** (located under the **Energy Saving** setting) and then adjust manually using the Left or Right directional on the remote. Set as **Off** to turn this setting off.

## 9.2.7 Picture Zoom

Sets the desired aspect ratio of your TV.

## 9.2.8 Advance Settings

### 9.2.8.1 Dynamic Contrast

Automatically adjusts contrast levels based on the brightness of the scene to enhance details in dark and bright areas.

### 9.2.8.2 Colour Temp

Adjusts the overall tone of the picture by changing the balance between warm (red) and cool (blue) colours.

### 9.2.8.3 Blue Stretch

The Blue Stretch setting is designed to enhance the intensity and visibility of blue tones in the displayed image. It aims to make blues appear more vibrant, deeper, or more prominent.

### 9.2.8.4 Micro Dimming

Micro Dimming is a technology designed to enhance the contrast and overall picture quality of your TV by dynamically adjusting the brightness of different zones of the backlight. This allows for deeper blacks in darker areas of the screen while maintaining bright whites in brighter areas, resulting in a more detailed and immersive viewing experience.

### 9.2.8.5 Noise Reduction

The Noise Reduction setting is designed to minimize unwanted visual artifacts, often referred to as "noise," that can appear on your TV screen. This noise can manifest as graininess, speckling, blockiness (especially around edges), or shimmering effects, particularly in lower-quality video sources.

### 9.2.8.6 De-contour

The De-Contour setting reduces color banding (also known as contouring), which appears as visible lines or steps between shades in smooth color gradients. This feature enhances image quality by smoothing transitions between similar tones, providing a more natural and visually pleasing picture—especially noticeable in skies, shadows, or other gradient areas.

### 9.2.8.7 MEMC (UHD)

Press left/right buttons to set **MEMC** to **Low**, **Medium**, **High** or **Off**. While **MEMC** is active, it will optimise the TV's video settings for motional images to acquire a better quality and readability.

#### **9.2.8.7.1 MEMC Demo (UHD)**

When the **MEMC** option is set to **Low**, **Medium** or **High**, this option will be available. Highlight this option and press OK to activate the demo mode. While demo mode is active, the screen will be divided into two sections, one displaying the **MEMC** activity, the other displaying the normal settings for TV screen. Press **OK** again to cancel.

#### **9.2.8.8 Film Mode**

Film Mode is a picture setting designed to enhance your viewing experience when watching movies and other cinematic content. It aims to present the video as the director intended, preserving the original frame rate and artistic vision.

#### **9.2.8.9 Skin Tone**

The Skin Tone setting allows you to fine-tune the colour representation of human skin in the displayed image. This can be useful for achieving a more natural and realistic look, or for adjusting the picture to your personal preference.

#### **9.2.8.10 Colour Shift**

The Colour Shift setting allows you to intentionally alter the overall colour balance or specific colour ranges displayed on your TV screen. This is typically used for achieving specific visual effects or to compensate for perceived colour inaccuracies, although it can also be used for personal preference.

#### **9.2.8.11 Colour Tuner**

The Colour Tuner is an advanced picture setting that provides granular control over individual colour components within your TV's display. It allows experienced users or calibrators to fine-tune the accuracy and vibrancy of specific colours, leading to a more precise and nuanced picture.

#### **9.2.8.12 Colour Space (UHD)**

Set your colour space preference. Auto, On, REC709, BT2020, ADOBERGB, DCI\_P3, and Off options are available.

#### **9.2.8.13 Gamma**

You can use this option to set your gamma preference. Press the Left/Right directional buttons to set to Normal, Bright or Dark.

**Note:** This option may not be available depending on the TV model and its features and you may not be able to change this setting depending on the current content.

#### 9.2.8.14 Reset

Resets the current picture mode settings to factory default settings.

## 9.3 Sound

### 9.3.1 Dolby Atmos (UHD)

Your TV supports Dolby Atmos technology. By means of this technology the sound moves around you in three-dimensional space, so you feel like you're inside the action. You will have best experience if input audio bitstream is Atmos. **Auto**, **On** and **Off** options will be available. If set as **Auto**, the TV will switch between **On** and **Off** modes automatically depending on the input audio bitstream information, if the input audio bitstream is Atmos this feature will work as if it is set as **On**. Set as **Off** to disable.

### 9.3.2 Dolby Audio(HD/FHD) / Mode (UHD)

**Smart**, **Movie**, **Music**, **News** and **Off** options will be available. Set as **Off** to disable.

**Note:** Some items in **Sound** menu will be greyed out and unavailable if set to an option other than **Off**. Settings of some other options may also change depending on the current settings.

### 9.3.3 DTS Virtual:X

This feature will enhance your sound experience by providing a virtualisation of surround speakers through your TV's speakers. You can select one of the predefined sound modes. **Music**, **Sports**, **Cinema**, and **Off** options will be available. Set as **Off** to disable.

**Note:** Some items in the **Sound** menu will be greyed out and unavailable if set to an option other than **Off**. Settings of some other options may also change depending on the current settings.

### 9.3.4 Sound Output

Sets the sound output preference. **TV**, **S/PDIF**, **HDMI ARC**, **Headphone Only** and **Lineout** options will be available. There will be no sound output except through the selected option and the headphone jack. Note that, if this option is set as **Headphone Only**, TV speakers will be muted when headphone set is plugged in.

When you connect an external amplifier to your TV using the headphone jack, you can select this option as **Lineout**. If you have connected headphones to the TV, set this option as **Headphone Only**. Please ensure before using headphones that this menu item is set to **Headphone Only**. If

it is set to **Lineout**, the output from the headphone socket will be set to maximum which could damage your hearing.

If the **HDMI ARC** option is selected, **CEC** feature will be enabled.

**Note:** Depending on the selected option some items in the **Sound** menu will appear as greyed out and will be unavailable.

### 9.3.5 eARC (UHD)

When the **Sound Output** option is set to **HDMI ARC**, the **eARC** menu option will be available. Otherwise, it will be greyed out. This option will be set to **On** by default. Set to **Off** to disable. Refer to the **CEC** section for more information.

### 9.3.6 AVL (Automatic Volume Limiting)

Sets the sound to obtain fixed output level between programmes.

If the **Mode** menu item is set to an option other than **Off** the **AVL** setting options will change. **Auto**, **Night**, **Normal** and **Off** options will be available. In **Auto** mode the TV will switch to **Normal** or **Night** mode automatically according to the current time information. If no time information is available this option will always function as **Normal**. When the TV switches to **Night** mode for the first time after setting this option as **Auto**, an information bar will pop up on the screen.

Please note that compared to **Normal** mode **Night** mode provides more aggressive dynamic compression control which is suitable for silent environments.

### 9.3.7 Advanced Settings

#### 9.3.7.1 Equalizer

Selects the equalizer mode. Custom settings can be made only when in **User** mode.

#### 9.3.7.2 Dynamic Bass

Enables or disables the Dynamic Bass.

#### 9.3.7.3 DTS DRC

Dynamic Range Control provides gain adjustment of the source to maintain suitable audible range at both low and high playback levels. It will function only if the source audio format is DTS. Enable or disable the **DTS DRC** option by setting as **On** or **Off**.



#### 9.3.7.4 Sound Mode

You can select a sound mode if the channel you are watching supports it. This option will not be available if no channels are installed.

#### 9.3.7.5 Digital Out

Sets digital out audio type. **PCM**, **Auto**, and **Passthrough** options will be available.

**PCM**: This option provides two-channel uncompressed digital audio output. You can use this option if you experience compatibility problems such as not hearing sound.

**Auto**: This option provides multi-channel digital audio output (up to 5.1 channel).

**Passthrough**: This option provides original audio output as such in HDMI ARC. It is recommended to use this option if you have an A/V receiver with eARC support. If your A/V receiver does not support source audio format you may experience compatibility problems such as not hearing sound.

#### 9.3.7.6 Headphone

Sets headphone volume. This option will not be available if the **Sound Output** option is set as **Lineout**.

Please ensure before using headphones that the headphone volume is set to a low level, to prevent damage to your hearing.

#### 9.3.7.7 Balance

Sets sound balance. This feature will be activated if **Sound Output** option is set as **TV** or **Headphone Only**. Balance item adjusts the balance level of the TV speakers and headphone together.

#### 9.3.7.8 Reset

Resets some of the sound settings to factory defaults.

### 9.4 Network

#### 9.4.1 Network Type

Disable the network connection or change the connection type.

## 9.4.2 Scan Wireless Network

Start a search for wireless networks. This option will be available if the **Network Type** is set as Wireless Device.

## 9.4.3 Disconnect

To disconnect from a wireless network and delete your saved wireless network profile (automatically saved when you connect to a wireless network), highlight this option and press **OK**. This option will not be available if you did not connect to a wireless network.

## 9.4.4 Press WPS on your Wi-Fi router

If your modem/router device has WPS, you can directly connect to it using this option. Highlight this option and press **OK**. Go to your modem/router device and press the WPS button on it to make the connection. This option will be available if the **Network Type** is set as **Wireless Device**.

## 9.4.5 Internet Speed Test

Start a speed test to check your connection bandwidth. The result will be displayed on the screen when finished. Press **OK** to return to the **Network** menu.

## 9.4.6 Advanced Settings

Change the IP and DNS configurations of your TV. Press **OK** to see available options. Highlight **Save** and press **OK** to save the changes when you are done.

## 9.4.7 Network Standby Mode

Enable or disable this feature by setting it as **On** or **Off**.

# 9.5 Installation

## 9.5.1 Automatic Channel Scan (Retune)

Displays automatic tuning options.

**Digital Aerial:** Searches and stores aerial DVB stations.

**Digital Cable:** Searches and stores cable DVB stations.

**Analogue:** Searches and stores analogue stations.

**Satellite:** Searches and stores satellite stations.

## 9.5.2 Manual Channel Scan

This feature can be used for direct broadcast entry.

## 9.5.3 Network Channel Scan

Searches for the linked channels in the broadcast system.

**Digital Aerial:** Searches for aerial network channels.

**Digital Cable:** Searches for cable network channels.

**Satellite:** Searches for satellite network channels.

## 9.5.4 Analogue Fine Tune

You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored and if currently watched channel is not an analogue channel.

## 9.5.5 Satellite Settings

Displays satellite settings.

**Satellite list:** Displays available satellites. You can **Add**, **Delete** satellites or **Edit** satellite settings on the list. Press **OK** to open the **Options** menu.

**Antenna installation:** You can change satellite antenna settings and/or start a satellite scan. Press **OK** to open the **Options** menu.

## 9.5.6 Signal Information

You can use this menu item to monitor signal related information such as signal level/ quality, network name, etc. for available frequencies.

## 9.5.7 Factory Reset

Deletes all stored channels and settings, resets TV to factory settings.

# 9.6 System

## 9.6.1 Accessibility

Displays accessibility options of the TV. Some options will not be available if no channels are installed.

### 9.6.1.1 High Contrast

Increase the contrast of the menu options and texts to make them easier to read. **White Text**, **Yellow Text** and **Off** options will be available.

### 9.6.1.2 Key Stroke Delay

The Key Stroke Delay Time setting allows you to adjust the responsiveness of the on-screen keyboard that appears when you need to enter text on your TV, such as during searches in apps or when inputting passwords. This setting controls the amount of time the TV waits after you press a virtual key before registering the input.

### 9.6.1.3 Subtitle

Turns the subtitles on or off.

### 9.6.1.4 Hard Of Hearing (UHD)

Enables any special feature sent from the broadcaster.

### 9.6.1.5 Audio Description (UHD)

A narration track will be played for the blind or visually impaired audience. Press **OK** to see all available **Audio Description** menu options. This feature is available only if the broadcaster supports it.

**Note:** Audio description sound feature is not available in recording or time shifting mode (availability depends on the model of your TV and its features).

### 9.6.1.6 Dialogue Enhancement (UHD)

This feature provides sound postprocessing options for speech-gated dialogue enhancement. Off, Low, Medium and High options will be available. Set according your preference.

Note: This feature has an effect only if input audio format is AC-4 and this effect only applies to TV loudspeaker output.

### 9.6.1.7 Spoken Subtitles (UHD)

Default preference of spoken subtitles is selected with this setting option. To make spoken subtitles priority higher than normal ones, this option should be set to **On**. This option may not be available depending on the model of your TV.

### 9.6.1.8 Magnification

Enables the use of button combinations to magnify the screen. **On** and **Off** options will be available. Set as **On** to enable.

Magnification support will be enabled or disabled with long-press of the numeric button **5**. First top-left quadrant of the screen will be zoomed. After the magnification support is enabled, long-press of the numeric buttons **2, 4, 6, 8** will move the zoomed area to up, left, right and down.

#### **9.6.1.9 Minimap**

Minimap is enabled and deactivated by default. It will be activated when **Magnification** feature is enabled. With this option, you can prevent magnification feature from displaying the minimap.

#### **9.6.1.10 Highlight programmes with (UHD)**

##### **9.6.1.10.1 [S] Subtitle**

If this option is enabled and if any electronic programme guide event has "Subtitle" access service, these events will be highlighted with another colour.

##### **9.6.1.10.2 [SL] Sign Language**

If this option is enabled and if any electronic programme guide event has "Sign Language" access service, these events will be highlighted with another colour.

##### **9.6.1.10.3 [AD] Audio Description**

If this option is enabled and if any electronic programme guide event has "Audio Description" access service, these events will be highlighted with another colour.

### **9.6.2 Language**

You may set a different language depending on the broadcaster and the country.

### **9.6.3 Conditional Access (UHD)**

Controls conditional access modules when available.

### **9.6.4 Parental**

Enter correct PIN to change parental settings. You can easily adjust **Menu Lock**, **Maturity Lock**, **Child Lock** or **Guidance** in this menu. You can also set a new PIN or change the **Default CICAM PIN** using the related options.

**Note:** *Some menu options may not be available depending on the country you selected during the first time installation or factory reset process. Default PIN could have been set to 0000 or 1234. If you have defined the PIN (is requested depending on the country selection) during the first time installation or factory reset process, use the PIN that you have defined.*

## 9.6.5 Date/Time

Sets date and time.

## 9.6.6 Sources

Edit the names, enable or disable selected source options.

## 9.6.7 Netflix

If this feature is supported by your TV, you can view your ESN (\*) number and deactivate Netflix.

(\*) ESN number is an unique ID number for Netflix, created especially to identify your TV.

**Note:** For 4K video streaming, a minimum 25Mb/s internet connection speed is required – For an example of the requirements for streaming 4K content you may find more information on the Netflix website (<https://help.netflix.com/en/node/13444>). When you start to stream video content via the internet the quality of your connection will be analysed and the full HD or 4K quality may take a short time to be realised, or in the event of a slow connection not be possible. You should check your internet capabilities with your internet provider if you are at all unsure.

## 9.6.8 TiVo

You can view the HSN and DLID information of your TV.

## 9.6.9 Voice Assistant

Select Google Home environment to connect your TV to.

## 9.6.10 More

### 9.6.10.1 Menu Timeout

Changes timeout duration for menu screens.

### 9.6.10.2 Home Screen Saver

Set the screensaver options for Home screen. You can set a wait time for the screensaver or disable it by using the available options.

### 9.6.10.3 Standby Mode LED

If set as Off the standby mode LED will not light up when the TV is in standby mode.

#### **9.6.10.4 Device Identification(UHD)**

When this option is enabled, it causes a 'Device ID' to be generated internally for each Web origin visited. When disabled all the current 'Device ID's' are cleared for each Web origin that was visited. You can enable or disable this feature by setting it as **On** or **Off**.

#### **9.6.10.5 Software Upgrade**

Ensures that your TV has the latest software. Press OK to see the menu options.

#### **9.6.10.6 Application Version**

Displays current software version.

#### **9.6.10.7 Auto Power Down**

Sets the desired time for the TV to automatically go into standby mode when not being operated. This option can be set from 1 to 8 hours in steps of 1 hour. You can also disable this option by setting as **Off**.

#### **9.6.10.8 Standby On Mode**

Configures your TV's auto launch preference. The **Home Screen** and **Last Source** options are available.

#### **9.6.10.9 Sleep Timer**

Define a time after which you want your TV to enter sleep mode automatically. Set as **Off** to disable.

#### **9.6.10.10 Store Mode**

Select this mode for store display purposes. Whilst **Store Mode** is enabled, some items in the TV menu may not be available. For some models **Enabled with video** option may also be available. If this option is set, the TV will switch to store mode and the pre-installed video file will be played back.

#### **9.6.10.11 Power Up Mode**

This setting configures the power up mode preference. **Last State** and **Standby Mode** options are available.

#### **9.6.10.12 OSS**

Displays Open-Source Software licence information.

#### **9.6.10.13 Change Friendly Name**

Using this option, you can change the device name that is used to identify your TV when connecting a device to the TV wirelessly. The default device name will be restored if the device name is left blank or factory reset is performed.

#### **9.6.10.14 Application Priority (UHD)**

You can set your preference regarding the priority between the broadcast applications and CICAM App MMI applications using this option. In case a CICAM is inserted into the TV and a contention occurs between the applications the priority will be given to the selected type of application.

#### **9.6.10.15 Dolby Notification (UHD)**

Sets the notification appearance preference for Dolby content. When set as **On**, Dolby logo will be displayed on the screen when Dolby content is detected.

#### **9.6.10.16 Manuals**

Displays the E-Manual. You can find instructions for your TV's features in the E-Manual.

### **9.7 Legal**

#### **9.7.1 Privacy Policies**

Displays the privacy policy information

.

#### **9.7.2 Terms & Conditions**

Displays the terms and conditions for TiVo Smart TV Service and manufacturer.

#### **9.7.3 Consent Settings**

You can use the options here to manage your consent settings. Highlight a feature and press **OK** to enable or disable. You can read the related explanations displayed on the screen for each highlighted feature before making changes. You can press the Right directional button to highlight the text and then use the **Programme +/-** or Up/Down directional buttons to scroll up and down to read the entire text.

#### **9.7.4 Advertising ID**

Displays the advertising ID. You can also reset it using the related option here.



## 9.7.5 Company Information

Displays the company information.

## 9.7.6 Transparency Disclosure

Displays the transparency disclosure.

## 9.7.7 Cookies

### 9.7.7.1 Show All Cookies

Displays all saved cookies.

### 9.7.7.2 Delete All Cookies

Deletes all saved cookies.

### 9.7.7.3 Do Not Track

You can set your preference regarding the tracking behaviour for HbbTV services using this option.

# 10 General TV Operation

## 10.1 Using the Channel List

The TV sorts all stored stations in the channel list. You can edit this channel list or set favourites by using the **Channels** menu options. While watching live TV channels press the **OK** button to open the channel list or go to the Navigation carousel on the Home screen and select **Channel List**. You can filter the listed channels or make advanced changes in the current list using the **Filter** and **Edit** tab options. Highlight the tab you want and press **OK** to see available options.

### Managing the Favourite Lists

You can create four different lists of your favourite channels. Go to the Navigation carousel on the Home screen and select **Channel List** to open the **Channels** menu. Highlight the **Edit** tab and press **OK** to see the editing options and select the **Tag/Untag channel** option. Select the desired channel on the list by pressing the **OK** button while the channel is highlighted. You can make multiple choices. You can also use the **Tag/Untag all** option to select all channels on the list. Then press the **Back/Return**, Left or Right directional button to return to the Edit menu options. Select the **Add/Remove Favourites** option and press the **OK** button again. Favourite channel list options will be displayed. Set the desired list option to **On**. The selected channel/s will be added to the list. In order to remove a channel or channels from a favourite list follow the same steps and set the desired list option to **Off**.

You can use the filtering function in the **Channels** menu to filter the channels in the channel list permanently according to your preferences. For instance, using the options of the **Filter** tab, you can set one of your four favourite lists to be displayed every time the channel list is opened. The selected filtering options will be shown on the top of the **Channels** menu screen.

## 10.2 Configuring Parental Settings

The **Parental** menu options can be used to prohibit users from viewing of certain programmes, channels and the usage of menus. These settings are located in the **Settings>System>Parental** menu.

To display parental lock menu options, a PIN should be entered. After entering the correct PIN, parental setting options will be displayed.

**Menu Lock:** This setting enables or disables access to all the menus or to the **Installation** menu of the TV.

**Maturity Lock:** If this option is set, the TV gets the maturity information from the broadcast and if this maturity level is disabled, prohibits access to the broadcast.

**Note:** If the country option during the first time installation or factory reset is set as France, Italy or Austria, **Maturity Lock's** value will be set to 18 as default.

**Child Lock:** If this option is set to **On**, the TV can only be controlled by the remote control. In this case the control buttons on the TV will not work.

**Set PIN:** Defines a new PIN number.

**Default CICAM PIN:** This option will appear as greyed out if no CI module is inserted into the CI slot of the TV. You can change the default PIN of the CI CAM using this option.

**Note:** Default PIN could have been set to **0000** or **1234**. If you have defined the PIN (is requested depending on the country selection) during the **First Time Installation**, use the PIN that you have defined. In case the PIN is entered incorrectly five times in succession, PIN entry will be blocked and it will no longer be possible to make a new entry for 30 minutes. However, you can unblock the PIN entry or reset the retry count to zero by turning the TV off and on.

Some options may not be available depending on the model and/or on the country selection in the **First Time Installation**.

## 10.3 Electronic Programme Guide

By means of electronic programme guide function of your TV you can browse the event schedule of the currently installed channels on your channel list. It depends on the related broadcast whether this feature is supported or not.

To access the programme guide, press the **Guide** button on your remote. You can also use the **Guide** option on the Home screen.

There are 2 different types of schedule layouts available, **Timeline Schedule** and **Now/Next**. To switch between these layouts highlight the tab with the name of the alternative layout on the upper side of the screen and press **OK**.

Use the directional buttons to navigate through the programme guide. Use the **Back/Return** button to use the tab options on the upper side of the screen.

### Timeline Schedule

In this layout option, all events of the listed channels will be displayed by timeline. You can use the directional buttons to scroll through the list of the events. Highlight an event and press **OK** to display event options menu.

Press the **Back/Return** button to use available tab options. Highlight the **Filter** tab and press **OK** to see the filtering options. To change the layout highlight **Now/Next** and press **OK**. You can use the **Previous Day** and **Next Day** options to display the events of the previous and next day.

Highlight the **Extras** tab and press **OK** to access below options.

**Highlight Genre:** Displays the **Highlight Genre** menu. Select an option and press **OK**. The events in the programme guide matching the selected genre will be highlighted.

**Guide Search:** Displays searching options. Using these options, you can search the programme guide database in accordance with the selected criteria. Matching results will be listed.

**Now:** Returns back to the current time on the timeline.

**Zoom:** Highlight and press **OK** to change the time interval on the timeline.

### Now/Next Schedule

In this layout option, only the current and next events of the listed channels will be displayed. You can use the directional buttons to scroll through the list of the events.

Press the **Back/Return** button to use available tab options. Highlight the **Filter** tab and press **OK** to see the filtering options. To change the layout highlight **Timeline Schedule** and press **OK**.

### Event Options

Use the directional buttons to highlight an event and press the **OK** button to display the **Options** menu. The following options are available.

**Select Channel:** Using this option, you can switch to the selected channel in order to watch it. The programme guide will be closed.

**More Info:** Display detailed information on the selected event. Use up and down directional buttons to scroll through the text.

**Set Timer on Event / Delete Timer on Event:** Select **Set Timer on Event** option and press **OK**. You can set timers for future events. To cancel an already set timer, highlight that event and press the **OK** button. Then select **Delete Timer on Event** option. The timer will be cancelled.

**Notes:** *You cannot switch to any other channel while there is an active timer on the current channel.*

*It is not possible to set timer for two or more individual events at the same time interval.*

## 10.4 Teletext Services

Press the **Text** button to enter. Press again to activate mix mode, which allows you to see the teletext page and the TV broadcast at the same time. Press once more to exit. If available, sections in the teletext pages will become colour-coded and can be selected by pressing the coloured buttons. Follow the instructions displayed on the screen.

### Digital Teletext

Press the **Text** button to view digital teletext information. Operate it with the coloured buttons, directional buttons and **OK** button. The operation method may differ depending on the content of the digital teletext. Follow the instructions displayed on the digital teletext screen. When the **Text** button is pressed again, the TV returns to television broadcast.

## 10.5 Software Upgrade

Your TV is capable of finding and updating the software automatically via the broadcast signal or via Internet.

### Software upgrade search via user interface

Press the **Settings** button on the remote or select **Settings** on the Home screen. Highlight the **Software Upgrade** option in the System>More menu and press **OK**. Then highlight the Scan for upgrade option and press **OK** to check for a new software upgrade. You can select the satellite which is used for updating process and configure its parameters by using the **Edit Upgrade for Satellite** menu options.

If a new upgrade is found, it starts to download the upgrade. After the download is completed, a warning will be displayed, press **OK** to complete software upgrade process and restart TV.

### 3 AM search and upgrade mode

Your TV will search for new upgrades at 3:00 o'clock if the **Automatic scanning** option is set to **Enabled** and the TV is connected to an aerial signal or to the Internet. If a new software is found and downloaded successfully, it will be installed at the next power on.

**Note:** Do not unplug the power cord while led is blinking during the reboot process. If the TV fails to come on after the upgrade, unplug, wait for two minutes then plug it back in.


*All updates are automatically controlled. If a manual search is carried out and no software is found then this is the current version.*

## 11 Connectivity

### 11.1 Wired Connectivity


#### To Connect to a Wired Network

- You must have a modem/router connected to an active broadband connection.
- Connect your TV to your modem/router via an Ethernet cable. There is a LAN port at the rear-left side of your TV.

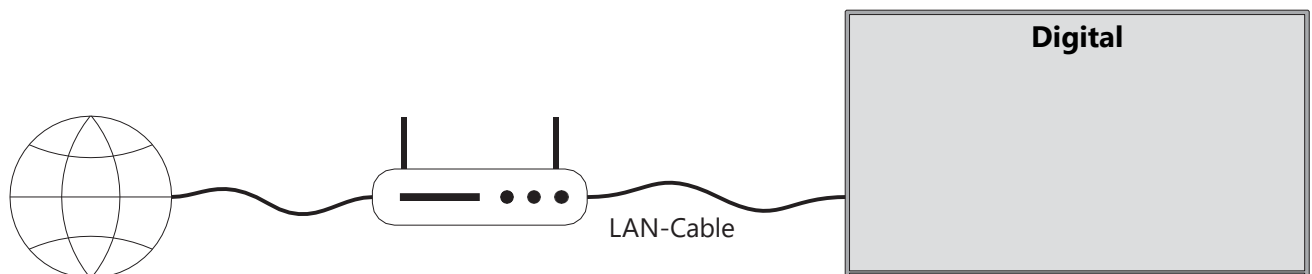

1. Broadband ISP connection
2. LAN (Ethernet) cable
3. LAN input on the rear-left side of the TV

You might be able to connect your TV to your LAN depending on your network's configuration. In such a case, use an Ethernet cable to connect your TV directly to the network wall outlet.

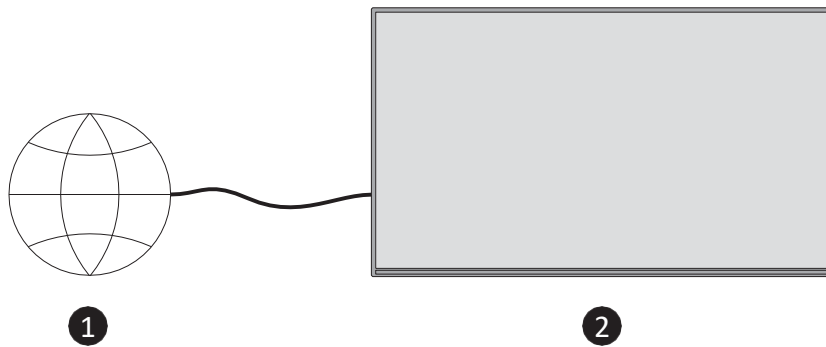


1. Network wall socket.
2. LAN input on the rear-left side of the TV.

## 11.2 Wireless Connectivity

### To Connect to a Wireless Network

You must have a wireless modem/router connected to an active broadband connection.

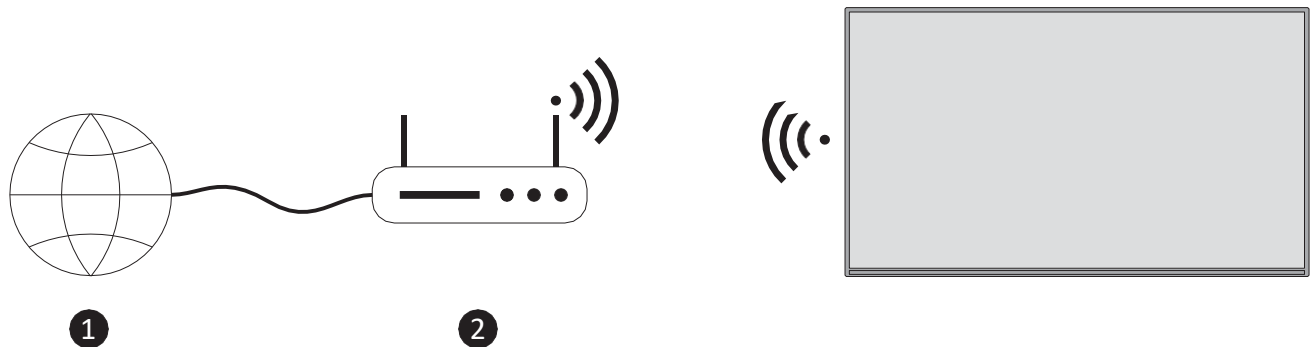

1. Broadband ISP connection

A Wireless-N router (IEEE 802.11a/b/g/n) with simultaneous 2.4 and 5 GHz bands is designed to increase bandwidth. These are optimised for smoother and faster HD video streaming and wireless gaming.

The frequency and channel differ depending on the area.

The transmission speed differs depending on the distance and number of obstructions between the transmission products, the configuration of these.

## 11.3 Wireless Display

Wireless Display is a standard for streaming video and sound content. This feature provides the ability to use your TV as wireless display device.

### Using with mobile devices

There are different standards which enable sharing of screens including graphical, video and audio content between your mobile device and TV.

Press the **Source** button on the remote and switch to **Wireless Display** source. A screen appears stating that the TV is ready for connection.

Open the sharing application on your mobile device. These applications are named differently for each brand, refer to the instruction manual of your mobile device for detailed information.

Scan for devices. After you select your TV and connect, the screen of your device will be displayed on your TV.

**Note:** *This feature can be used only if the mobile device supports this feature. If you experience problems with the connection check if the operating system version you use supports this feature. There may be incompatibility problems with the operating system versions which are released after the production of this TV. Scanning and connecting processes differ according to the program you use.*

## 11.4 Internet Browser

You can launch the internet browser from the **My Apps** carousel on the Home screen.

In the initial screen of the browser, the thumbnails of the predefined (if any) links to web sites will be displayed as speed dial options along with the **Edit Speed Dial** and the **Add to Speed Dial** options.

To navigate the web browser, use the directional buttons on the remote or a connected mouse. To see the browser options bar, press the Up directional button on the remote or move the cursor to the top of the page. **History**, **Tabs**, and **Bookmarks** options and the browser options bar which contains previous/next buttons, the refresh button, the address/search box, the **Speed Dial** and the **Vewd Browser** buttons are available.

To add a desired website to the **Speed Dial** list for quick access, move the cursor to the top of the page. The browser options bar will appear. Highlight the **Speed Dial** button and press **OK**. Then select the **Add to Speed Dial** option and press **OK**. Fill in the blanks for the **Name** and **Address** fields, highlight **OK** and press **OK** to add. You can also highlight the **Vewd Browser**

button on the browser options bar and press **OK**, then highlight the **Add to Speed Dial** option in the submenu and press **OK** again whilst you are on the website that you want to add to the **Speed Dial** list. This way, the **Name** and **Address** fields will be filled automatically according to the website you are visiting. Highlight **OK** and press **OK** to add.

There are various ways to search or visit websites using the web browser:

- Type in the address of a website (URL) into the search/address box and highlight the **Enter** button on the virtual keyboard and press the **OK** button on the remote to visit the site.
- Type in keyword/s into the search/address box and highlight the **Enter** button on the virtual keyboard and press the **OK** button on the remote to start a search for the related websites.

Highlight a Speed Dial thumbnail and press the **OK** button to visit the related website.

Your TV is compatible with USB mice. Plug your mouse or wireless mouse adaptor into the USB input of your TV for easier and quicker navigation.

Some web pages include flash content. These are not supported by the browser.

Your TV does not support any download processes from the Internet via the browser.

All sites on the Internet might not be supported. Depending on the site, content issues may occur. In some circumstances, video content may not play.

## 11.5 HbbTV System

HbbTV (Hybrid Broadcast Broadband TV) is a new industry standard that seamlessly combines TV services delivered via broadcast with services delivered via broadband and also enables access to Internet only services for consumers using connected TVs and set-top boxes. Services delivered through HbbTV include traditional broadcast TV channels, catch-up services, video-on-demand, electronic programme guide, interactive advertising, personalisation, voting, games, social networking and other multimedia applications.

## 12 Alexa Ready (HD/FHD)

Alexa is Amazon's cloud-based voice service available on many devices. Your TV is compatible with and ready to be utilized with Alexa devices.

### Works With Alexa

By means of the Works With Alexa feature you can control the functions of your TV with Alexa devices. In order to do this, the setup process should be completed. The setup can be carried out by using the **Works With Alexa** option in the **Settings>System>Voice Assistant** menu.



## Setup process

The wizard will guide you through the setup process.

- On the first screen you will be informed about the feature. Highlight Start and press **OK** to proceed.
- An authentication code will be created and displayed on the screen. Use your computer or any other device with internet access to go to the internet address (URL) shown on the screen. You will be directed to a page where you can sign in to your Amazon account first, if you are not already signed in. Then you will be directed to a page where you can enter the authentication code you see on the TV and link your TV to your Amazon account.
- If the linking process was successful you will be asked to determine a name for your TV, called 'Friendly Name'(**FN**). A 'Friendly Name' is a name that reminds you of your TV, such as 'Living Room TV', 'Kitchen TV', 'Dining Room TV', etc. Choose an easy-to-say name. You will say this name to tell Alexa which TV to control. When you are done, highlight **OK** and press **OK**.

Examples about the use of the feature will be displayed on the next screen. Press **OK** to finish the setup.

Once the setup is complete, you will be able to control the functions of your TV with Alexa.

**Note:** Make sure that the devices are connected to the internet.

## Example Commands

Here are some voice commands that you can use:

Command	Function
Alexa, turn on 'FN'	Powers on the TV
Alexa, turn off 'FN'	Powers off the TV
Alexa, play 'FN'	Starts media playback
Alexa, pause 'FN'	Pauses media playback
Alexa, resume 'FN'	Resumes media playback
Alexa, stop 'FN'	Stops media playback
Alexa, fast forward on 'FN'	Advances media in fast forward mode
Alexa, rewind on 'FN'	Rewinds media
Alexa, set the volume of 'FN' to 50	Sets the volume to the specified level
Alexa, turn the volume up on 'FN'	Increases volume by 10 units
Alexa, turn the volume down on 'FN'	Decreases volume by 10 units
Alexa, mute 'FN'	Mutes sound
Alexa, unmute 'FN'	Unmutes sound

Alexa, change the input to "input_name" on 'FN'	The TV switches to the input source with the specified name (e.g., HDMI 1)
Alexa, change channel to "channel_number" on 'FN'	The TV switches to the channel with the specified number (e.g., channel 200)
Alexa, change channel to "channel_name" on 'FN'	The TV switches to the channel with the specified name
Alexa, channel up on 'FN'	The TV switches to the next higher channel, if any available
Alexa, channel down on 'FN'	The TV switches to the next lower channel, if any available
Alexa, next channel on 'FN'	The TV switches to the next channel on the channel list

**FN** is the abbreviation for 'Friendly Name'.

## 13 Google Assistant

Your TV works with Google Home for voice control of your connected devices and appliances.

### Works With Google Home

By means of this feature you can control the functions of your TV with Google Assistant devices. In order to do this, the setup process should be completed.

Before the setup

- Complete the following procedures before you start the setup on your TV.
- Install the Google Home application on your mobile phone and login to your account
- Add the assistant device to your account
- Select the **Vsmart** TV action from the list of actions within the application
- A screen will be displayed where you will enter the authentication code which will be created during the setup process on your TV in order to link your TV to your account. Continue with the setup on your TV to get the authentication code

### Setup process

The setup can be carried out by using the **Google Assistant** option in the **Settings>System>Voice Assistant** menu. The wizard will guide you through the setup process.

- On the first screen highlight Start and press OK to proceed
- You will be asked to determine a name for your TV on the next screen, called 'Friendly Name' (**FN**). A 'Friendly Name' is a name that reminds you of your TV, such as 'Living Room TV', 'Kitchen TV', 'Dining Room TV', etc. Choose an easy-to-say name. When you are done, highlight **OK** and press **OK**

- An authentication code will be created and displayed on the screen. Enter the code you see on the TV on the Google Home application

Once the setup is complete, you will be able to control the functions of your TV with Google Assistant.

**Note:** Make sure that the devices are connected to the internet. You can link only one TV to your account.

### Example Commands

Just say "Hey Google" or "Ok Google" to control your TV using just your voice.

Command	Function
turn on 'FN'	Powers on the TV
turn off 'FN'	Powers off the TV
pause on 'FN'	Pauses media playback
resume on 'FN'	Resumes media playback
stop on 'FN'	Stops media playback
volume up on 'FN'	Increases volume
volume down on 'FN'	Decreases volume
set mute volume on 'FN'	Mutes sound
switch input to "input_name" on 'FN'	The TV switches to the input source with the specified name (e.g. HDMI 1)
switch to "input_name" on 'FN'	
change channel to "channel_number" on 'FN'	The TV switches to the channel with the specified number (e.g. channel 200)
change channel to "channel_name" on 'FN'	The TV switches to the channel with the specified name
channel up on 'FN'	The TV switches to the next higher channel, if any available
channel down on 'FN'	The TV switches to the next lower channel, if any available

**FN** is the abbreviation for 'Friendly Name'.

Google is a trademark of Google LLC.

## 14 Troubleshooting

No power	Check if the AC power cord of your TV is plugged in or not. If there is still no power, please disconnect the plug and reconnect to the socket after 60 seconds. Turn the power back on.
No picture	Check if the antenna cable at the back is connected properly. View other channels to see if the problem still occurs.
Video appears with no audio	Try to increase the volume. Check if the TV's sound is on mute or not.
Remote doesn't work	Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct or try using new batteries with the remote control. The TV will go into Standby mode if it receives no response within a few minutes.
Problems are unresolved	Unplug the power cable and wait for 30 seconds, then reconnect power cable to the socket. If the problems still exist, do not attempt to repair the TV by yourself. Kindly contact the service center.

## 15 Technical specifications

	32HT2S35	40FT2S35	43FT2S35	50UT4S35	55UT4S35
Operating Voltage	220-240V AC, 50/60Hz	220-240V AC, 50/60Hz	220-240V AC, 50/60Hz	220-240V AC, 50/60Hz	220-240V AC, 50/60Hz
Audio Output Power	2x6	2x8	2x8	2x10	2x10
Power Consumption (W)	60	75	75	135	140
Networked Standby Power Consumption (W)	<0,5	<0,5	<0,5	<0,5	<0,5
Net Weight (Kg)	3.97	6	6.75	9.75	12.8
Gross weight (kg)	5.57	8.75	9.75	13.5	17.7
TV Dimensions LxWxH (with stand) (mm)	728 x 167 x 467	902 x 87 x 517	965 x 87 x 561	1120 x 87 x 648	1233 x 87 x 712
TV Dimensions LxWxH (without stand) (mm)	728 x 76 x 430	902 x 167 x 553	965 x 258 x 598	1120 x 258 x 685	1233 x 258 x 749
Display	32"/80 cm	40"/100 cm	43"/108 cm	50"/126 cm	55"/139 cm
Screen resolution	1366x768	1920x1080	1920x1080	3840x2160	3840x2160

### 15.1 Restrictions

Intended for indoor use only.

## 15.2 Licenses

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Youtube is a trademark of Google LLC. Netflix is a registered trademark of Netflix, Inc. Netflix streaming membership required. Apple TV is a trademark of Apple Inc., registered in the U.S. and other countries and regions. Wi-Fi is a registered trademark of Wi-Fi Alliance®. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered marks of HDMI Licensing Administrator, Inc. in the United States and other countries. Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright 2012-2025 Dolby Laboratories. All rights reserved. Disney+ subscription required, see terms at <https://www.disneyplus.com>. ©2025 Disney and its related entities. ©2025 Amazon.com, Inc. or its affiliates. Amazon, Prime Video, and all related marks are trademarks of Amazon.com, Inc. or its affiliates. Amazon Prime membership or Prime Video fees apply. See [primevideo.com/terms](https://primevideo.com/terms) for details.

Voice, Search, and Personalized Recommendations ('Powered by TiVo Functionality') is only available when you are connected to the internet, on compatible devices, and in certain countries where consent to its installation is needed, or your Smart TV will not provide the Powered by TiVo Functionality. Please see [tivo.com](https://tivo.com) for more info and any updates. ©2025 Xperi Inc. All Rights Reserved. TiVo and the TiVo logo are trademark(s) or registered trademark(s) of Xperi Inc. or its subsidiaries in the United States and other countries. All other trademarks and content are the property of their respective owners.

© THOMSON, and the THOMSON logo are trademarks used by StreamView GmbH, Franz-Josefs-Kai 1, 1010 Vienna, Austria – further information at [www.thomson-brand.com](https://www.thomson-brand.com), [contact@streamview.com](mailto:contact@streamview.com).