

- Unzip the file and copy the 4 files to an empty USB stick. Make sure your USB stick is formatted to FAT32 format!

 burnInfo_20240516_210530.json	16-5-2024 15:00	JSON-bestand	1 kB
 MSD3463_MD5	16-5-2024 15:05	Tekstdocument	1 kB
 MSD3663_S_SY7711_35.bin	16-5-2024 15:05	BIN-bestand	5.196 kB
 Software_info	16-5-2024 15:00	Tekstdocument	1 kB

- After you have copied the files , switch ON your TV and after booting up, insert the USB stick with SW files into one of the USB ports located on the back of your TV.
- Press the Menu button on your remote control and go to the last folder on the right side called Setup



- Navigate down to the Software update (USB) option and confirm your choice with OK button on your remote control.
- Follow the instruction on your screen to complete the installation.

Please NOTE; for 32" Easy TV models SN;10123223000001~10123223007260 please install ST3151A07-2 SW version. All other SN install V320BJ8_Q01_C1 SW version!!!